

# INSTRUCTION MANUAL

## AC/DC POWER SOURCE

**ASR SERIES**  
**ASR202-401G**  
**ASR302-401G**  
**ASR402-401G**



## ■ About Brands and Trademarks

“TEXIO” is the product brand name of our industrial electronic devices. All company names and product names mentioned in this manual are the trademark or the registered trademark of each company or group in each country and region.

## ■ About the Instruction Manual

The latest version of the instruction manual is posted on our website (<https://www.texio.co.jp/download/>).

In order to be environmentally friendly and reduce waste, we are gradually discontinuing the use of paper or CD manuals that come with our products. Even if there is a description in the instruction manual that the product is included, it may not be included.

## ■ About firmware version

This user manual is required firmware version 1.32 or higher.

# CONTENTS

<b>USING THE PRODUCT SAFELY .....</b>	<b>I</b>
<b>1. GETTING STARTED .....</b>	<b>1</b>
1-1. ASR Series Overview .....	1
1-1-1. Series lineup .....	1
1-1-2. Operating Area .....	2
1-1-3. Main Features .....	5
1-1-4. Accessories .....	6
1-2. Appearance .....	7
1-2-1. Front Panel .....	7
1-2-2. Rear Panel .....	12
1-2-3. Status Bar Icons .....	15
1-3. Theory of Operation .....	16
1-3-1. Glossary .....	16
1-3-2. Alarms .....	18
1-3-3. Considerations .....	21
1-3-4. Grounding .....	23
<b>2. OPERATION .....</b>	<b>24</b>
2-1. Set Up .....	24
2-1-1. Power Up .....	24
2-1-2. How to Use the Instrument .....	25
2-1-3. Output Terminals .....	28
2-1-4. Using the Rack Mount Kit .....	32
2-1-5. Reset to Factory Default Settings .....	33
2-1-6. View Firmware Version and Serial Number .....	34
2-1-7. USB Driver Installation .....	35
2-1-8. Air filter Installation .....	37
2-1-9. Wire Gauge Considerations .....	39
2-2. Menu Tree .....	40

2-2-1. Main Page.....	41
2-2-2. Function Keys .....	42
2-2-3. Menu .....	44
<b>3. Basic Operation .....</b>	<b>45</b>
3-1. Basic setting .....	45
3-1-1. Select the Output Mode .....	45
3-1-2. Select the Voltage Range .....	47
3-1-3. Select the Output Waveform .....	48
3-1-4. Setting the Output Voltage Limit .....	50
3-1-5. Setting the Output AC/DC Voltage & Gain.....	52
3-1-6. Setting the Frequency Limit .....	56
3-1-7. Setting the Output Frequency & Signal.....	59
3-1-8. Setting the Peak Current Limit .....	61
3-1-9. Setting the Output Current Level .....	63
3-1-10. Setting the Output On Phase .....	65
3-1-11. Setting the Output Off Phase .....	67
3-1-12. Setting the Sync Phase.....	69
3-1-13. Switch the Display Modes .....	72
3-1-14. Using the Measurement Function .....	75
3-1-15. Switch the Measurement Format .....	77
3-1-16. Panel Lock .....	79
3-1-17. Alarm Clear .....	80
3-1-18. Turning the Output On/Off.....	81
3-2. Advanced Settings .....	82
3-2-1. Using the Remote Sense Function.....	82
3-2-2. Preset Settings .....	85
3-2-3. External Keypad Operation .....	90
<b>4. EXTERNAL CONTROL .....</b>	<b>91</b>
4-1. Using External Control I/O .....	91
4-2. Using External Signal Input Function.....	93



4-2-1.	EXT GAIN - AC+DC-EXT and AC-EXT mode.....	93
4-2-2.	EXT ADD - AC+DC-ADD and AC-ADD mode.....	94
4-2-3.	EXT Sync - AC+DC-Sync and AC-Sync mode.....	94
4-2-4.	EXT Voltage - AC-VCA mode.....	95
4-3.	Arbitrary Waveform .....	96
4-3-1.	Compiling Arbitrary Waveform Input.....	96
4-3-2.	Manage Arbitrary Waveform Settings.....	103
4-3-3.	Edit Arbitrary Waveform.....	106
<b>5.</b>	<b>MISCELLANEOUS.....</b>	<b>111</b>
5-1.	T Ipeak, hold.....	111
5-2.	IPK CLR .....	112
5-3.	Power ON.....	113
5-4.	Buzzer.....	114
5-5.	Remote Sense .....	115
5-6.	Slew Rate Mode.....	117
5-7.	Output Relay .....	119
5-8.	THD Format.....	120
5-9.	External Control I/O .....	122
5-10.	V Unit.....	123
5-11.	ACin Detection.....	124
5-12.	Trigger Out Width .....	126
5-13.	Data Average Count .....	129
5-14.	Data Update Rate .....	131
<b>6.</b>	<b>TEST MODE FUNCTION.....</b>	<b>133</b>
6-1.	Sequence Mode .....	133
6-1-1.	Sequence Mode Overview.....	133
6-1-2.	Sequence Settings.....	139
6-1-3.	Save a Sequence to Local Memory.....	143
6-1-4.	Recall a Sequence from Local Memory.....	143
6-1-5.	Manage Sequence Settings .....	144
6-1-6.	Running a Sequence .....	148
6-2.	Simulate Mode .....	149
6-2-1.	Simulate Mode Overview.....	149

6-2-2.	Simulate Settings .....	153
6-2-3.	Save a Simulation to Local Memory .....	156
6-2-4.	Recall a Simulation from Local Memory .....	156
6-2-5.	Manage Simulation Settings .....	157
6-2-6.	Running a Simulation.....	160
<b>7.</b>	<b>COMMUNICATION INTERFACE .....</b>	<b>161</b>
7-1.	Interface Configuration .....	161
7-1-1.	Configure Ethernet Connection .....	161
7-1-2.	USB Remote Interface.....	163
7-1-3.	USB Remote Control Function Check .....	164
7-1-4.	RS-232C Remote Interface .....	165
7-1-5.	RS-232C Remote Control Function Check.....	166
7-1-6.	Using Realterm to Establish a Remote Connection ....	167
7-1-7.	GP-IB Remote Interface .....	170
7-1-8.	GP-IB Function Check .....	171
7-1-9.	Web Server Remote Control Function Check .....	174
7-1-10.	Socket Server Function Check .....	176
<b>8.</b>	<b>FAQ .....</b>	<b>181</b>
<b>9.</b>	<b>APPENDIX .....</b>	<b>182</b>
9-1.	Firmware Update .....	182
9-2.	Factory Default Settings .....	184
9-3.	Error Messages & Messages .....	188
9-4.	Specifications .....	195
9-4-1.	Electrical specifications.....	195
9-4-2.	General Specifications.....	200
9-4-3.	Others .....	201
9-4-4.	External Signal Input (AC+DC-EXT, AC-EXT Mode) ..	202
9-4-5.	External Signal Input (AC+DC-ADD, AC-ADD Mode) .	202
9-4-6.	External Synchronous Signal or Line (AC+DC-SYNC, AC-SYNC) .....	203
9-5.	ASR Dimensions .....	204




# USING THE PRODUCT SAFELY

## ■ Preface

To use the product safely, read instruction manual to the end. Before using this product, understand how to correctly use it. If you read the manuals but you do not understand how to use it, ask us or your local dealer. After you read the manuals, save it so that you can read it anytime as required.

## ■ Pictorial indication

The manuals and product show the warning and caution items required to safely use the product. The following pictorial indication is provided.

Pictorial indication	
	Some part of this product or the manuals may show this pictorial indication. In this case, if the product is incorrectly used in that part, a serious danger may be brought about on the user's body or the product. To use the part with this pictorial indication, be sure to refer to the manuals.
	If you use the product, ignoring this indication, you may get killed or seriously injured. This indication shows that the warning item to avoid the danger is provided.
	If you incorrectly use the product, ignoring this indication, you may get slightly injured or the product may be damaged. This indication shows that the caution item to avoid the danger is provided.

Please be informed that we are not responsible for any damages to the user or to the third person, arising from malfunctions or other failures due to wrong use of the product or incorrect operation, except such responsibility for damages as required by law.

---

---

## USING THE PRODUCT SAFELY

---

---



### ■ Do not remove the product's covers and panels

Never remove the product's covers and panels for any purpose. Otherwise, the user's electric shock or fire may be incurred.

### ■ Warning on using the product

Warning items given below are to avoid danger to user's body and life and avoid the damage or deterioration of the product. Use the product, observing the following warning and caution items.

### ■ Warning items on power supply

#### ● Power supply voltage

The rated power supply voltages of the product are 200VAC to 240VAC. The rated power supply voltage for each product should be confirmed by reading the label attached on the back of the product or by the "rated" column shown in the instruction manual.

#### ● Power cord

**(IMPORTANT) The attached power cord set can be used for this device only.**

If the attached power cord is damaged, stop using the product and call us or your local dealer. If the power cord is used without the damage being removed, an electric shock or fire may be caused.

#### ● Protective fuse

If an input protective fuse is blown, the product does not operate. For a product with external fuse holder, the fuse may be replaced. As for how to replace the fuse, refer to the corresponding chapter in the instruction manual. If no fuse replacement procedures are indicated, the user is not permitted to replace it. In such case, keep the case closed and consult us or your local dealer. If the fuse is incorrectly replaced, a fire may occur.

---

---

## USING THE PRODUCT SAFELY

---

---

### ■ Warning item on Grounding

If the product has the GND terminal on the front or rear panel surface, be sure to ground the product to safely use it.

### ■ Warnings on Installation environment

#### ● Operating temperature and humidity

Use the product within the operating temperature indicated in the “rating” temperature column. If the product is used with the vents of the product blocked or in high ambient temperatures, a fire may occur. Use the product within the operating humidity indicated in the “rating” humidity column. Watch out for condensation by a sharp humidity change such as transfer to a room with a different humidity. Also, do not operate the product with wet hands. Otherwise, an electric shock or fire may occur.

#### ● Use in gas

Use in and around a place where an inflammable or explosive gas or steam is generated or stored may result in an explosion and fire. Do not operate the product in such an environment. Also, use in and around a place where a corrosive gas is generated or spreading causes a serious damage to the product. Do not operate the product in such an environment.

#### ● Installation place

Do not insert metal and inflammable materials into the product from its vent and spill water on it. Otherwise, electric shock or fire may occur.

### ■ Do not let foreign matter in

Do not insert metal and inflammable materials into the product from its vent and spill water on it. Otherwise, electric shock or fire may occur.

### ■ Warning item on abnormality while in use

If smoke or fire is generated from the product while in use, stop using the product, turn off the switch, and remove the power cord plug from the outlet. After confirming that no other devices catch fire, ask us or your local dealer.

---

---

## USING THE PRODUCT SAFELY

---

---

### ■ Input / Output terminals

Maximum input to terminal is specified to prevent the product from being damaged. Do not supply input, exceeding the specifications that are indicated in the "Rating" column in the instruction manual of the product. Also, do not supply power to the output terminals from the outside. Otherwise, a product failure is caused.

### ■ Calibration

Although the performance and specifications of the product are checked under strict quality control during shipment from the factory, they may be deviated more or less by deterioration of parts due to their aging or others.

It is recommended to periodically calibrate the product so that it is used with its performance and specifications stable. For consultation about the product calibration, ask us or your local dealer.

### ■ Daily Maintenance

When you clean off the dirt of the product covers, panels, and knobs, avoid solvents such as thinner and benzene. Otherwise, the paint may peel off or resin surface may be affected. To wipe off the covers, panels, and knobs, use a soft cloth with neutral detergent in it.

During cleaning, be careful that water, detergents, or other foreign matters do not get into the product.

If a liquid or metal gets into the product, an electric shock and fire are caused. During cleaning, remove the power cord plug from the outlet.

Use the product correctly and safely, observing the above warning and caution items. Because the instruction manual indicates caution items even in individual items, observe those caution items to correctly use the product.

If you have questions or comments about the manuals, ask us or E-Mail us.

# 1. GETTING STARTED

This chapter describes the ASR series power supply in a nutshell, including its main features and front / rear panel introduction.





## 1-1. ASR Series Overview

### 1-1-1. Series lineup

The ASR series consists of 4 models, the ASR202-401G, ASR302-401G, and ASR302-401G, differing only in capacity and interface. Note that throughout the user manual, the term “ASR” refers to any of the models, unless stated otherwise.


Model Name	Power Rating	Max. Output Current	Max. Output Voltage	Interface
ASR202-401G	2000 VA	20A(100V) 10A(200V)	400 Vrms $\pm 570$ Vdc	USB LAN GP-IB RS-232C
ASR302-401G	3000 VA	30A(100V) 15A(200V)	400 Vrms $\pm 570$ Vdc	USB LAN GP-IB RS-232C
ASR402-401G	4000 VA	40A(100V) 20A(200V)	400 Vrms $\pm 570$ Vdc	USB LAN GP-IB RS-232C

## 1-1-2. Operating Area

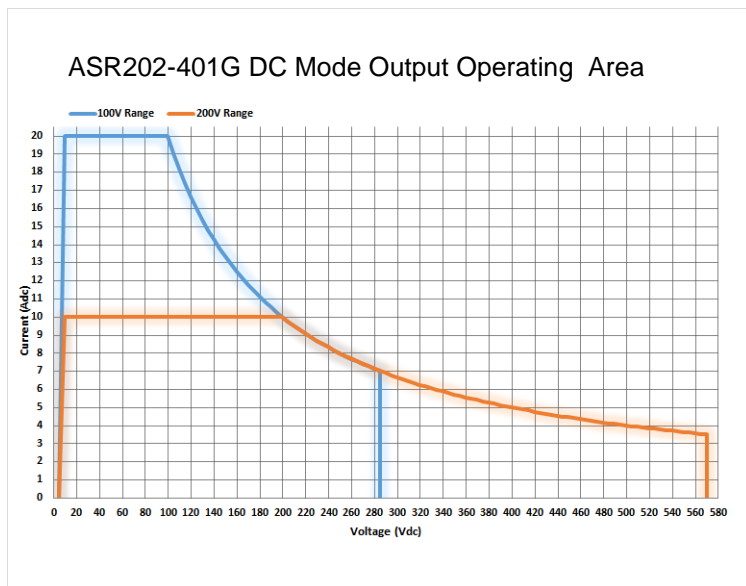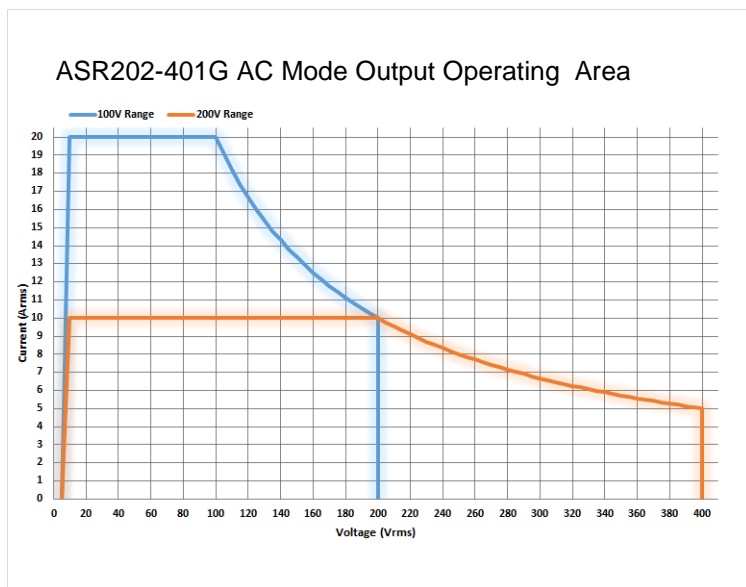





### ASR302-401G AC Mode Output Operating Area

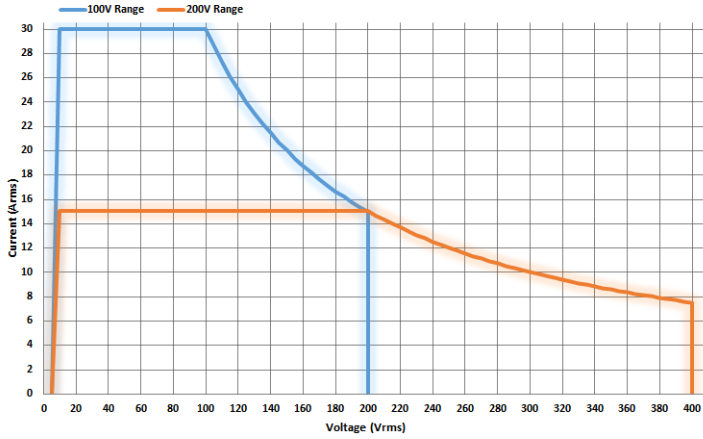


### ASR302-401G DC Mode Output Operating Area

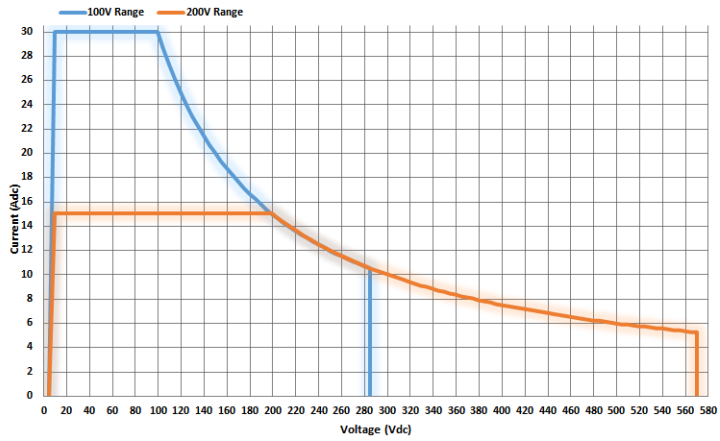

## ASR402-401G AC Mode Output Operating Area

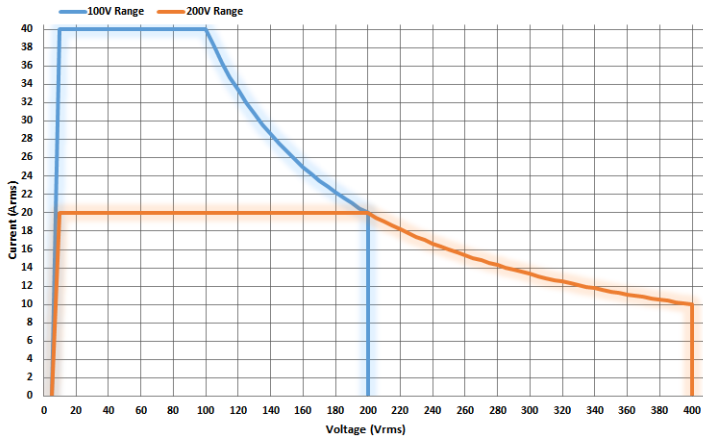

## ASR402-401G DC Mode Output Operating Area

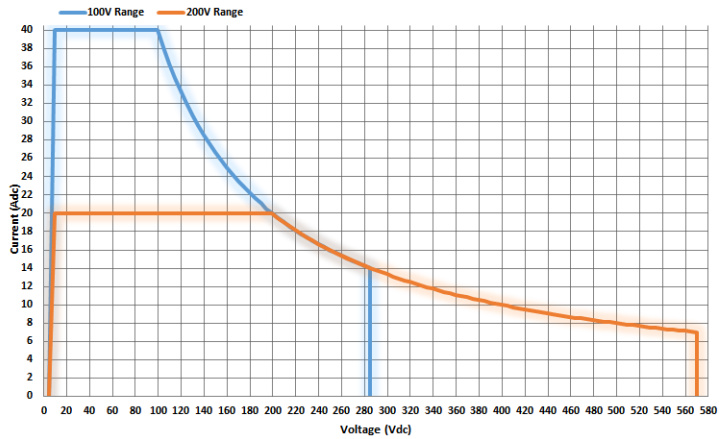

## 1-1-3. Main Features

---

Performance	<ul style="list-style-type: none"><li>• Maximum AC output voltage is 400 Vrms</li><li>• Maximum DC output voltage is <math>\pm 570</math> Vdc</li><li>• Maximum output frequency is 999.9 Hz in AC mode</li><li>• Supported AC+DC waveform application</li><li>• DC full capacity output ability</li><li>• Output voltage total harmonic distortion is less than 0.5% at all frequency</li><li>• Crest factor reached 6 times high</li></ul>
Features	<ul style="list-style-type: none"><li>• Include sine, square, triangle, arbitrary and DC output waveforms</li><li>• Variable voltage, frequency and current limiter</li><li>• Harmonic voltage and current analysis ability</li><li>• Excellent and feature-rich measurement capacity</li><li>• Sequence and simulate function</li><li>• External input amplification</li><li>• AC line synchronized output</li><li>• Preset memory function</li><li>• USB memory support</li><li>• Remote sense</li><li>• OCP, OPP and OTP protection function</li></ul>
Interface	<ul style="list-style-type: none"><li>• Built-in LAN, USB host, USB device, RS-232C and GP-IB interface</li><li>• External control I/O</li><li>• External signal input</li></ul>


## 1-1-4. Accessories

Before using the ASR power source unit, check the package contents to make sure all the standard accessories are included.

Standard Accessories	Part number	Description
	Region dependent	Power cord
	62SR-3K0SC101 x 1	Mains terminal cover set
	62SR-3K0SC201 x 1	Remote sensing cover set
	GRA-442-E	Rack mount adapter (EIA)
	GTL-246	USB CABLE (USB 2.0 Type A- Type B Cable, Approx. 1.2M)
Optional Accessories	Part number	Description
	GRA-442-J	Rack mount adapter (JIS)
	GTL-137	Output power wire (Load wire_10AWG: 50A, 600V) (Sense wire_16AWG: 20A, 600V)
	GTL-232	RS-232C cable, approx. 2M
	CB-2420P	An approximately 2M in length GP-IB Cable
	ASR-008	Air filter
Download	Name	Description
	Texio_cdc_*.inf	USB driver(Win7)






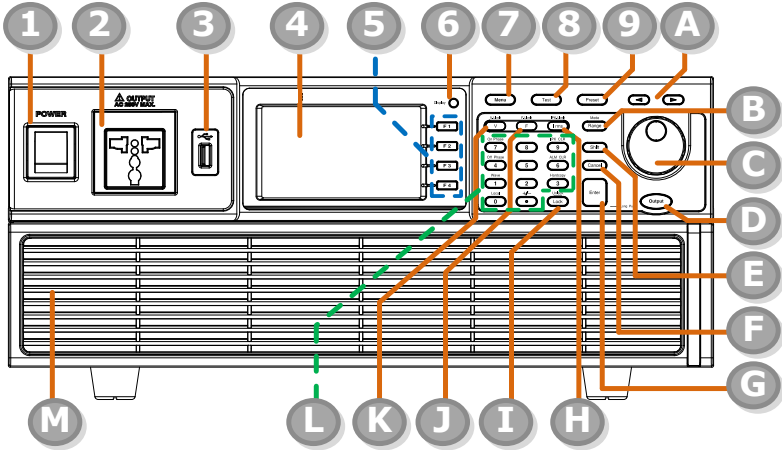

## 1-2. Appearance




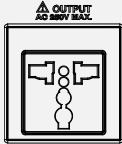






### 1-2-1. Front Panel















Item Index	Description
1	Power switch button
2	Output Socket
3	USB interface connector (A Type)
4	LCD screen
5	Function keys (blue zone)
6	Display mode select key
7	Menu key
8	Test key
9	Preset key
A	Arrow keys
B	Range key/Output mode key
C	Scroll wheel
D	Output key
E	Shift key
F	Cancel key
G	Enter key
H	Irms/IPK-Limit button
I	Lock/Unlock button













J	F/F-Limit button
K	V/V-Limit button
L	Numerical Keypad with additional “Shift + key” shortcut functions (green zone)
M	Air inlet

Item	Description
Power Switch	 Turn on the mains power
Output Socket	 Output voltage socket in front panel. To use the front output socket, there are restrictions on the output mode and range. See page 28 for details.
USB A Port	 The USB port is used for data transfers and upgrading software. Also, it is available for screenshot hardcopy in association with the Hardcopy key.
	 <b>Note</b> It supports FAT32 format with maximum 32G storage only.
LCD Screen	Displays the setting and measured values or menu system
Function Keys	 Assigned to the functions displayed on the right side of the screen.
Display Mode Select Key	 Selects between standard, simple and harmonic analysis mode.
Menu Key	 Enters the Main menu or goes back to one of the display modes.


Test Key		Puts the instrument into the Sequence and Simulation control mode.
Preset Key		Puts the instrument into Preset mode.
Arrow Keys		The arrow keys are used to select the digit power of a value that is being edited.
Range Key		Switches between the 100V, 200V and AUTO ranges
Output Mode	 + 	Selects between the AC+DC-INT, AC-INT, DC-INT, AC+DC-EXT, AC-EXT, AC+DC-ADD, AC-ADD, AC+DC-Sync and AC-Sync modes.
Scroll Wheel		Used to navigate menu items or for increment/decrement values one step at a time.
Output Key		Turns the output on or off.
Shift Key		Turns on the shift state, which enables shortcut operations with an icon <b>Shift</b> indicated on the top status bar. The shift state, which allows continuous shortcut operations, is kept until another press on shift key again.
 Note		When performing shortcut operations, press shift key followed by another shortcut function key. Do Not press both shift key and shortcut function key simultaneously.

Cancel Key		Used to cancel function setting menus or dialogs.
Enter Key		Confirms selections and settings.
I rms		Used for setting the maximum output current.
IPK-Limit		Used to set the peak output current limit value.
Lock/Unlock Key		Used to lock or unlock the front panel keys except output key. Simply press to lock, whilst long press to unlock.
F		Used for setting the output frequency (DC mode N/A).
F-Limit		Used for setting the output frequency limit value (DC mode N/A).
V		Used for setting the output voltage.
V-Limit		Used for setting the output voltage limit value.
Keypad		Used to input power of a value directly. The  key is used to input decimal / plus or minus.
On Phase		Sets the on phase for the output voltage.











Off Phase	 + Off Phase 	Sets the off phase for the output voltage.
Output Waveform	 + Wave 	Selects between the Sine, Square, Triangle and ARB 1~16 waveforms (not available for DC-INT, AC+DC-EXT and AC-EXT).
Local Mode	 + Local 	Switches operation back to local mode from remote mode.
IPK CLR	 + IPK CLR 	Used to clear peak output current value.
ALM CLR	 + ALM CLR 	Clears alarms.
Hardcopy Key	 + Hardcopy 	Used to take a screenshot. Make sure an USB flash disk is well inserted before the action.
Air Inlet		Air inlet for cooling the inside of the ASR-3000 series.
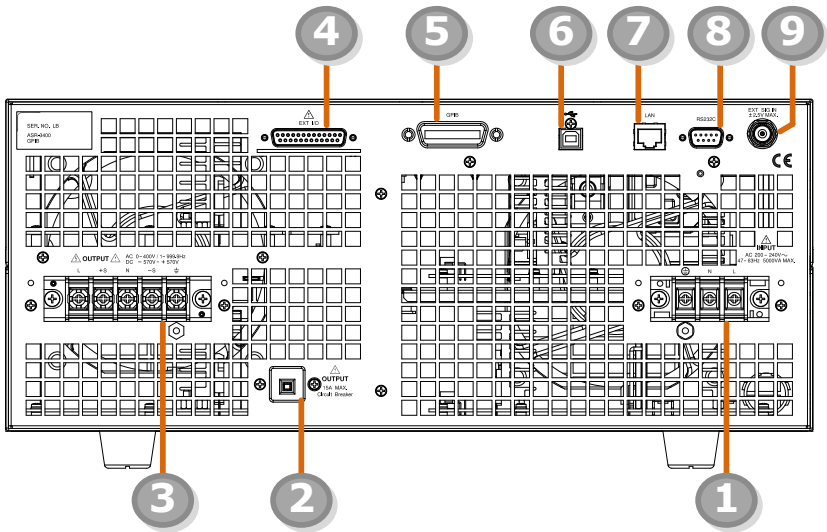
## 1-2-2. Rear Panel



Item Index	Description
1	Line input terminal
2	Front panel output socket circuit breaker
3	Output terminal with remote sensing input terminal
4	External I/O connector
5	GPIB connector
6	USB interface connector (B Type)
7	Ethernet (LAN) connector
8	RS232 connector
9	External signal input/ External synchronized signal input

Item	Description	
AC Power Input terminal		AC inlet (M4 screw type, 8 ~ 22 AWG)
Circuit Breaker		When front panel output socket output current reaches 15A, the circuit breaker will be activated automatically to cut off output. Press the button to reset the function.
Output Terminal with Remote Sensing Input terminal		L, N, $\frac{\oplus}{\ominus}$ : Output voltage terminal (M4 screw type, 8 ~ 22 AWG) +S, -S: Remote sensing input terminal is for compensation of load wire voltage drop.
External Control I/O Connector		Used to control ASR-3000 externally by using the logic signal and monitor Sequence function status.
GPIB Connector		The GPIB connector for controlling the ASR-3000 remotely.
USB		USB port for controlling the ASR-3000 remotely.
Ethernet Port		The Ethernet port is used for remote control.
RS232C Connector		The RS232C connector for controlling the ASR-3000 remotely.

External Signal  
Input Connector



Synchronizing the output frequency with this external input signal for SYNC or outputting the amplified external signal with this external input signal for EXT and ADD.

### 1-2-3. Status Bar Icons



Indicates if the output is ON or OFF.



Indicates the output power as a percentage of full scale.



Indicates if the output range is 100V, 200V or AUTO.



Indicates if the output waveform is Sine, Square, Triangle or ARB 1 - 16.



The alarm icon will appear on the status bar when one of the protection functions is tripped.



Indicates the shift key is pressed which enables shortcut operations with each key.



Indicates that the ASR is under remote mode.



Indicates that the Remote Sense function is active.



Indicates that a USB flash drive is detected in the front panel host port.



Indicates that the LAN interface is activated.



Indicates that the front panel lock is active.

## 1-3. Theory of Operation

The theory of operation chapter describes the basic principles of operation, protection modes and important considerations that must be taken into account before use.

### 1-3-1. Glossary

---

Rate Output Maximum Power Capacity	<p>The maximum value of the output power capacity will be provided consecutively when the following situations exist:</p> <p>Output voltage is 100 to 200 V within the 100 V range.</p> <p>Output voltage is 200 to 400 V within the 200 V range.</p> <p>Output frequency is 40 to 999.9 Hz in AC mode.</p> <p>Output frequency is 1 to 999.9 Hz in AC+DC mode.</p> <p>Output voltage is 100 to 285 V within the 100 V range in DC mode.</p> <p>Output voltage is 200 to 570 V within the 200 V range in DC mode.</p>
Rate Maximum Current	<p>The maximum value of the output current (rms value) will be provided consecutively when the following situations exist:</p> <p>Output voltage is 100 V within the 100 V range.</p> <p>Output voltage is 200 V within the 200 V range.</p> <p>Output frequency is 40 to 999.9 Hz in AC mode.</p> <p>Output frequency is 1 to 999.9 Hz in AC+DC mode.</p> <p>Output voltage is 100 V within the 100 V range in DC mode.</p> <p>Output voltage is 200 V within the 200 V range in DC mode.</p>



Note

The maximum capacity and current in DC mode is equal to AC+ DC and AC mode.

Equation:

$$\text{Rated Max. current} = \frac{\text{Rate power capacity}(VA, W)}{\text{Output voltage}}$$

Maximum Peak Current (AC-INT mode only)

The maximum value of the output current (peak value) will be provided consecutively to a capacitor input-type rectifying load when the following situations exist:

Output voltage is 100 to 200 V within the 100 V range.


Output voltage is 200 to 400 V within the 200 V range.

Output frequency is 40 to 999.9 Hz in AC mode, and 1 to 999.9 Hz in AC+DC mode.



Note

Rated maximum current (rms value) x 6 is equal to maximum peak current

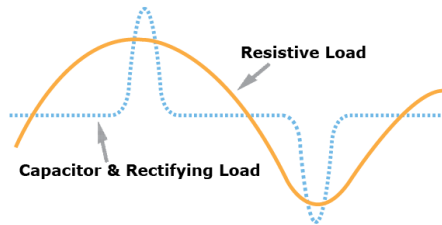

Power Factor (PF)

The power factor, which stands for a ratio of the active power correlated to the apparent power, indicates degradation level within efficiency that results from the phase difference between AC current and AC voltage.

Equation:

$$\text{Power factor} = \frac{\text{Active Power}}{\text{Apparent Power}}$$

Crest Factor (CF)      The crest factor stands for a ratio of the rms value correlated to the peak value (crest value) of the waveform.

Equation:

$$\text{Crest factor} = \frac{\text{Peak value}}{\text{RMS value}}$$



The crest factor is 1.41 of sine wave.

Inrush Current Capacity

It indicates the current, which is able to be supplied to a load, exceeds the rating for a short period and the duration.

Output Power Ratio

It indicates the output power of a percentage where the rated maximum output power is 100%.

## 1-3-2. Alarms

The ASR series have a number of protection features. When one of the protection alarms is tripped, the ALM icon on the display will be lit and the type of alarm that has been tripped will be shown on the display. When an alarm has been tripped the output will be automatically turned off. For details on how to clear an alarm or to set the protection modes, please see page 188.

---

Abnormal Output

This alarm is activated and output will be disabled immediately when output overvoltage or overcurrent is detected.

Abnormal Power Source Block

This alarm is activated and output will be disabled immediately when internal power source abnormality is detected. Beware that all operations will be disabled except for the power shutdown operation if an error occurs.



Abnormal Internal Control	This alarm is activated and output will be disabled immediately when internal control abnormality is detected. Beware that all operations will be disabled except for the power shutdown operation if an error occurs.
V-Limit	Voltage limit protection prevents a high voltage from damaging the DUT. This alarm can be set by the user.
F-Limit	Frequency limit protection prevents a high frequency from damaging the DUT. This alarm can be set by the user.
OCP	Over current protection prevents high current from damaging the DUT.
OTP	Over temperature protection for power stage board. OTP is a hardware protection function. Only when the unit has cooled can the over temperature protection alarms be cleared.
OPP	Over Power protection for power stage board. OPP is a software protection function that is corresponded with VA value. When the unit has loaded less then protection point that the alarm be cleared.
Remote Sense Error	Sense alarm. This alarm will detect if the sense wires have been connected to the wrong polarity.
Power Input Anomaly	AC input failure. This alarm function is activated when a low AC input is detected.
FAN Fail	Fan failure. This alarm function is activated when the fan RPMs drop to an abnormally low level.
PFC Error	This alarm function is activated when insufficient output voltage and over temperature occur in PFC power stage.

DCDC Error	This alarm function is activated when over output voltage or insufficient voltage and over current occur in DCDC power stage. Contact local dealer or TEXIO TECHNOLOGY directly for repair.
DCAC Error	This alarm function is activated when transient output current larger than hardware protection point and over temperature occur in DCAC power stage.

### 1-3-3. Considerations

The following situations should be taken into consideration when using the power supply.


---

**Inrush Current**      When the power supply switch is first turned on, an inrush current is generated. Ensure there is enough power available for the power supply when first turned on, especially if a number of units are turned on at the same time.

---

**Capacitive Load**      When the power supply connects to a capacitive load, e.g., capacitor, the load is being charged consecutively and the larger the voltage change, the more the current grow. Also, the overshoot will be possibly generated within the currents output, therefore leading to output turned off thanks to overcurrent protection from the power supply.


It is suggested to lower down the set voltage output from power supply so that the voltage of capacitive load decreases per certain unit time. In addition, a block diode is necessary to keep current from flowing back to the output terminal of power supply. Refer to the figure below where a block diode connects with the capacitive load in series to efficiently prevent current from flowing back to the power supply.

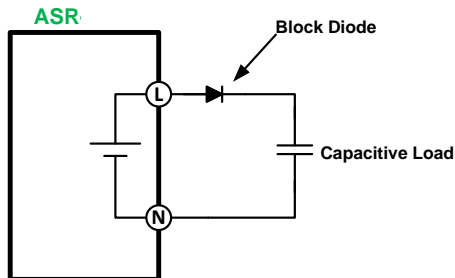

---

## Inductive Load

When the power supply connects to an inductive load, e.g., inductor, which generates a back EMF (Electromotive Force) when output current is accidentally turned off, a backflow diode is necessary for absorbing the back EMF, which may cause irreversible damage to the power supply. Refer to the following figure where a backflow diode connects with the inductive load in parallel to effectively absorb the possible back EMF.

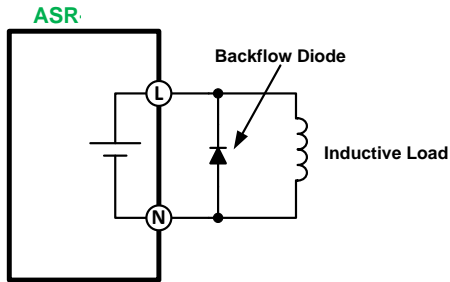

Ensure the connected diode meets the following specifications between the load, either capacitor or inductor, and the ASR series power supplies.

- ✓ Maximum reverse voltage: 600 V or higher
- ✓ Maximum forward current:
  - ASR-3200: 20 A or more for 100V range, and 10 A or more for 200V range
  - ASR-3300: 30 A or more for 100V range, and 15 A or more for 200V range
  - ASR-3400: 40 A or more for 100V range, and 20 A or more for 200V range

## 1-3-4. Grounding

The output terminals of the ASR series are isolated with respect to the protective grounding terminal. The insulation capacity of the load, the load cables and other connected devices must be taken into consideration when connected to the protective ground or when floating.

---


Grounded  
Neutral Output



Basically, grounded return on the neutral output is allowed for ASR series and electric shock may occur if not following the grounding procedure based on the local electrical safety codes. In some cases, 0 V is specifically required between ground and neutral, which can substantially moderate ground loops, thus keeping sensitive equipment from effects of ground loops and reducing ground noise.

---

Ground &  
Neutral Shortcut  
Illustration

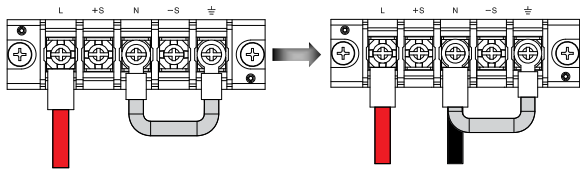

Owing to the fact that the neutral has been shortcut with the ground which is referenced to the chassis ground, few electric shocks may still take place from time to time, for which we sincerely ask your additional attention.

---

## 2. OPERATION

---


### 2-1. Set Up

#### 2-1-1. Power Up


---

Steps


1. Connect the AC power cords to the AC input terminals.

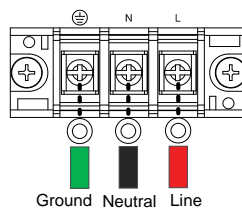


2. Install the power cord cover followed by fastening the two screws to fix the cover.

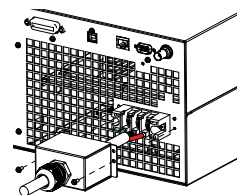

3. The AC power cords are perfectly connected with the AC input terminals.

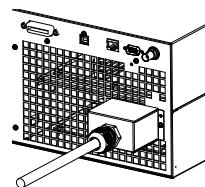

4. Press the *POWER* key. The splash screen will appear momentarily before the continuous mode screen appears with the settings loaded.

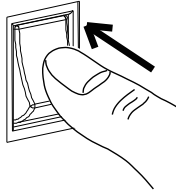

The power supply takes around 20 seconds to fully turn on and shutdown.

Do not turn the power on and off quickly.

## 2-1-2. How to Use the Instrument

---

### Background

The ASR AC power supplies generally use the *scroll wheel*, *Arrow keys* and *Enter* keys to edit numerical values or to select menu options.


Menu navigation is performed using the menu keys and function keys on the front panel.

The following section will explain some of these concepts in detail.

---

### Selecting Menu Items


1. Turn the scroll wheel to select parameters in menus and lists. The selected parameter will be highlighted in orange. The scroll wheel is also used to increment/decrement setting values.
2. Press the *Enter* key to edit the parameter or to enter the selected menu.

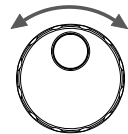

## Example

The following is an example of the menu list that appears when the Menu key is pressed.

### Selected parameter

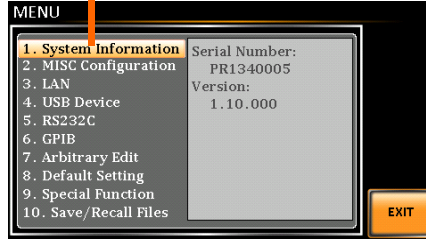



### Using the Arrow Keys and Scroll Wheel to Edit Parameter Values

Use the *Arrow* keys to select a digit power and then use the scroll wheel to edit the value by that power.

1. Use the *Arrow* keys to move the cursor to the digit of the desired value.



2. Turn the scroll wheel to edit the value by the resolution of the selected digit.

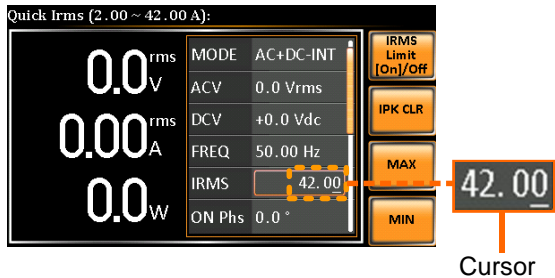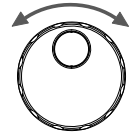



- Repeat the steps above for all the relevant digits.
- Press the *Enter* key to confirm the edit.




By default the cursor starts at the lowest digit of value.

### Using the Function Keys

The function keys are quick settings keys, the function of which depends on the current menu or operation.

- Press the *Function* key that corresponds to the setting directly to its left side.
- The setting or parameter is immediately executed.

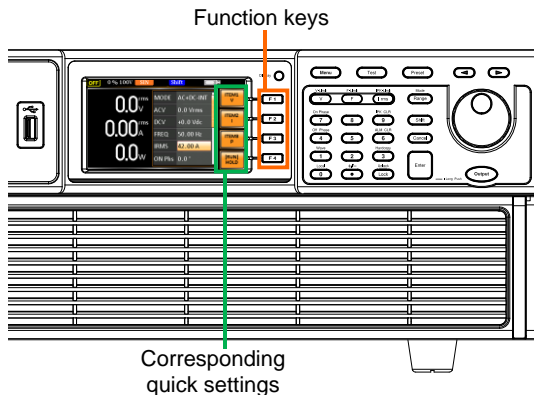

- Repeat the steps above for all the relevant digits.



Using the Numerical Keypad to Edit Parameter Values

Use the *Arrow* keys to select a digit power and the *Numerical keypad* to define a power value.

- Use the *Arrow* keys to move the cursor to the digit of the desired value.



- Press the *Numerical* keys to input the value by the resolution of the selected digit.

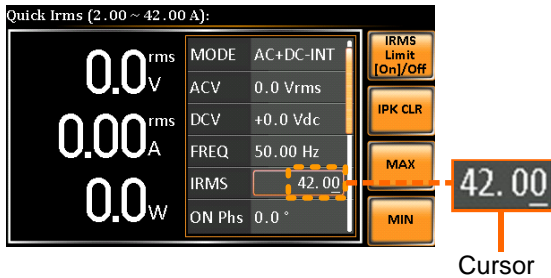

- Repeat the steps above for all the relevant digits.

- Press the *Enter* key to confirm the edit.



Note

By default the cursor starts at the lowest digit of value.

### 2-1-3. Output Terminals

Background

The output terminals can be output from either the front panel or from the rear panel. When DC-INT mode or 200V range is selected, it is Not available to output power from the front panel.



Dangerous voltages. Ensure that the power to the instrument is disabled before handling the power supply output terminals. Failing to do so may lead to electric shock.


---



For the front panel output, the maximum output voltage is 200 VAC and current is 15 A.

#### Front Panel Output Connection

1. The front panel has a multi-region power socket depending on the socket type.
2. Insert the plug from the DUT into the socket.

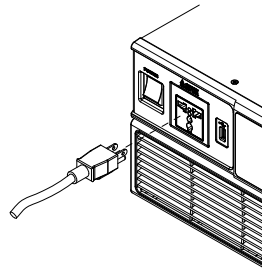

Dangerous voltages. Ensure output is off before unplugging the plug from the front panel socket.

---


3. Turn the power on. The AC power supply is now ready to power the DUT.
- 

#### Rear Panel Output Connection


The rear panel output is used to supply higher power DUTs.

1. Disconnect the unit from the mains power socket and turn the power switch off.


2. Connect the output AC power wires to the AC output terminals.
  - Red → Line (L)
  - Black → Neutral (N)
  - Green → GND ( $\perp$ )

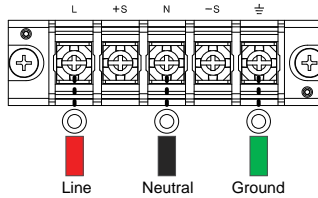

3. Install the output AC power wires cover followed by fastening the two screws to fix the wires cover.

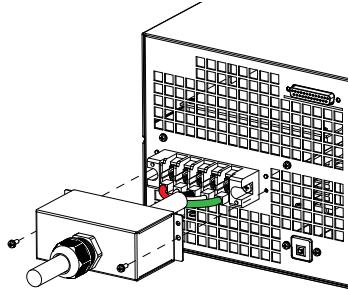

4. The output AC power wires are perfectly connected with the AC output terminals.

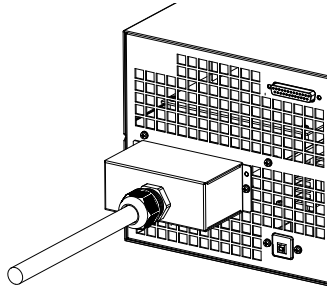

5. Turn the power on. The AC power supply is now ready to power the DUT.



**Grounded Neutral Output:**

ASR allows for a grounded return on the neutral output. It is suit for the medical industry that required between ground with neutral is 0 V essentially.

And possible to mitigate ground loops that is ideal for reduce ground noise and isolate sensitive equipment from the effects of ground loops.



Because the neutral has been referenced to the chassis ground, be careful electric shock by yourself.

## 2-1-4. Using the Rack Mount Kit

### Background


The ASR has the following optional Rack Mount kits, respectively.

Unit Model	Rack Mount kit part number
ASR series	GRA-442-E
	GRA-442-J

The GRA-442-E is designed to fit into an EIA rack of 4U-height, while the GRA-442-J is designed to fit into a JIS rack of 4U-height. Please see your distributor for further rack mount details.


### GRA-442-E Series

#### GRA-442-E Rack Mount Diagram

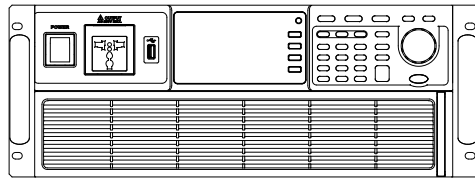

### GRA-442-J Series

#### GRA-442-J Rack Mount Diagram

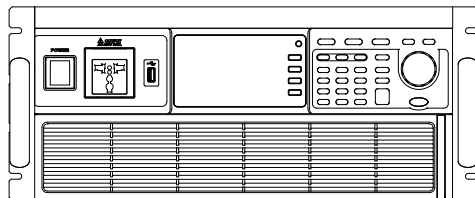


Ensure adequate ventilation is provided when using the rack mount. Ensure that a gap is given for air intakes. Failure to do so may cause the instrument to overheat.


## 2-1-5. Reset to Factory Default Settings

---

**Background** The default settings can be restored from the Menu key settings. See page 184 for the default factory settings.

---

- Steps**
1. Press the *Menu* key. The Menu settings will appear on the display. 
  2. Use the scroll wheel to go to item 8, *Default Setting*.
  3. Press *Enter* for 2 times to restore the unit back to the default settings.

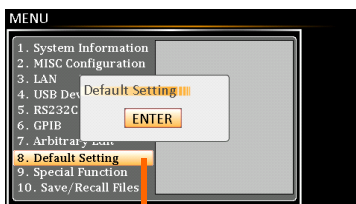



Default settings

## 2-1-6. View Firmware Version and Serial Number


---

**Background** The Menu>System Information setting displays the serial number and firmware version.

---

- Steps**
1. Press the *Menu* key. The Menu setting will appear on the display. 
  2. The system information should now be listed in the item 1, *System Information*, on the display
- Exit**
3. Press *Exit*[F4] to exit from the Menu settings. 

### System Information

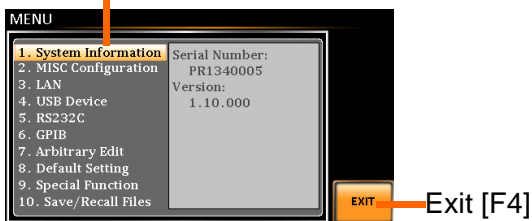



## 2-1-7. USB Driver Installation

---

**Background** If the device is not recognized, you need to install the USB driver.

---



The USB driver, `texio_cdc_*.inf`, can be downloaded from the TEXIO website.

For information on the USB interface, see page 163.

---


**Steps**

1. Connect the rear panel USB -B port on the ASR to the PC using a USB Type A to B cable.


2. Go the Windows Device Manager.

It is available for Windows 7 and Windows 10.


3. The ASR will be located under *Other Devices* in the hardware tree. Right-click the *ASRXXX-XXX* and choose *Update Driver Software*.

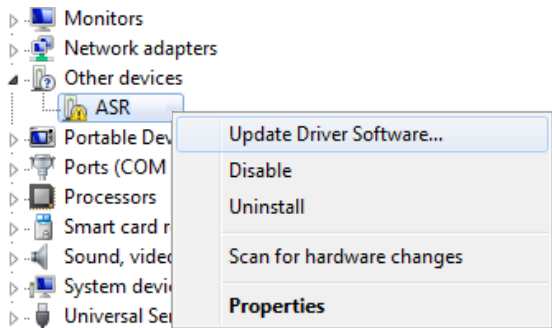


4. From the hardware wizard choose *Browse my computer driver software*.

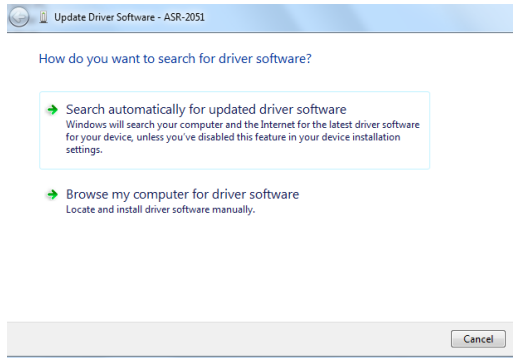

5. Set the file path to the location of the USB driver, click Next and finish the driver installation.

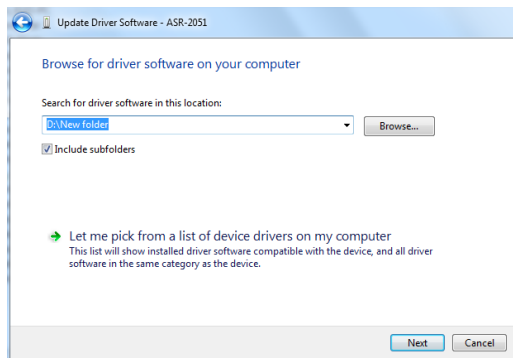

6. ASR will now be located in the *Ports* node of the hardware tree in the Windows Device Manager if the driver installation was successful.

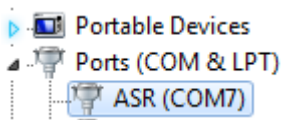

## 2-1-8. Air filter Installation


---

**Background** The ASR has a air filter (part number, APS-008) that must first be inserted under the control panel before operation.


---

### Steps


1. Pull outward as indicated in the arrow to detach the snap.

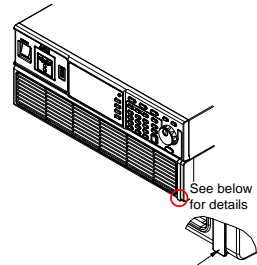


2. Remove the cover

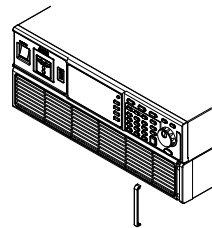


3. Remove the screws

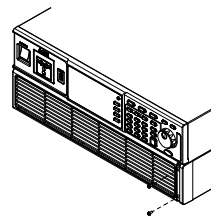


4. Move the plastic frame in the direction indicated by the arrow

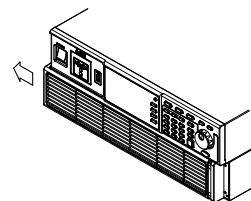

5. Remove the plastic frame.

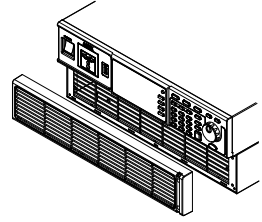

6. Replace the filter with a new one.

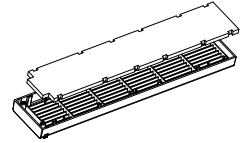

7. The unit is now ready to power up.



Please clean regularly to avoid damaging the internal components of the machine



The following procedure should only be attempted by competent persons.

Ensure the AC power cord is not connected to power.

## 2-1-9. Wire Gauge Considerations

**Background** Before connecting the output terminals to a load, the wire gauge of the cables should be considered. It is essential that the current capacity of the load cables is adequate. The rating of the cables must equal or exceed the maximum current rated output of the instrument.

Recommended Wire Gauge	Wire Gauge	Nominal Cross Section	Maximum Current
	20	0.5	9
	18	0.75	11
	18	1	13
	16	1.5	18
	14	2.5	24
	12	4	34
	10	6	45
	8	10	64
	6	16	88
	4	25	120
	2	32	145
	1	50	190
	00	70	240
	000	95	290
	0000	120	340

The maximum temperature rise can only be 60 degrees above the ambient temperature. The ambient temperature must be less than 30 degrees.

To minimize noise pickup or radiation, the load wires and remote sense wires should be twisted-pairs of the shortest possible length. Shielding of the sense leads may be necessary in high noise environments. Where shielding is used, connect the shield to the chassis via the rear panel ground screw. Even if noise is not a concern, the load and remote sense wires should be twisted-pairs to reduce coupling, which might impact the stability of the power supply. The sense leads should be separated from the power leads.

## 2-2. Menu Tree


---

### Convention


Use the menu trees as a handy reference for the power supply functions and properties. The ASR series menu system is arranged in a hierarchical tree. Each hierarchical level, which is coated in varied colors, can be navigated through the orders within the diagrams below.

For example: To set the interface to Buzzer OFF;

- ① Press the *Menu* key.
- ② Navigate to the MISC Configuration option.
- ③ Enter the Buzzer option.
- ④ Select OFF.

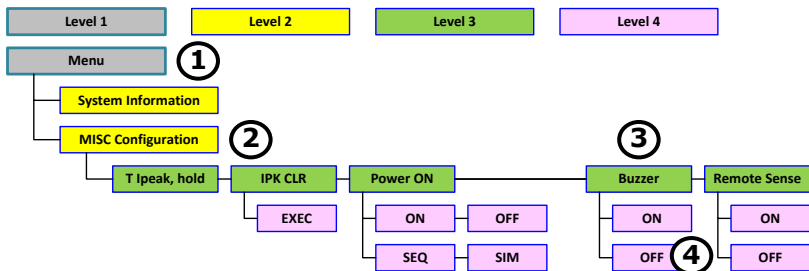


## 2-2-1. Main Page

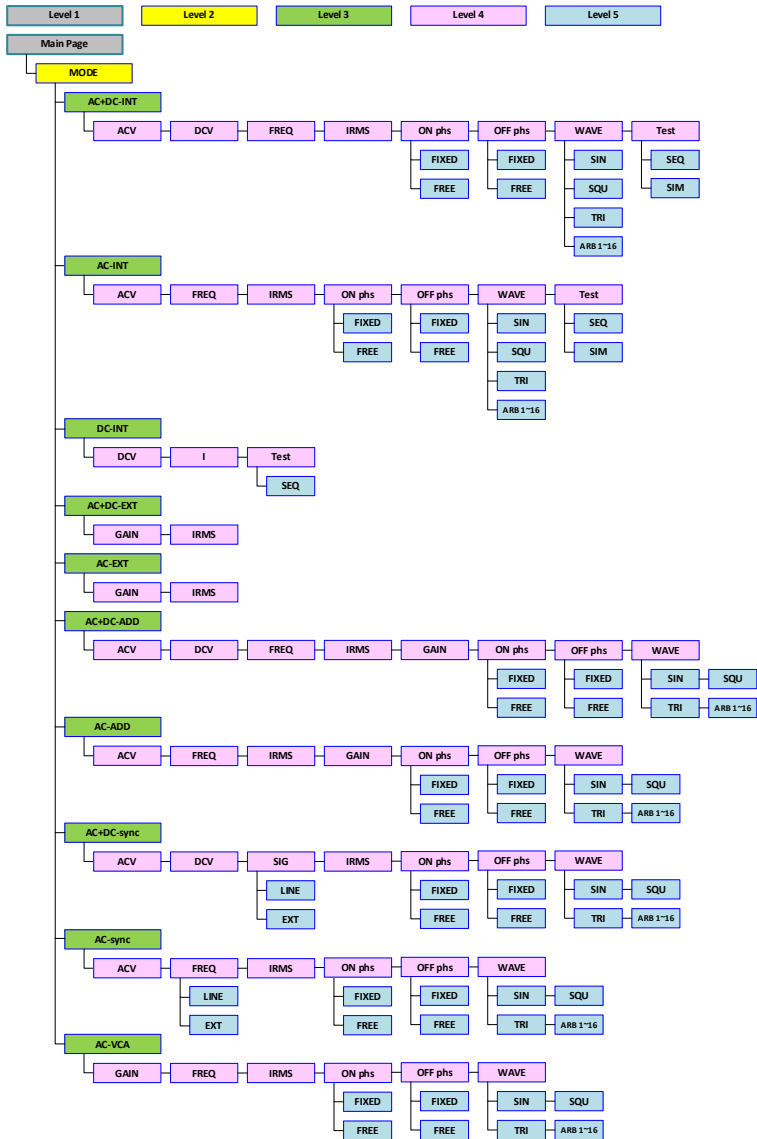


## 2-2-2. Function Keys

AC+DC-INT, AC+DC-EXT, AC-EXT, AC+DC-ADD, AC-ADD, AC-VCA

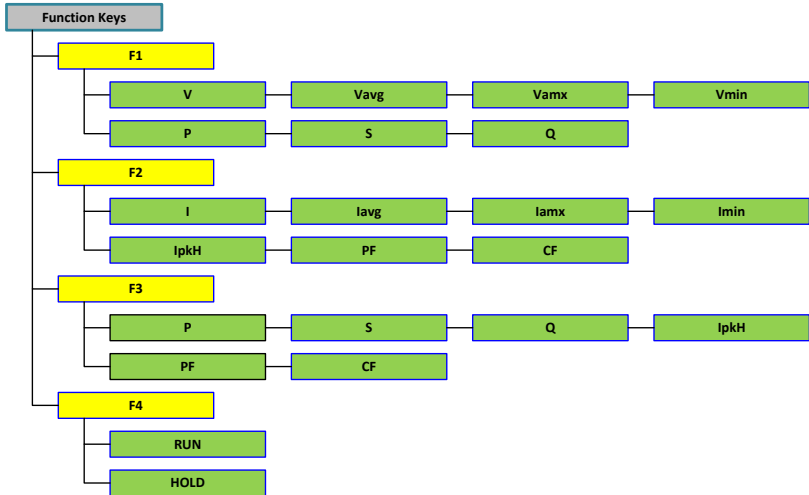


AC-INT

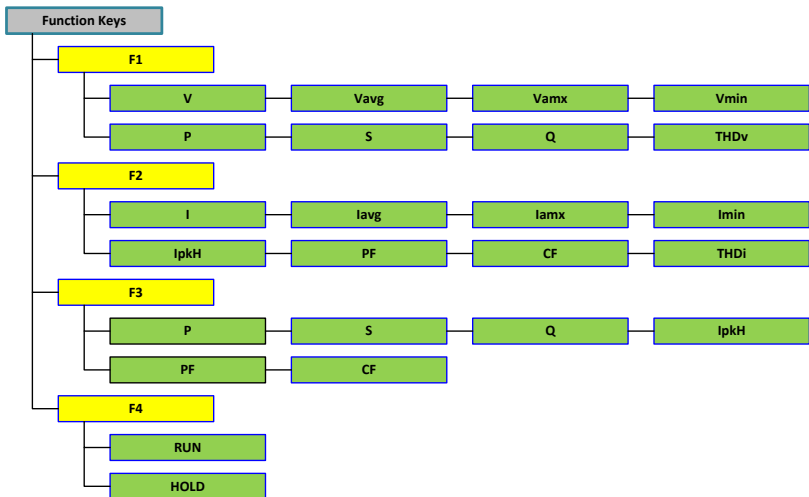





## DC-INT

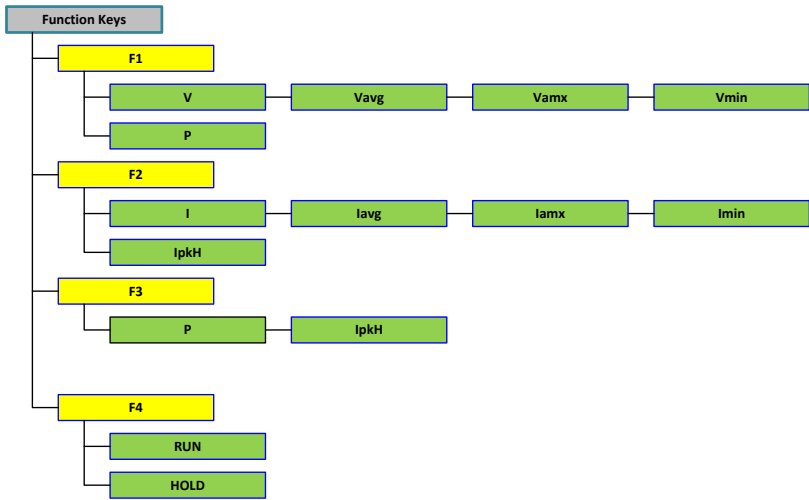

## AC+DC-Sync, AC-Sync

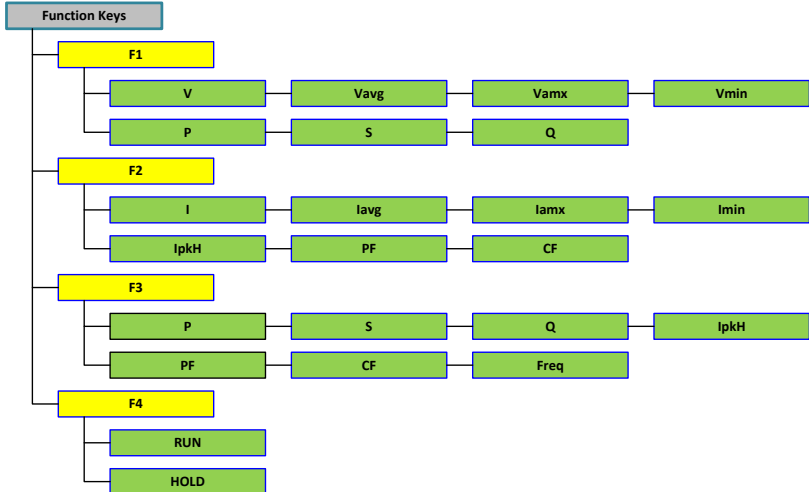

## 2-2-3. Menu

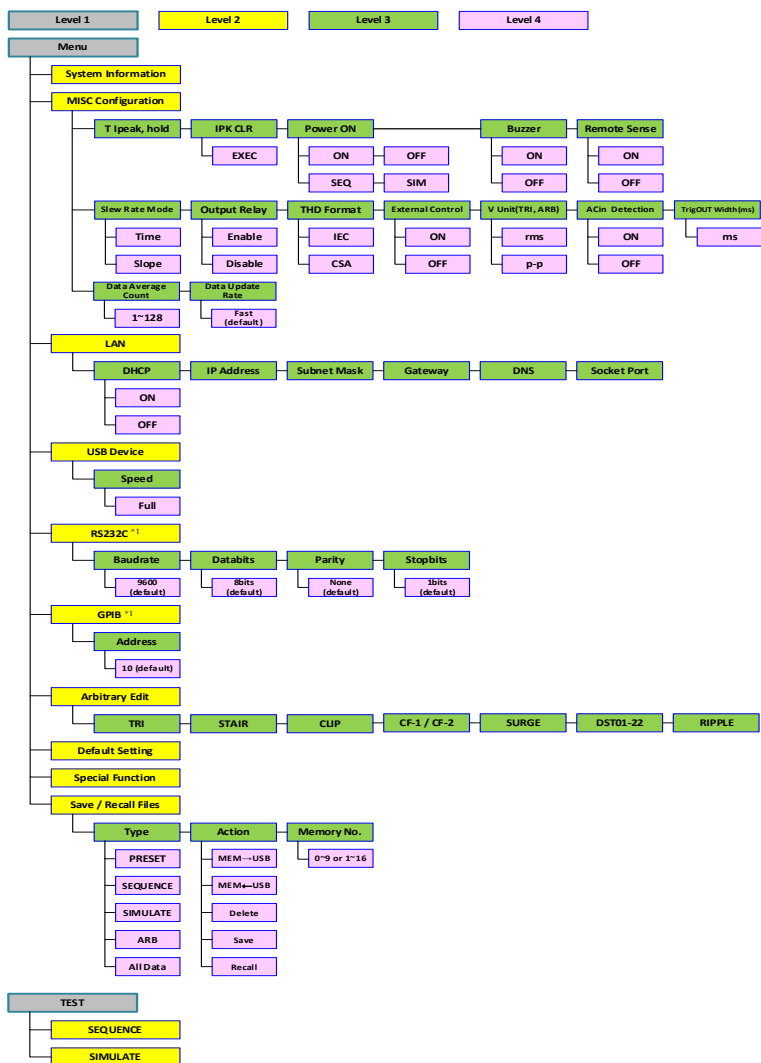

## 3. Basic Operation

---

This section describes the basic operations required to operate the power supply.

Before operating the power supply, please see the Getting Started chapter, page 1.

### 3-1. Basic setting


#### 3-1-1. Select the Output Mode

---

Background	The ASR has up to 9 modes to output, which empower user to have multiple applications for different scenarios.
------------	--

---

Steps	1. Press <i>Shift + Range</i> to access the MODE selection menu.
-------	--



Alternatively, it is available to use scroll wheel followed by the Enter key to enter the MODE menu.



2. Choose an output mode with scroll wheel.

Mode	Description
AC+DC-INT	AC & DC Internal Output
AC-INT	AC Internal Output
DC-INT	DC Internal Output
AC+DC-EXT	AC & DC External Output
AC-EXT	AC External Output
AC+DC-ADD	AC & DC Additional Output
AC-ADD	AC Additional Output
AC+DC-Sync	AC & DC Synchronal Output
AC-Sync	AC Synchronal Output
AC-VCA	AC Voltage Control Amplifier Output
INT	The signal source is from internal. Set the output voltage, waveform, frequency, on phase and off phase through the control panel or the remote control.
EXT	The signal source is from external. Amplifies and outputs the external input signal. Set the voltage gain through the control panel or the remote control.
ADD	The signals are the total of the external and internal signal source. Set the voltage gain for the external input signal, the output voltage for the internal signal source, the output waveform, frequency, on phase and off phase through the control panel or the remote control.

---

**Sync** The signal source is from internal. The output frequency is synchronized with the external TTL input signal or the power line. This frequency setting can't be set through the control panel or the remote control. All of setting conditions except for output frequency are as same as INT mode.

---


**VCA** The output voltage can be controlled with the external DC 0~2.5V input signal via BNC terminal. The output voltage setting can't be set through the panel or remote control. All conditions except for output voltage setting is same as INT mode.

---

3. Press *Enter* to confirm the mode selection.

---

Example

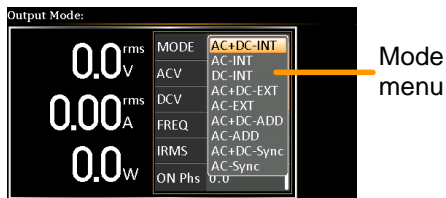

### 3-1-2. Select the Voltage Range

---

Background

The Range setting determines the general outlet voltage range. The ranges available correspond to common mains output voltage standards.

---

Steps

1. Press *Range* to access the Range menu.




- Set the voltage range with the F1 ~ F4 soft-keys.

Soft-keys F1: AUTO / F3: 200V / F4: 100V

- Press *Enter* to confirm the Range setting.

### Example

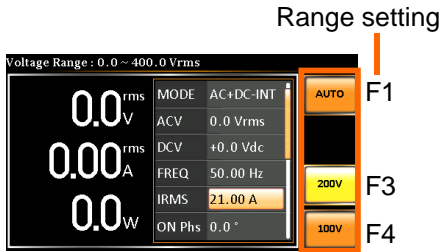

The output voltage values set by user can be divided into 2 manual settings, both of which have close relation with voltage range that contains high range (200V, AUTO) and low range (100V). For instance, when setting 5 Vrms under 200V range and 3 Vrms under 100V range, the Vrms setting will change from 5 Vrms to 3 Vrms directly after switching the voltage range from 200V to 100V.

Also, if the voltage range is changed when the output is on, the output will be automatically turned off.

### 3-1-3. Select the Output Waveform

#### Background

The ASR is capable of outputting sine, square, triangle and ARB wave shapes while connecting with external signals.

#### Steps

- Press *Shift + Test* to access the Wave menu.




- Alternatively, it is available to use scroll wheel followed by the Enter key to enter the Wave menu.



- Choose a waveform with scroll wheel.

Mode	Description
SIN	Sine wave
SQU	Square wave
TRI	Triangle wave
ARB 1 ~ 16	Arbitrary wave 1 ~ 16

- Press *Enter* to confirm the waveform setting.

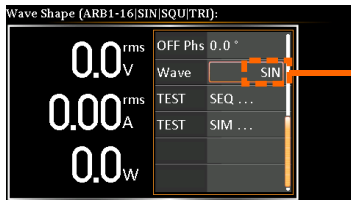

Wave setting



Waveform selection is Not available under DC-INT, AC+DC-EXT and AC-EXT output modes.



For more details about Arbitrary waveforms, refer to the page 96.

When changing to a waveform with setting higher than the upper limit of other waveform, the setting of other waveform will be adjusted to zero forcibly. For instance, when it is originally SIN output with ACV in 150 Vrms (200 Vrms for V-Limit), the ACV will be changed to 0 Vrms (164.5 Vrms for V-Limit) after output waveform adjusts to TRI.


### 3-1-4. Setting the Output Voltage Limit

**Background**      Setting the voltage limit allows the output voltage to be set to any level within the voltage limit range.

- Steps**
1. Press *Shift* + *V* to access the Volt Limit menu.
 


  

  2. When it is under AC+DC-INT, DC-INT, AC+DC-ADD or AC+DC-Sync mode. Use the scroll wheel to toggle between VPK+ (upper) and VPK- (lower) settings followed by pressing *Enter* to get into the parameter. Proceed to the step 3 for setup.

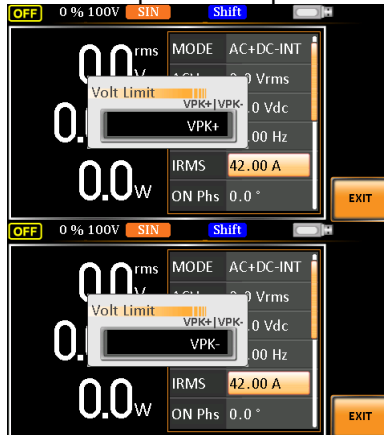VPK+ Setting



VPK- Setting

When it is under AC-INT, AC-ADD or AC-Sync mode.


Use the scroll wheel to set value of *Vrms* limit directly or use the F3 (MAX) and F4 (MIN) soft-keys to set the limit to the maximum or minimum value.

**AC-INT, AC-ADD, AC-Sync**

Range	10% ~ 100% full range
<i>Vrms</i>	voltage
	Soft-keys MAX, MIN



Vrms  
Setting

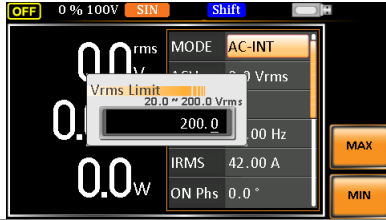

The Vrms Limit value defined by user will be generally applied to AC-INT, AC-ADD and AC-Sync modes under the same voltage range, which divides into 2 levels, high range including AUTO and 200V and low range covering 100V.

3. Set the voltage limit (VPK+ & VPK-) with the scroll wheel or with the F3 (MAX) and F4 (MIN) soft-keys to set the limit to the maximum and minimum values, respectively.

AC+DC-INT, DC-INT,  
AC+DC-ADD, AC+DC-Sync


Range 3.5% ~ 100% full range  
peak voltage

Soft-keys MAX, MIN


Range 3.5% ~ 100% full range  
peak voltage

Soft-keys MAX, MIN

VPK+  
Setting

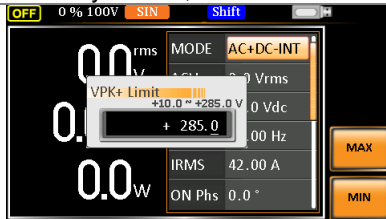

VPK-  
Setting

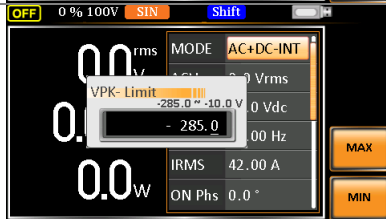



Both the VPK+ and VPK- Limit values defined by user will be generally applied to AC+DC-INT, DC-INT, AC+DC-ADD and AC+DC-Sync modes under the same voltage range, which divides into 2 levels, high range including AUTO and 200V and low range covering 100V.

4. Press *Enter* to confirm the voltage limit setting.



Voltage limit setting is Not available for both AC+DC-EXT and AC-EXT output modes. There 6 sets of voltage limits in total. Before change volt limit setting, if ACV rms or ACV+DCV peak setting value is bigger than desire volt limit value, so that the volt limit value can't be change.

The minimum voltage limit has relative connection with the voltage setting. That is, the voltage setting is never beyond the voltage limit.

The range of voltage limit will be limited within the certain minimum value in accordance with the output voltage setting.

### 3-1-5. Setting the Output AC/DC Voltage & Gain

#### Background

The ACV, DCV and Gain settings set the output voltage level. Before setting the power supply voltage level, set the voltage range and voltage limit beforehand.

#### Steps

1. Press the *V* key. The ACV parameter will be selectable. Also, it is available to use the scroll wheel followed by the Enter key to make the ACV parameter selectable as well.



		When it is under AC+DC-INT, AC+DC-ADD or AC+DC-Sync mode.
		Further use the scroll wheel to navigate to the DCV parameter and press <i>Enter</i> to make DCV parameter selectable.
DCV		When it is under DC-INT mode.
		Directly press the <i>V</i> key or use the scroll wheel to navigate to the DCV parameter and press <i>Enter</i> to make DCV parameter selectable.
		When it is under AC+DC-EXT, AC-EXT or AC-VCA mode.
		Directly press the <i>V</i> key or use the scroll wheel to navigate to the GAIN parameter and press <i>Enter</i> to make GAIN parameter selectable.
GAIN		When it is under AC-ADD mode.
		Further use the scroll wheel to navigate to the GAIN parameter and press <i>Enter</i> to make GAIN parameter selectable.
2.		Set ACV/DCV/GAIN value with the scroll wheel or with the F1 ~ F4 soft-keys.
		AC+DC-INT, AC-INT, DC-INT
	ACV	Range 0 volts ~ full range
	DCV	Soft-keys DEF1, DEF2, MAX, MIN
		AC+DC-EXT, AC-EXT, AC-VCA
	GAIN	Range 0 times ~ full range
		Soft-keys DEF1, DEF2, MAX, MIN
		AC+DC-ADD, AC-ADD
	ACV	Range 0 volts ~ full range
	DCV	Soft-keys DEF1, DEF2, MAX, MIN
	GAIN	Range 0 times ~ full range
		Soft-keys DEF1, DEF2, MAX, MIN
		AC+DC-Sync, AC-Sync
	ACV	Range 0 volts ~ full range
	DCV	Soft-keys DEF1, DEF2, MAX, MIN

3. Press *Enter* to confirm voltage or gain setting.

Defined Settings


- The DEF1 and DEF2 settings are user-defined settings. By default they are set to 0.0 and 100.0 volts (100V range), 200.0 volts (200V and AUTO range), respectively and 100 and 200 times for gain. The MAX and MIN soft-keys set voltage or gain parameters to the maximum or minimum value, respectively.
4. Repeat the previous steps 1 ~ 2 to set AC/DC voltage and gain value with the scroll wheel.
  5. Press and hold either the *DEF1* or *DEF2* soft-key until “Saved to DEF1/2” is displayed, which indicates the voltage and gain settings are saved to the DEF1 or DEF2 soft-key individually.



Trying to set the voltage outside of the voltage limit/range will result in a voltage setting error being displayed on the screen. ACV, DCV and GAIN settings under each output mode and range have their own DEF1 and DEF2 saved values, respectively.


ACV setting    Defined setting

Example of ACV Setting in the AC+DC-INT

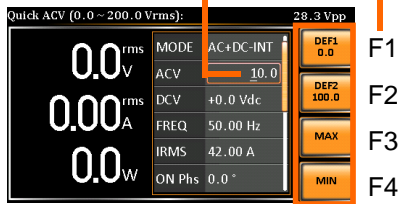

DCV setting    Defined setting

Example of DCV Setting in the DC-INT

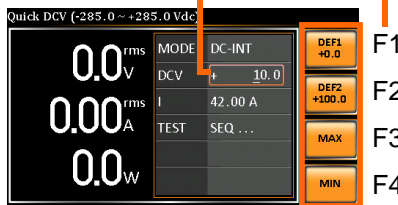

## GAIN setting Defined setting

Example of  
GAIN Setting in  
the AC+DC-EXT

Quick Gain (0.0 ~ 285.0):

0.0 <sub>rms</sub> V	MODE	AC-EXT	DEF1 100.0	F1
0.00 <sub>rms</sub> A	GAIN	99.9	DEF2 200.0	F2
0.0 <sub>W</sub>	IRMS	42.00 A	MAX	F3
			MIN	F4





1. Vrms can only be set up to 164.5 Vrms / 329.0 Vrms for triangular waveform.
2. Go to Menu -> MISC -> V Unit to select the voltage set value unit.

### 3-1-6. Setting the Frequency Limit

**Background**      Setting the frequency limit allows the frequency output to be set to any level within the limit range.

- Steps**
1. Press *Shift + F* to access the Freq Limit menu.
 



  
 +
   

  2. Use the scroll wheel to toggle between Freq Hi (upper) and Freq Lo (lower) settings followed by pressing *Enter* to get into the parameter.




3. Set the frequency limit with the scroll wheel or with the F3 ~ F4 soft-keys. The MAX and MIN soft-keys set the frequency limit to the maximum and minimum, respectively.

AC+DC-INT, AC+DC-ADD		
Freq	Range	1.00 ~ 999.9 Hz
Hi	Soft-keys	MAX, MIN
Limit		
Freq	Range	1.00 ~ 999.9 Hz
Lo	Soft-keys	MAX, MIN
Limit		

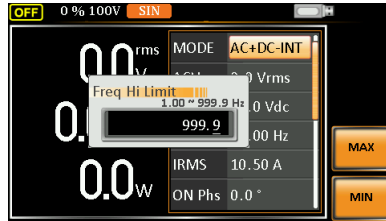Freq Hi  
Setting



Freq Lo  
Setting

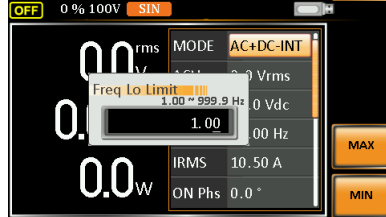


AC-INT, AC-ADD, AC-VCA


Freq Hi Limit	Range	40.00 ~ 999.9 Hz
	Hi Soft-keys	MAX, MIN

Freq Lo Limit	Range	40.00 ~ 999.9 Hz
	Lo Soft-keys	MAX, MIN

Freq Hi  
Setting

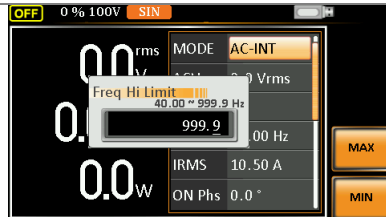


Freq Lo  
Setting

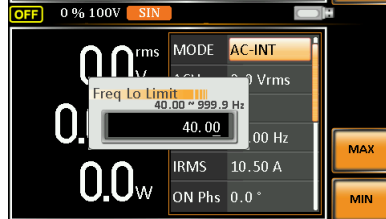

4. Press *Enter* to confirm the limit setting.

Freq Limit setting

Example of Freq  
Hi Limit Setting  
in AC+DC-INT

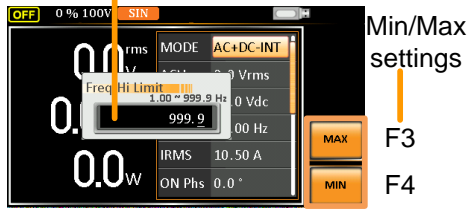


- Frequency limit setting is Not available under DC-INT, AC+DC-EXT, AC-EXT, AC+DC-Sync and AC-Sync output modes.
- Before change freq limit setting, if FREQ setting value is bigger than desire freq limit value, the freq limit value cannot be change accordingly.
- The range of frequency limit will be limited within the certain minimum value in accordance with the output frequency setting.
- There are 2 sets of frequency limits in total.



### 3-1-7. Setting the Output Frequency & Signal


**Background** The **FREQ** and **SIG** settings set the frequency of the output. Before setting the frequency, set the frequency limit.

- Steps**
- Press the *F* key to access the **FREQ** or **SIG** parameter depending on varied modes.
 



---

Also, it is available to use the scroll wheel followed by the Enter key to make the **FREQ** or **SIG** parameter selectable as well.


  - Set the frequency or signal with the scroll wheel or with the **F1 ~ F4** soft-keys.
 

<b>AC+DC-INT, AC+DC-ADD</b>		
<b>FREQ</b>	Range	1.00 ~ 999.9 Hz
	Soft-keys	DEF1, DEF2, MAX, MIN
<b>AC-INT, AC-ADD, CA-VCA</b>		
<b>FREQ</b>	Range	40.00 ~ 999.9 Hz
	Soft-keys	DEF1, DEF2, MAX, MIN
<b>AC+DC-Sync, AC-Sync</b>		
<b>SIG</b>	Option	LINE, EXT
  - Press *Enter* key to confirm the frequency or signal setting.

**Defined Settings** The **DEF1** and **DEF2** settings are user defined settings. By default they are set to 50.00 Hz and 60.00 Hz, respectively. The **MAX** and **MIN** soft-keys set the frequency to the maximum and minimum, respectively.

- Repeat the previous steps 1 ~ 2 to set frequency with the scroll wheel.
- Press and hold the *DEF1* or *DEF2* soft-key until "Saved to DEF1/2" is displayed. This will save the frequency setting to the **DEF1** or **DEF2** soft-key individually.

## Frequency setting    Defined setting

Example of  
Frequency  
Setting in  
AC+DC-INT

Quick Freq (1.00 ~ 999.9 Hz):

0.0 <sup>rms</sup> V	MODE	AC+DC-INT	DEF1 50.00	F1
0.00 <sup>rms</sup> A	ACV	0.6 Vrms	DEF2 60.00	F2
0.0 <sup>W</sup>	DCV	+0.0 Vdc	MAX	F3
	FREQ	50.00	MIN	F4
	IRMS	10.50 A		
	ON Phs	0.0 °		

## Signal setting

Example of  
Signal Setting in  
the AC+DC-EXT

SIG Mode (LINE|EXT):

0.0 <sup>rms</sup> V	MODE	AC+DC-Sync
0.00 <sup>rms</sup> A	ACV	0.0 Vrms
59.9 Hz	DCV	+0.0 Vdc
	SIG	LINE
	IRMS	10.50 A
	ON Phs	0.0 °



- Trying to set the frequency outside of the frequency limit will result in a frequency setting error being displayed on the screen.
- FREQ setting under each output mode has its own DEF1 and DEF2 saved values, respectively.

### 3-1-8. Setting the Peak Current Limit


**Background**      Setting the peak current limit sets a limit on the current that can be sourced by the power supply. Once the output current over the setting, the output will set to off.



When the peak current limit is tripped, an alarm will sound. Press *Shift + Cancel* to clear the Ipk alarm.


**Steps**

1. Press *Shift + I rms* to access the IPK Limit menu.



2. Use the scroll wheel to toggle between IPK+ (upper) and IPK- (lower) settings followed by pressing *Enter* to get into parameter, respectively.

IPK+

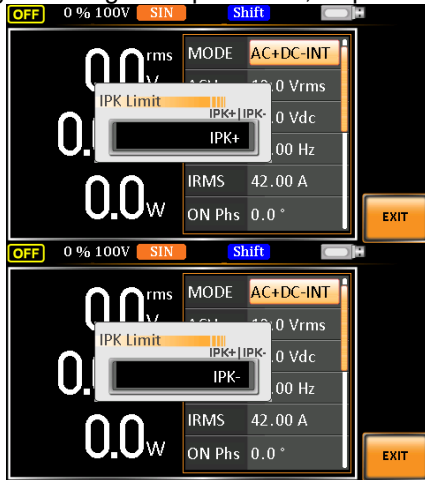

3. Set the peak current (IPK+ & IPK-) with the scroll wheel or with the F3 (MAX) and F4 (MIN) soft-keys to set the current limit to the maximum and minimum values, respectively.


AC+DC-INT, AC-INT, DC-INT, AC+DC-EXT, AC-EXT, AC+DC-ADD, AC-ADD, AC+DC-Sync, AC-Sync, AC-VCA

IPK+      Range      50 ~ 105% of rate peak current

Soft-keys	IPK Limit On/Off, MAX, MIN
Range	-105 ~ -50% of rate peak current


Soft-keys	IPK Limit On/Off, MAX, MIN
IPK+ Limit setting	Soft-keys setting

Example of IPK+ Limit Setting in the AC+DC-INT

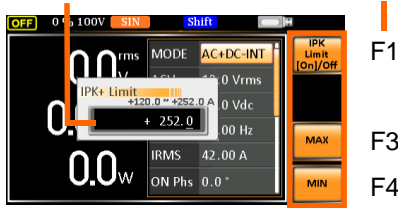

IPK- Limit setting      Soft-keys setting

Example of IPK- Limit Setting in the AC+DC-INT

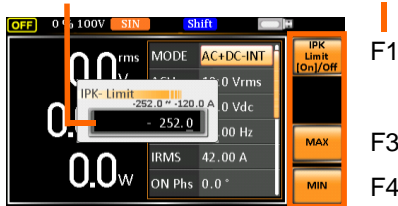

IPK Limit On/Off

In theory, It is the function which keeps the IPK limits (+ & -) within the certain range when the predefined values are reached. If, however, this function is turned off, the output will be disabled instantly when either IPK+ or IPK- limit is reached.


4. Press Enter to confirm the peak current setting.  
IPK Limit is set ON by default.




### 3-1-9. Setting the Output Current Level

**Background** The IRMS and I settings set the current of the output. Setting the RMS or AVG current sets a limit on the current that can be sourced by the power supply. Once the output current is over the setting, the output will set to off.

**Steps**

1. Press *I rms* to access the IRMS or I menu depending on varied modes. 

Also, it is available to use the scroll wheel followed by the Enter key to make the IRMS or I parameter selectable as well. 

2. Set the IRMS/I level with the scroll wheel or with the F3 ~ F4 soft-keys. The MAX and MIN soft-keys set the IRMS or I level to the maximum and minimum, respectively.


AC+DC-INT, AC-INT, DC-INT, AC+DC-EXT, AC-EXT, AC+DC-ADD, AC-ADD, AC+DC-Sync, AC-Sync, AC-VCA

Range 5% ~ 105% of rate current

IRMS/I Soft-keys IRMS Limit On/Off, MAX, MIN

**Example of IRMS Setting in the AC+DC-INT**


IRMS setting

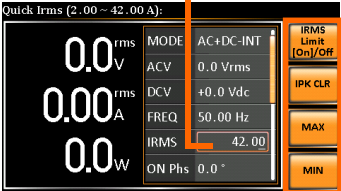

Soft-keys setting

F1  
F2  
F3  
F4

Example of I  
Setting in the  
DC-INT

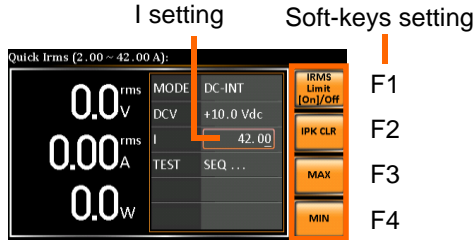

IRMS & I Limit  
On/Off

Almost identical with the concept of previous IPK Limit function, the IRMS/I Limit function keeps the IRMS/I value within the certain limit when the predefined value is reached. If, on the other hand, this function is turned off, the output will be disabled instantly when IRMS/I Limit off level is reached.



IRMS Limit is set ON by default. The IRMS minimum value will not be less than 1A.

### 3-1-10. Setting the Output On Phase

---

**Background**      The On Phase setting sets the starting phase of the voltage output.


---

**Steps**

1. Press *Shift + Menu* to make the ON Phs parameter selectable.



Also, it is available to use the scroll wheel followed by the Enter key to make the ON Phs parameter selectable as well.




2. Set the *ON Phs* setting with the scroll wheel or with the F3 (MAX) and F4 (MIN) soft-keys to set the On Phase to the maximum and minimum values, respectively.

AC+DC-INT, AC-INT, AC+DC-ADD, AC-ADD, AC+DC-Sync, AC-Sync, AC-VCA


ON	Range	0.0° ~ 359.9°
Phs	Soft-keys	FIXED/FREE, MAX, MIN

3. Press *Enter* to confirm the On Phase setting.
-

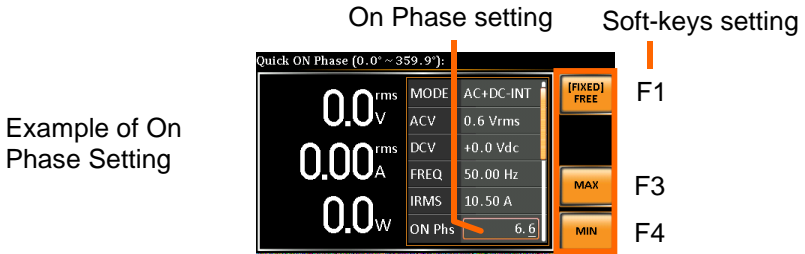

**FIXED & FREE Modes**

Pressing the *F1* key to toggle between modes of FIXED, which indicates the user-defined on-phase degree, or FREE, which represents the degree of on-phase is freely determined by the unit itself. When FREE is selected, the both F3-MAX and F4-MIN keys are grayed out, signaling the unavailability by user.

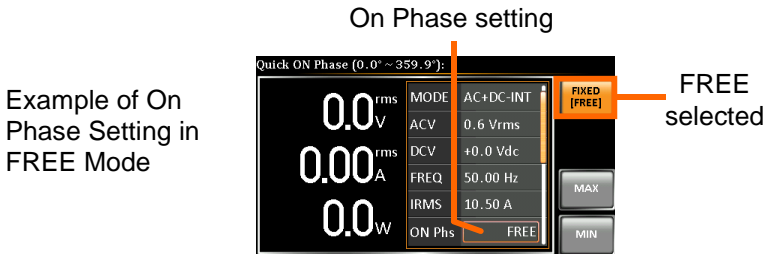




### 3-1-11. Setting the Output Off Phase

---


**Background**      The Off Phase setting sets the ending phase of the voltage output.

---

**Steps**      1. Press *Shift* + 4 to make the OFF Phs parameter selectable.



2. Use the scroll wheel followed by the Enter key to make the OFF Phs parameter selectable.



3. Set the *OFF Phs* setting with the scroll wheel or with the F3 (MAX) and F4 (MIN) soft-keys to set the Off Phase to the maximum and minimum values, respectively.

AC+DC-INT, AC-INT, AC+DC-ADD,  
AC-ADD, AC+DC-Sync, AC-SyncAC-VCA

OFF Phs	Range	0.0° ~ 359.9°
	Soft-keys	FIXED/FREE, MAX, MIN

4. Press *Enter* to confirm the Off Phase setting.

---

OFF Phase setting      Soft-keys setting

Example of OFF Phase Setting

Quick OFF Phase (0.0° ~ 359.9°):

0.0<sup>rms</sup> V      OFF Phs 8.8

0.00<sup>rms</sup> A      Wave SQU

0.0<sup>W</sup>      TEST SEQ

[FIXED] FREE      F1

MAX      F3

MIN      F4

FIXED & FREE Modes

Pressing the *F1* key to toggle between modes of FIXED, which indicates the user-defined off-phase degree, or FREE, which represents the degree of off-phase is freely determined by the unit itself. When FREE is selected, the both F3-MAX and F4-MIN keys are grayed out, signaling the unavailability by user.

OFF Phase setting

Example of OFF Phase Setting in FREE Mode

Quick OFF Phase (0.0° ~ 359.9°):

0.0<sup>rms</sup> V      OFF Phs FREE

0.00<sup>rms</sup> A      Wave SQU

0.0<sup>W</sup>      TEST SEQ

[FIXED] FREE      FREE selected

MAX

MIN

### 3-1-12. Setting the Sync Phase



Note

- It is available for AC+DC-Sync and AC-Sync Mode output modes only.
- When SIG is set LINE, this function is used for adjusting sync phase of output waveform and phase of power grid.
- When SIG is set EXT, this function is used for adjusting sync phase of output waveform and phase of external input signal.

Steps

1. Use the scroll wheel followed by the Enter key to make the Syn Phs parameter selectable.



2. Set the Syn Phs setting with the scroll wheel or with the F3 (MAX) and F4 (MIN) soft-keys to set the Sync Phase to the maximum and minimum values, respectively.

AC+DC-Sync, AC-Sync

Syn	Range	0.0° ~ 359.9°
Phs	Soft-keys	FIXED/FREE, MAX, MIN

3. Press *Enter* to confirm the Off Phase setting.

Example of Syn Phase Setting

Sync Phase setting

Quick Sync Phase (0.0° ~ 359.9°):

0.0<sup>rms</sup> V

0.00<sup>rms</sup> A

60.04 Hz

OFF Phs 0.0°

Wave SIN


Syn Phs 0.0

Soft-keys setting


MAX F3

MIN F4


The actual waveform –  
ACV: 100 Vrms,  
DCV: 100Vdc,  
Syn Phs: 0 °,  
Output On

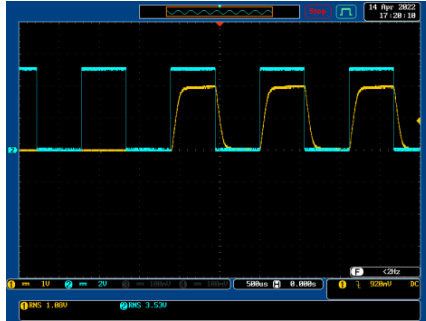

The actual waveform –  
ACV: 100 Vrms,  
DCV: 100Vdc,  
Syn Phs: 0 °,  
Steady State

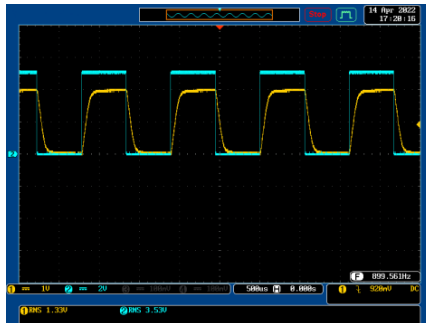


The actual waveform –  
ACV: 100 Vrms,  
DCV: 100Vdc,  
Syn Phs: 0 °,  
Output Off

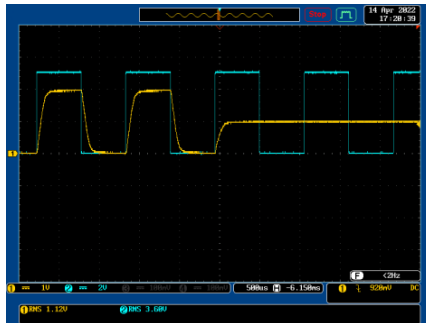


---

The actual waveform –  
ACV: 100 Vrms,  
DCV: 100Vdc,  
Syn Phs: 120 °,  
Output On

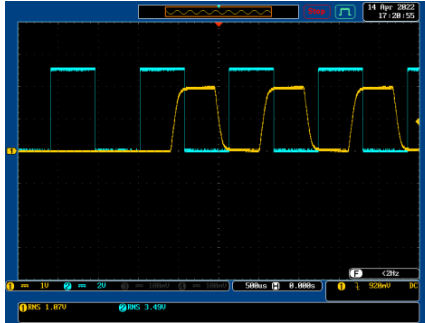


---

The actual waveform –  
ACV: 100 Vrms,  
DCV: 100Vdc,  
Syn Phs: 120 °,  
Steady State

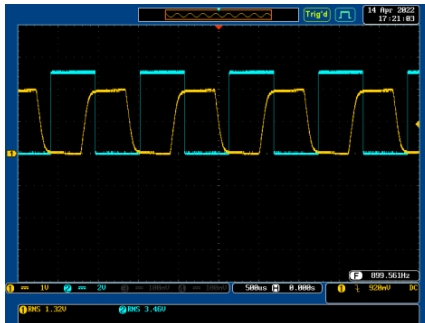

---

The actual waveform –  
ACV: 100 Vrms,  
DCV: 100Vdc,  
Syn Phs: 120°,  
Output Off

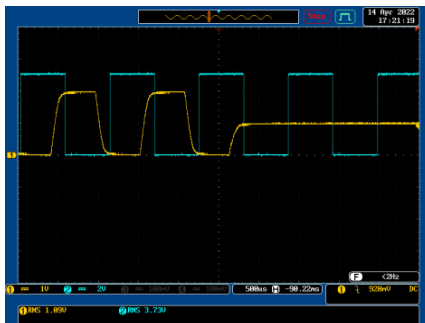

### 3-1-13. Switch the Display Modes

The ASR power supply has three display modes. The standard display mode shows the power supply setup in the middle and the 3 configurable measurements on the right that correspond to the far-left live-time measurements section. The simple display mode shows all measurement items available on the ASR with 3 measurement formats switchable at any time. The harmonic display mode shows both harmonic voltage and harmonic current relevant measurements for user.

Steps


1. Press the *Display* key.
2. The display mode will toggle each time when the key is pressed besides locked mode.

Display



Standard Mode

Measurement    Setting

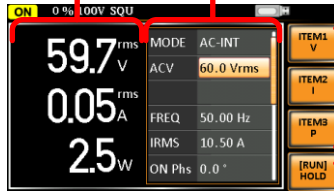

Configurable measurements

Hold measurement

Configuring the Standard Mode Measurements

1. Press the *F1(ITEM1)*, *F2(ITEM2)* or *F3(ITEM3)* soft-key to enter each menu.



2. Use the scroll wheel to select a measurement item and press *Enter* to confirm. Refer to page 75 for more details of measurement parameters.

## Simple Mode

### Measurement Items

Simple/Harm  
Measurement forms  
Hold measurement

## Configuring the Simple Mode Measurements

1. Press the *F2* (RMS/AVG/PEAK) soft-key to toggle among each mode of format.
2. The display will show parameters of measurement for each format. Refer to the page 77 for details.



## Harmonic Mode

### Measurement Items

Simple/Harm  
THDv/THDi  
Page Up  
Page Down

## Configuring the Harmonic Mode Measurements

1. First switch to the Simple mode followed by pressing the *F1* (Simple/Harm) soft-key to enter the Harm display mode.
2. Pressing the *F2* (THDv/THDi) soft-key to toggle between Total Harmonic Distortion Volt (THDv) and Total Harmonic Distortion Current (THDi) measurements.



Harmonic mode is available for AC-INT mode and 50/60Hz output frequency. SIN, SQU, TRI and ARB 1 - 16 waveforms are also available.

3. When the measurements are beyond one page, which consists of up to 10 items, press the *F3* (Page Up) and *F4* (Page Down) soft-keys to flip through pages.



---

Hold  
Measurement

Press the soft-key *F4* to toggle hold on or off. This function will “hold” the current measurements on the display, which means the measurements won’t be updated until the function is released.



Hold measurement is available for the Standard and Simple display modes only.



### 3-1-14. Using the Measurement Function

The 3 configurable measurements, which indicate the live-time measurement in varied units, on the far-right side within the standard display mode can be switched by user anytime in the process of power output, thus providing an instantaneous analysis.

Steps

1. Press the *Display* key to switch to the Standard display mode.




2. Press the *F1(ITEM1)*, *F2(ITEM2)* or *F3(ITEM3)* soft-key to enter each menu.



3. Use the scroll wheel to select a measurement item and press *Enter* to confirm.

ITEM 1	
V	Root Mean Square Voltage
Vavg	Average Voltage
Vmax	Positive Peak Voltage
Vmin	Negative Peak Voltage
P	Real Power
S	Apparent Power (n/a in DC-INT mode)
Q	Reactive Power (n/a in DC-INT mode)
THDv	Total Harmonic Distortion Voltage (available in AC-INT mode only)

Example of  
ITEM1 in  
AC+DC-  
Sync

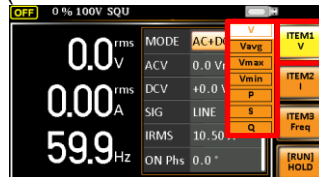


ITEM1  
options

### ITEM 2

I	Root Mean Square Current
Iavg	Average Current
I <sub>max</sub>	Maximum Peak Current
I <sub>min</sub>	Minimum Peak Current
I <sub>pkH</sub>	Peak Current Hold
PF	Power Factor (n/a in DC-INT mode)
CF	Crest Factor (n/a in DC-INT mode)
THDi	Total Harmonic Distortion Current (available in AC-INT mode only)

Example of  
ITEM2 in  
AC+DC-  
Sync

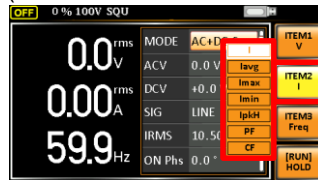


ITEM2  
options

### ITEM 3

P	Real Power (n/a in DC-INT mode)
S	Apparent Power (n/a in DC-INT mode)
Q	Reactive Power (n/a in DC-INT mode)
I <sub>pkH</sub>	Peak Current Hold
PF	Power Factor (n/a in DC-INT mode)
CF	Crest Factor (n/a in DC-INT mode)
Freq	Frequency (available in AC+DC-Sync and AC- Sync modes only)

Example of  
ITEM3 in  
AC+DC-  
Sync

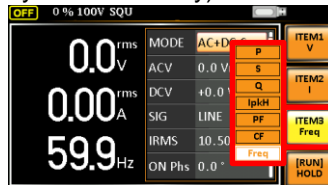

ITEM3  
options



Each output mode has varied measurement functions display. Refer to the above tables for detailed options.

### 3-1-15. Switch the Measurement Format

The 3 measuring formats, RMS, AVG as well as PEAK, on the far-right side within the simple display mode can be switched by user anytime in the process of power output, thus offering an instant readout of diversified calculations.

Steps

1. Press the *Display* key to switch to the Simple display mode.

Display



2. Press the *F2* (RMS/AVG/PEAK) soft-key to toggle among each mode of format.



RMS                      Root Mean Square value

AVG                      Average value

PEAK                    Peak value

Example

DC-INT Output Mode

V & I  
RMS  
Values

RMS  
Display

Vavg &  
Iavg  
Values

AVG  
Display

Vmax/  
Vmin  
&  
Imax/  
Imin  
Values

PEAK  
Display

All output modes except DC-INT

V & I  
RMS  
Values

OFF 0% 100V SIN						[Simple]
V	0.0	Vrms	P	0.0	W	[Harm]
	0.00	Arms	S	0.0	VA	[RMS]
			Q	+0.0	var	[AVG]
			PF	0.000		[PEAK]
IpkH	+0.00	Apk	CF	0.00		[IPK CLR]
						[RUN]
						[HOLD]

RMS Display

Vavg &  
Iavg  
Values

OFF 0% 100V SIN						[Simple]
Vavg	+0.0	V	P	0.0	W	[Harm]
Iavg	+0.00	A	S	0.0	VA	[RMS]
			Q	+0.0	var	[AVG]
			PF	0.000		[PEAK]
IpkH	+0.00	Apk	CF	0.00		[IPK CLR]
						[RUN]
						[HOLD]

AVG Display

Vmax/  
Vmin  
&  
Imax/  
Imin  
Values

OFF 0% 100V SIN						[Simple]
Vmax	+0.0	Vpk	P	0.0	W	[Harm]
Vmin	+0.0	Vpk	S	0.0	VA	[RMS]
Imax	+0.00	Apk	Q	+0.0	var	[AVG]
Imin	+0.00	Apk	PF	0.000		[PEAK]
IpkH	+0.00	Apk	CF	0.00		[IPK CLR]
						[RUN]
						[HOLD]

PEAK Display



The selected measurement format will be merely shown in the Simple display mode, for which refer to page 73 for further details.

- Press the  $F3$  (IPK CLR) soft-key. The measured IpkH value will be zeroed immediately.




## 3-1-16. Panel Lock

The panel lock feature prevents settings from being changed accidentally. When activated, all keys and knobs except the Lock/Unlock key and the Output key (if active) will be disabled.

If the instrument is remotely controlled via the USB/LAN/RS-232C/GP-IB interface, the panel lock is automatically enabled. See page 161 for remote control details.

Activate the Panel Lock

Press the *Lock* key to activate the panel lock. “Keys locked” appears on the display.




A lock icon will appear in the upper-right corner when the panel keys are locked.



Disable the Panel Lock

Hold the *Lock* key for ~3 seconds to disable the panel lock. “Keys unlocked” will appear on the display and the lock icon will disappear.



Example




### 3-1-17. Alarm Clear

---


**Background** The ALM CLR (Alarm Clear) function will clear alarms like Over Current, Over Peak Current, Over Temperature, AC fail, Fan fail, Remote Sense Error, among others. Refer to page 188 for more details.

---

**Steps** 1. Press *Shift* + 6 to clear any alarms.



**Example**

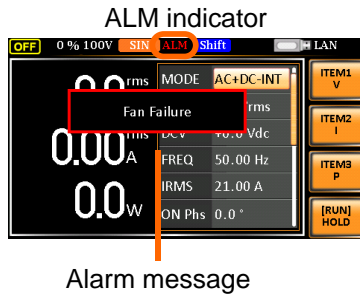

### 3-1-18. Turning the Output On/Off

When the output is turned on, the DUT can be connected to either the rear panel output or the front panel output.

---



Both of these outputs are electrically linked. Only one DUT should be connected to any one of the outputs at a time. Using both outputs at the same time is not supported. Using the front and rear outputs at the same time could cause dangerous operating conditions. See page 28 for details about using the output terminals or sockets.

---

Turn Output On

Press the *Output* key. The Output key will light up in orange and ON will be displayed in the status bar to indicate that the output is on.



Turn Output Off

Press the *Output* key. The Output key light will go out and OFF will be displayed in the status bar to indicate that the output is off.



## 3-2. Advanced Settings

### 3-2-1. Using the Remote Sense Function

The ASR can be operated using local or remote voltage sense. By default, the power supply is configured for local sense.



Ensure the output is off before handling the remote sense connectors.


Use sense cables with a voltage rating exceeding the isolation voltage of the power supply.

Never connect sensing cables when the output is on. Electric shock or damage to the power supply could result.

---

#### Remote Sensing Input Connectors Overview

The remote sensing input connector is located at the rear panel of the ASR.



#### Local Sense

---

##### Local Sense Operation

When using local sense, the remote sensing input terminal is not used. No compensation of any possible voltage drop seen on the load cables is performed. Local sense is only recommended when the voltage drop is of no consequence. By default, the power supply is configured for local sense.

Check that the remote sense setting is disabled (page 115).



## Remote Sense


---

### Remote Sense Operation


Remote sense is used to compensate for the voltage drop seen across load cables due to resistance inherent in the load cables. The remote sense function can compensate a maximum of 5% of the output voltage and all of output frequency.

1. Configure the remote sense setting to ON (page 115).
2. Connect the Neutral terminal of the remote sense terminal block to the Neutral terminal of the load.
3. Connect the Live terminal of the remote sense terminal block to the Live terminal of the load.


### Connection Example

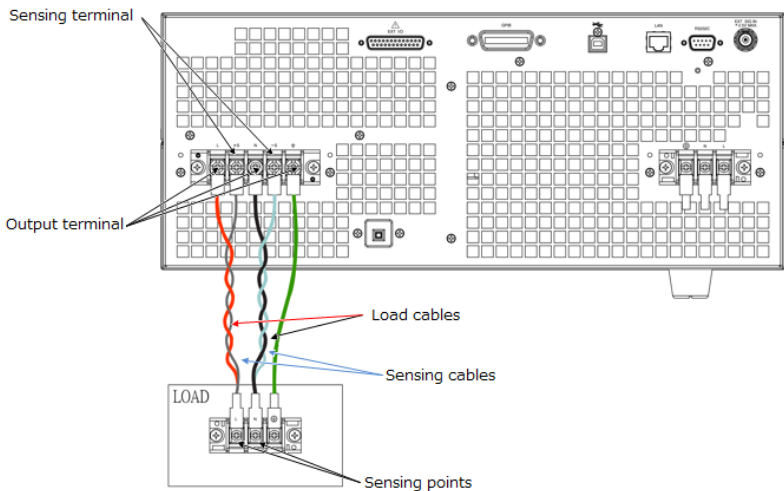

4. After well connecting, install the remote sensing input terminal cover followed by fastening the two screws to fix the cover.

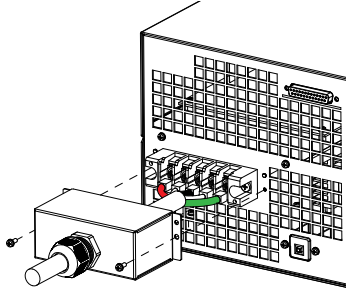

5. The remote sense connection along with the cover is therefore well set up.

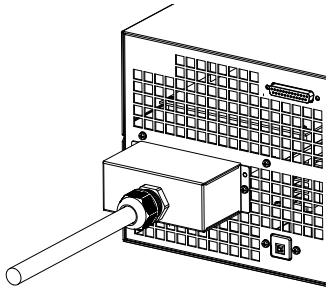


### 3-2-2. Preset Settings

Save Preset Settings to Local Memory

Up to 10 preset settings can be saved to internal memory.

Steps

1. Press *Preset* followed by clicking with holding on the F1 ~ F4 soft-keys or Key pad(0~9) individually to save the present settings to the corresponding memory number. The memory number and the number on the numeric keypad are the same.  
Example) M1=1 key of keypad.

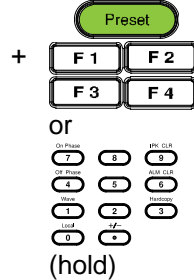

Presets M0 ~ M3 or 0 ~ 9

2. Press the *Preset* key again to exit from the preset mode.

Example

For example, pressing *Preset* & holding *F1* will save the present settings to memory slot 0 (saved to M0).



- There are overall 10 groups of memory number for preset setting (M0 ~ M9). Only M0 ~ M3 are available in soft-keys, whereas the rest groups M4 ~ M9 can be saved in keypad(0~9) or the *Save/Recall Files* utility under Menu system. Refer to page 87 for more details.
- The preset key will be lit green when active. A beep will be heard (Buzzer is set to ON) and a message will be displayed when the settings are saved.


## Load Preset Settings to Local Memory

Any of the 10 preset settings can be recalled from internal memory.

---

### Steps

1. Press *Preset* followed by clicking on the F1 ~ F4 soft-keys or Key pad(0~9) individually to load the corresponding memory number.

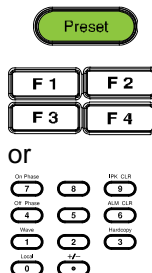

The memory number and the number on the numeric keypad are the same.

Example) M1=1 key of keypad.

---

Presets	M0 ~ M3 or 0 ~ 9
---------	------------------

---

2. Press the *Preset* key again to exit from the preset mode.
- 

### Example

For example, pressing *Preset* + F1 will recall the saved settings from memory slot 1 (recalled from M0).

---



- There are overall 10 groups of memory number for preset setting (M0 ~ M9). Only M0 ~ M3 are available in soft-keys, whereas the rest groups M4 ~ M9 can be recalled in keypad(0~9) or the *Save/Recall Files* utility under Menu system. Refer to page 87 for more details.
  - The preset key will be lit green when active. A beep will be heard (Buzzer is set to ON) and a message will be displayed when the settings are recalled.
-

## Manage Preset Settings

Preset settings can be easily saved to or recalled from a USB flash drive using the *Save/Recall Files* utility in the Menu system. Settings can also be deleted from local memory using the utility.

---

**File Format**

When files are saved to USB they are saved in the following format:  
PresetX.Set, where X is the memory number M0 ~ M9. The files are saved to USB:/texio.

When files are recalled from USB, files must be recalled from the same memory number. For example, the file Preset0.set can only be recalled to memory number M0. The files can only be recalled from the USB:/texio directory.

---



note

Usable USB flash drive is format type FAT32, up to 32GB.

---

### Steps

1. Press the *Menu* key. The Menu settings will appear on the display.
2. Use the scroll wheel to go to item 10, *Save/Recall Files* and press *Enter*.
3. Go to the *Type* setting using the scroll wheel and press *Enter*. Select *Preset* and press *Enter* to confirm.
4. Go to the *Action* setting and choose the file operation and then press *Enter*.



---

**MEM→USB** Saves the selected preset memory from the local memory to a USB flash drive.

---

**MEM←USB** Loads a preset memory from a USB flash drive to the selected local memory.

---

Delete	Deletes the selected preset memory from local memory.
Save	Saves the selected preset memory to local memory.
Recall	Recalls the selected preset memory from local memory.

5. Go to the *Memory No.* setting and select the preset memory number to perform the operation on. Press *Enter* to confirm.



Memory No. 0 ~ 9 (M0 ~ M9)

Execute File Operation

6. Press *EXE[F1]* to perform the selected file operation.




Exit

7. Press *EXIT[F4]* to exit from the *Save/Recall Files* settings.



Example

Load file from USB to Local memory

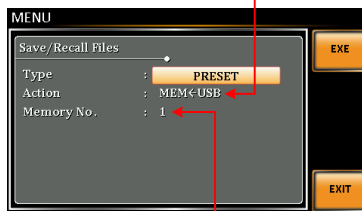

Memory No. 1 selected

All Data Operation

8. Go back to the *Type* setting using the scroll wheel and press *Enter*. Select *All Data* and press *Enter* to confirm.
9. Go to the *Action* setting and choose the file operation and then press *Enter*.


---

MEM→USB	Saves all the files including Preset, Sequence, Simulate and ARB from the local memory to a USB flash drive.
MEM←USB	Loads all the files including Preset, Sequence, Simulate and ARB from a USB flash drive to the local memory.
Delete	Deletes all the files including Preset, Sequence, Simulate and ARB from local memory.

---

### Example

All Data option selected

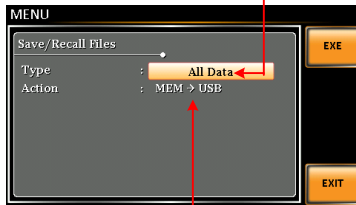

Save all data from  
Local memory to USB

### 3-2-3. External Keypad Operation

#### USB Keypad

ASR series supports external keypad, via USB connection, to execute operations including setting and output. Refer to the table below for functions of each key from external keypad.

Key	Function
TAB	Scale-->
/	Set Voltage
*	Set Frequency
0~9,00,.	Value input
+	Stepping increase Voltage (or Frequency)
-	Stepping decrease Voltage (or Frequency)
Enter	Enter
Back Space	Output On/Off



Note

This function is Not available for firmware versions prior to V1.20. Please update to the latest firmware and kernal to activate this function. Visit TEXIO official website to download the latest firmware and refer to the update procedure for details.



## 4. EXTERNAL CONTROL

The rear panel has 3 signal output connectors. These connectors are used for external control from the menu of this product by using the external signal that includes amplified external voltage, amplified external signal as well as synchronization frequency.

Note that prior to operation, it is required to implement insulation process for external circuit. For example, while connecting to I/O signals of ASR, be sure to have double insulation process for live parts in advance.

Furthermore, the state output is always on. The following chapter will give a brief overview each of these connectors.

---

### 4-1. Using External Control I/O

---

Overview	The External Control I/O is primarily used to control ASR externally by using the logic signal. More than that, it is able to monitor Sequence function status remotely with ease.	
Specification	Control input	<ul style="list-style-type: none"><li>• High level: +2.2 V or higher</li><li>• Low level: +1.0 V or lower</li><li>• Non-destructive maximum input: +7 V / -5 V</li><li>• Input Impedance: Pulled up to +5 V with 47 k<math>\Omega</math></li></ul>
	Status output	<ul style="list-style-type: none"><li>• Output level: 0 / +5 V</li><li>• Output Impedance: 100 <math>\Omega</math></li></ul>
Pin Assignment	Check the table below for definition of each pin.	

Pin No.	I/O	Function	Remark
1	Output	Power source on/off status	0: OFF, 1: On
2	Output	The output on/off status	0: OFF, 1: On
3	Output	IRMS/IPK/Power Limit	0: OFF, 1: On
4	Output	Software busy status	0: Normal, 1: Busy
5	Output	Sequence sync output 0	
6	Output	Sequence sync output 1	
7	Output	Undefined output 0	
8	Output	Undefined output 1	
9	GND		
10	Input	Undefined input 0	
11	Input	Output off	Falling edge detection
12	Input	Output on	Falling edge detection
13	Input	Sequence start	Falling edge detection
14	Input	Sequence stop	Falling edge detection
15	Input	Sequence hold	Falling edge detection
16	Input	Sequence branch 1	Falling edge detection
17	Input	Sequence branch 2	Falling edge detection
18	GND		Connected to chassis
19	Output	+5 V	50 mA or less
20	Output	Reserved	
21	Output	Reserved	
22	Output	Reserved	
23	Output	Reserved	
24	Output	Reserved	
25	Output	Reserved	



The limiter operation is recognized as On when the following conditions exist.


- Output peak current limiter (positive) is operated.
- Output peak current limiter (negative) is operated.
- Output average current limiter is operated.
- Output power limiter is operated.

## 4-2. Using External Signal Input Function

**Overview** The External Signal Input port is particularly used for several output modes including AC+DC-EXT, AC-EXT, AC+DC-ADD, AC-ADD, AC+DC-Sync, AC-Sync and AC-VCA.

Connect to the External Signal Input port on the rear panel via a coaxial cable with a BNC connector when using an external input signal as the signal source with external synchronization.

**External Signal Input Connector**

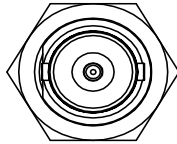


### 4-2-1. EXT GAIN - AC+DC-EXT and AC-EXT mode

**Overview** Select AC+DC-EXT or AC-EXT mode to use ASR as an amplifier specifically for signal input from the external signal input port on the rear panel. The impedance of input is 1MΩ, whilst the frequency range of input is from DC to 999.9 Hz.

External Input Gain Range	External Input Gain	
	Setting	100V Range
Setting Range	0.0 to 250.0	0.0 to 500.0
Resolution	0.1	0.1
Initial Value	100.0	200.0

**Equation** Output voltage (V) = External input signal (V) x Gain (V/V)

**Diagram**

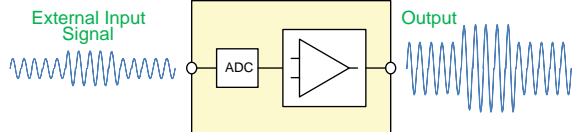



- It is suggested to use an input voltage of  $\pm 2.5$  V or less to prevent from clipping of the output voltage.
- In addition, never allow an input voltage to pass  $\pm 5.5$  V to avoid issues from the input block.

## 4-2-2. EXT ADD - AC+DC-ADD and AC-ADD mode

### Overview & Concept

Select AC+DC-ADD or AC-ADD mode to add the external signal source signal that includes magnification to the internal signal then power output on the rear panel. The impedance of input is  $1\text{M}\Omega$ , whilst the frequency range of input is from DC to 999.9 Hz.


## 4-2-3. EXT Sync - AC+DC-Sync and AC-Sync mode

### Overview

When AC+DC-Sync or AC-Sync mode is selected, the externally synchronized oscillation function embedded in the ASR synchronizes the output frequency, specifically, to the frequency of external synchronization TTL signal. It is not allowed to set the synchronization phase difference and the output frequency is able to be synchronized to frequency from 40 to 999.9 Hz.

### Diagram & Concept


For SIG option, choose either EXT (signal sync) or LINE (line sync) for external sync signal source. It is noted that synchronous is with power source frequency when LINE is opted. See page 59 for operation steps.

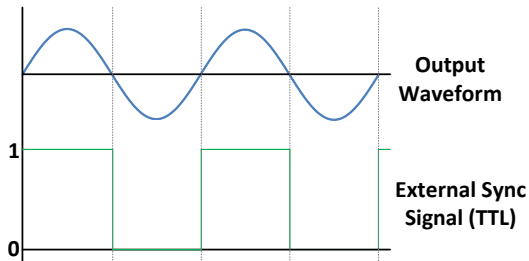

Note	The limit frequency range of synchronous TTL signal is 40Hz ~ 1kHz.
------	---

## 4-2-4. EXT Voltage - AC-VCA mode

Overview	Select AC-VCA mode to use ASR-3000 as an amplifier specifically for DC input from the external signal input port on the rear panel. The input voltage range of input is from DC 0 to 2.5V. The impedance of input is 1M $\Omega$ .
----------	--

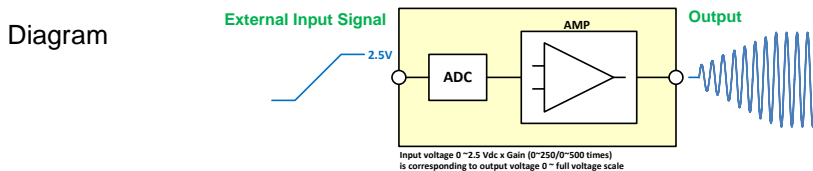

After magnification, if exceeds the maximum DC voltage value of the range that output waveform will be clamped.

## 4-3. Arbitrary Waveform

### 4-3-1. Compiling Arbitrary Waveform Input

#### Background

In order to generate arbitrary waveforms, it is requested to use a specifically control software on external PC which transfers data, via USB interface, to the arbitrary waveform memory with ASR.



- Arbitrary waveforms cannot be changed when output is on. To change arbitrary waveform, make sure the output is off beforehand.
- It is not allowed to compile the arbitrary waveform memory directly from ASR. Only connecting with a PC with control software via USB interface can complete it.

#### Memory

- ✓ Arbitrary waveform memory count: 16
- ✓ Arbitrary waveform length: 4096 words
- ✓ Arbitrary waveform data: 16-bit binary (2's complement format)
- ✓ Valid range of waveform data: -32767 to 32767

When a value greater than 32767 is input, waveform data will be clipped to 32767. Also, when a value less than -32767 is input, the waveform data will be clipped to -32767.

#### Output Arbitrary Waveform on ASR

1. Press *Shift* + *Test* to access the Wave menu.


Alternatively, it is available to use scroll wheel followed by the *Enter* key to enter the Wave menu.




2. Choose one of the ARB waveforms (ARB 1 to ARB 16) with scroll wheel.

Default Waveform Setting


ARB 1 Ramp (rising)

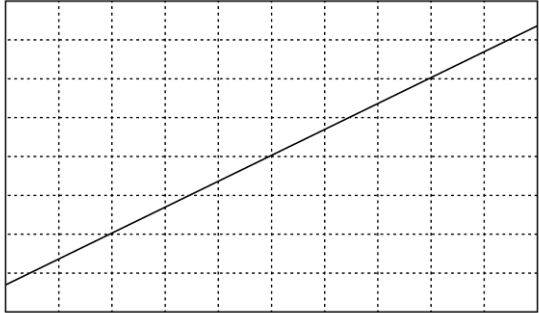


ARB 2 Ramp (falling)

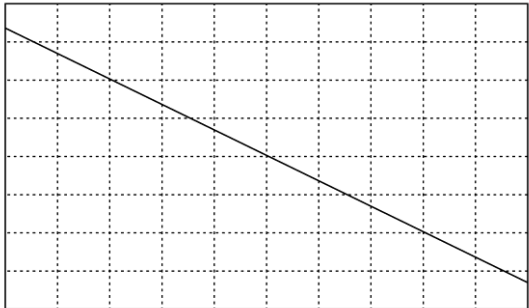


ARB 3 Sine wave, half-cycle(positive pole)

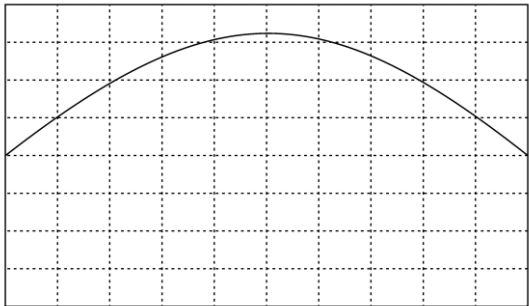


ARB 4 Sine wave, half-cycle(negative pole)

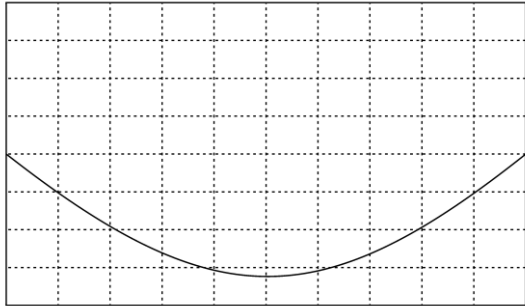

ARB 5 Sine wave, half-wave rectification(positive polarity)

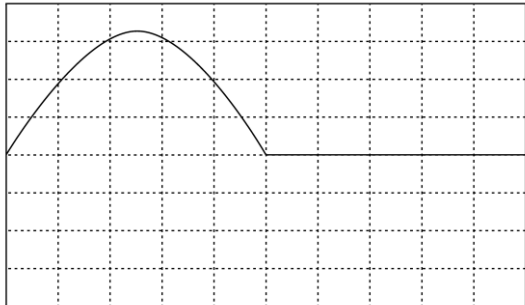


ARB 6 Sine wave, half-wave rectification(negative polarity)

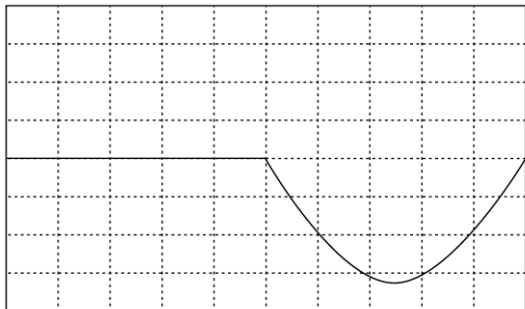





ARB 7 Sine wave, full-wave  
rectification(positive polarity)

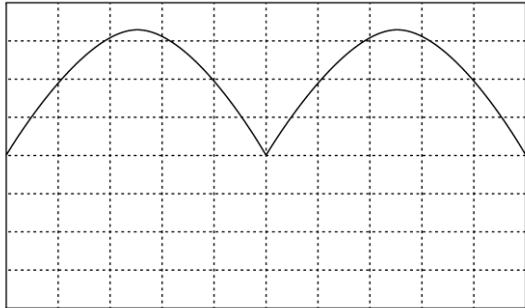


ARB 8 Sine wave, full-wave  
rectification(negative polarity)

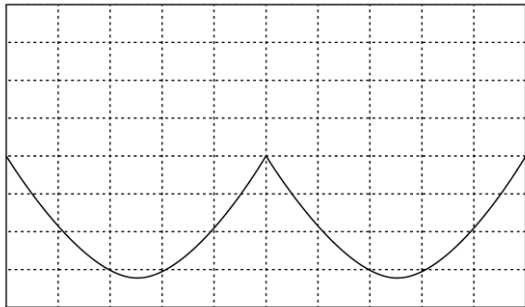


ARB 9 Second order step  
response(damping coefficient 0.1)

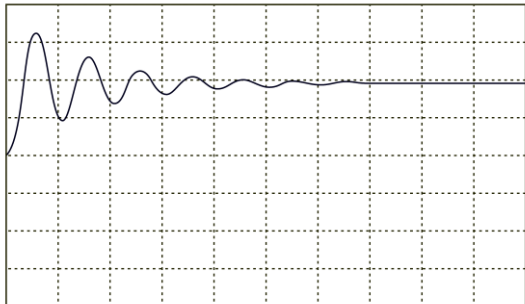


ARB 10 Second order step response(damping coefficient 0.2)

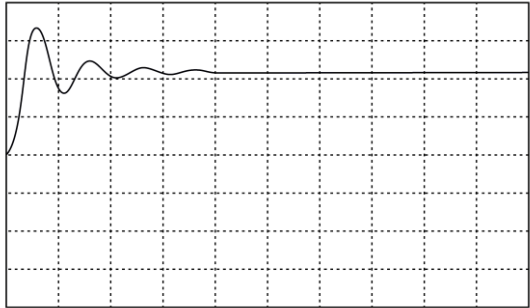


ARB 11 Second order step response(damping coefficient 0.7)

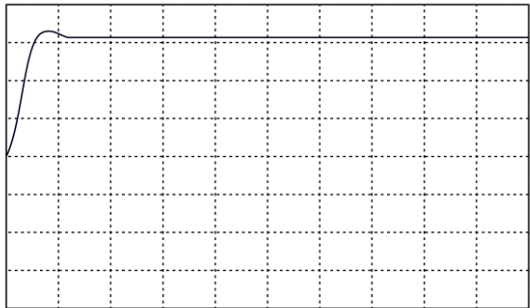


ARB 12 Second order impulse response(damping coefficient 0.1)

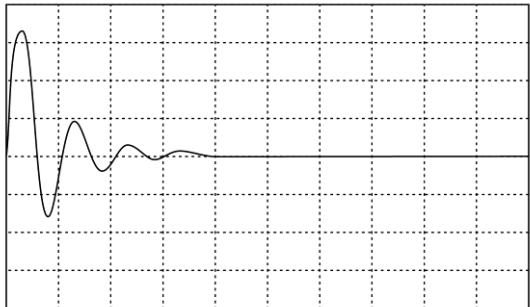


ARB 13 Second order impulse response(damping coefficient 0.2)

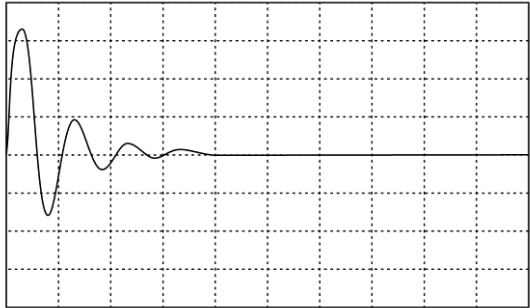


ARB 14 Second order impulse response(damping coefficient 0.7)

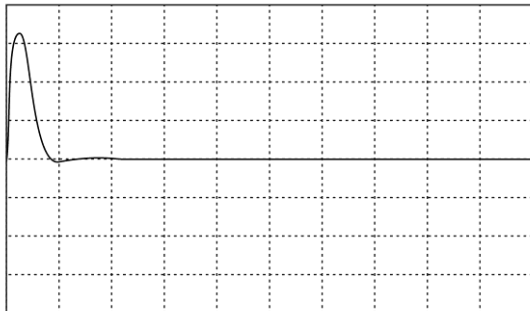

ARB 15 Exponential (rising)

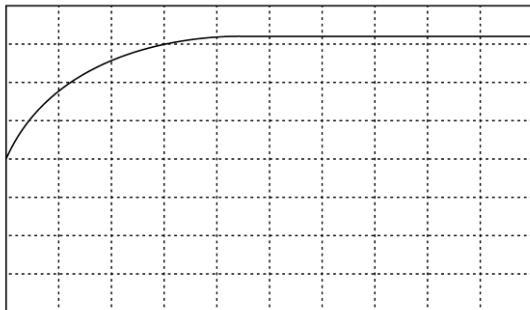


### ARB 16 Exponential (falling)

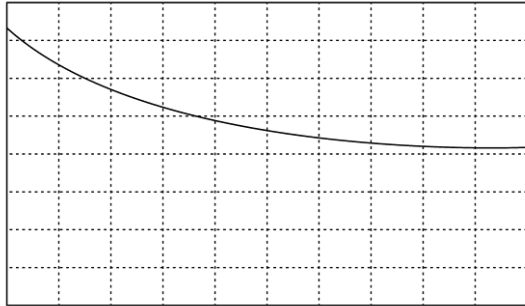

Example

3. Press *Enter* to confirm the waveform setting.

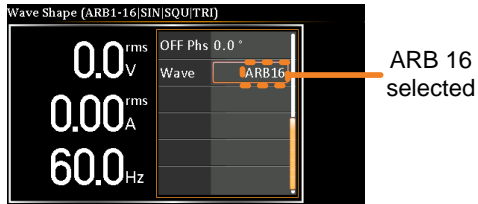

When the input peak value of ARB waveform is not in the full scale 32768, the ratio of maximum value of voltage output by ARB waveform will decrease accordingly.

---

## 4-3-2. Manage Arbitrary Waveform Settings


Arbitrary waveform settings can be easily saved to or from a USB flash drive using the Save/Recall Files utility in the Menu system. Files can also be deleted from local memory using the utility.

---

**File Format**                      When files are saved to USB they are saved in the following format:  
ARBX.ARB, where X is the memory number 1 ~ 16 (ARB0 ~ ARB16). The files are saved to USB:/texio.

When files are recalled from USB, files must be recalled from the same memory number. For example, the file ARB1. SEQ can only be recalled to memory number ARB1. The files can only be recalled from the USB:/gw directory.

---

- Steps**
1. Press the *Menu* key. The Menu settings will appear on the display. 
  2. Use the scroll wheel to go to item 10, *Save/Recall Files* and press *Enter*.
  3. Go to the *Type* setting using the scroll wheel and press *Enter*. Select *ARB* and press *Enter* to confirm.
  4. Go to the *Action* setting and choose the file operation and then press *Enter*.
- 

**MEM→USB**                      Saves the selected ARB memory from the local memory to a USB flash drive.

---

**MEM←USB**                      Loads the ARB memory from a USB flash drive to the selected local memory.

---

**Delete**                              Deletes the selected ARB memory from local memory.

---

5. Go to the *Memory No.* setting and select the sequence memory number to perform the operation on. Press *Enter* to confirm.

---

Memory No. 1 ~ 16 (ARB1 ~ ARB16)

---

Execute File Operation

6. Press *EXE[F1]* key to perform the file operation.




Exit

7. Press *EXIT[F4]* key to exit from the *Save/Recall Files* settings.



Example

Load file from USB to Local memory

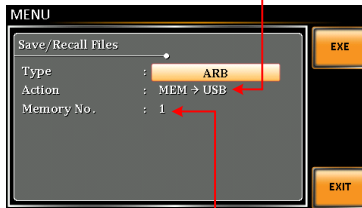

Memory No. 1 selected

All Data Operation

8. Go back to the *Type* setting using the scroll wheel and press *Enter*. Select *All Data* and press *Enter* to confirm.

9. Go to the *Action* setting and choose the file operation and then press *Enter*.

---

**MEM→USB** Saves all the files including Preset, Sequence, Simulate and ARB from the local memory to a USB flash drive.

---

**MEM←USB** Loads all the files including Preset, Sequence, Simulate and ARB from a USB flash drive to the local memory.

---


---

Delete	Deletes (Recall Default) all the files including Preset, Sequence, Simulate and ARB from local memory.
--------	--

---

Example

All Data option selected

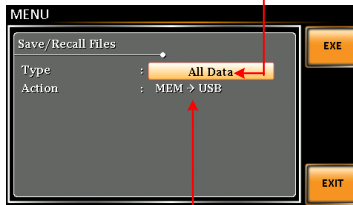

Save all data from  
Local memory to USB

---

Single Arbitrary Wave Default	From the previous step 4, execute the “Delete” action to restore the selected ARB memory back to the default setting.
-------------------------------	---

All Arbitrary Waves Default	From the previous step 9, execute the “Delete” action to restore the entire ARB memory back to the default setting.
-----------------------------	---




Note

For default ARB waveform setting, please refer to page 97 through 102.


---

### 4-3-3. Edit Arbitrary Waveform

**Background** The arbitrary waveform editing function is to select built-in arbitrary waveforms. There are a number of built-in waveform shapes to choose from, each of which can be customized with varied attributes. Finally, choose an ARB NO. (1~16) to output the selected built-in waveform.

- Steps**
1. Press the *Menu* key. The Menu setting will appear on the display. 
  2. Use the scroll wheel to go to item 7, *Arbitrary Edit* and press *Enter* to enter the Arbitrary Edit page.
- 
- |                   |   |
|-------------------|---|
| Built-in Waveform | TRI, STAIR, CLIP, CF-1, CF-2, SURGE, DST01-22, RIPPLE |
|-------------------|---|
3. Use the scroll wheel and *Enter* key to select waveform along with pertaining attributes and press *Save* to confirm settings.

#### Setting Screen Overview

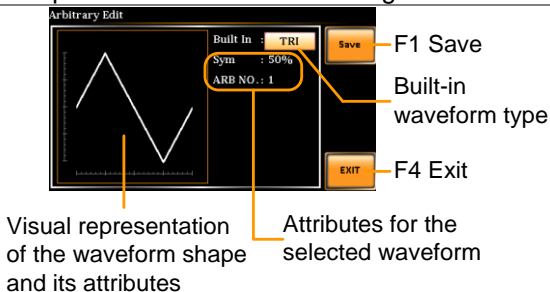


**ARB Waveform Overview** The following describes each of the built-in waveforms.



---

**TRI** The triangle waveform has a settable number of percentage.


Attributes:  
Sym: 0 ~ 100%  
ARB NO: 1 ~ 16

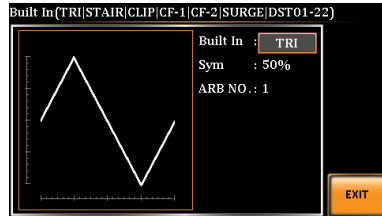

---

**STAIR** The staircase waveform has a settable number of step levels.


Attributes:  
Stairs: 1 ~ 100  
ARB NO: 1 ~ 16

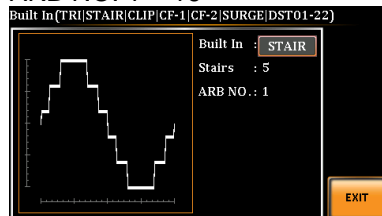

---

**CLIP** Outputs a clipped sinewave. The degree to which the sine wave is clipped is settable.

Attributes:  
Ratio: 0.00 ~ 1.00  
ARB NO: 1 ~ 16

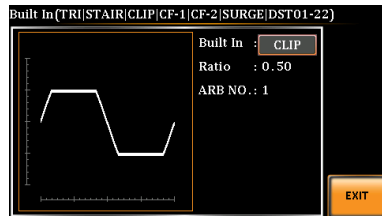


---

CF-1 Crest factor (CF-1) waveform. The crest factor is settable.

Attributes:

CF: 1.1 ~ 10.0

ARB NO: 1 ~ 16

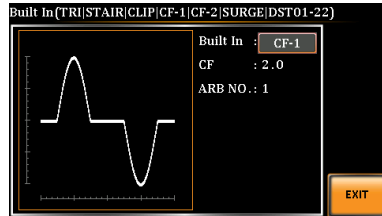


---

CF-2 Crest factor (CF-2) waveform. The crest factor is settable.

Attributes:

CF: 1.5 ~ 2.0

ARB NO: 1 ~ 16

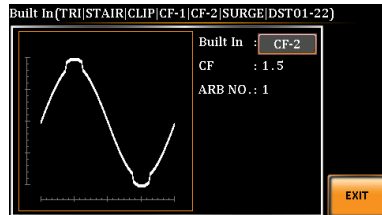

---

**SURGE** The surge waveform has a settable ACV base level, site size and site shape.


Attributes:

Type: SQU, SIN (site waveform type)

ACV: 0 ~ 100% (base waveform ampl.)

Site: 0 ~ 100% (site waveform width)

ARB NO: 1 ~ 16

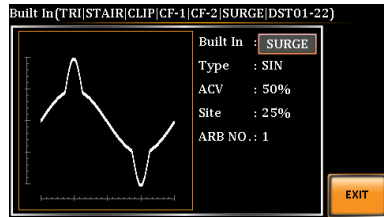


---

**DST01-22** The DST01-22 waveform shape function simply adds a number Fourier series terms to create an arbitrary waveform.

Attributes:

Type: 1 ~ 22 (Number of selectable ARB waveforms)

ARB NO: 1 ~ 16

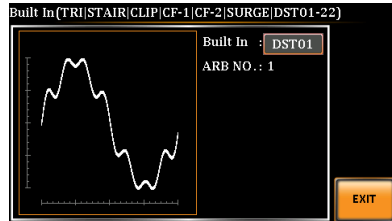

---


RIPPLE The ripple waveform has a settable times, VDC and level.

Attributes:

Times: 1 ~ 6

VDC: 1 ~ 100 (DC Voltage)

Level: 1 ~ 30%

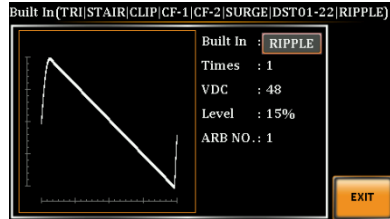

---

SAVE  
SAVE & APPLY

4. Press *SAVE*[F1] to save the Arbitrary Edit settings. Press *SAVE & APPLY*[F2] key only for RIPPLE, the voltage set in VDC and Level will be reflected and it will be AC+DC-INT mode.



---

EXIT

5. Press *EXIT*[F4] to exit from the Arbitrary Edit settings.



## 5. MISCELLANEOUS

The Miscellaneous menu contains miscellaneous parameter settings.


---

### 5-1. T I<sub>peak</sub>, hold

The T I<sub>peak</sub>, hold function sets the hold time for the peak current measurement. After the output is turned on, the ASR will delay starting the peak current measurement by this hold time.

---


Concept in diagram

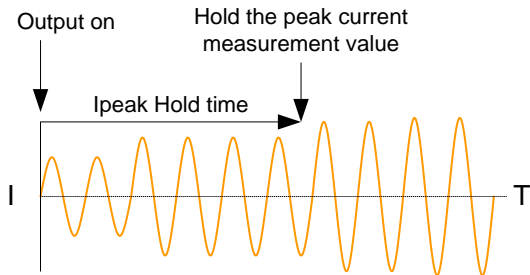

- The hold peak current will be updated when new measurement is greater than the previous value. By contrast, it will not update when new measurement is less than the hold peak current.
- I<sub>peak</sub> hold time begins counting only when the output function is turned on.
- I<sub>peak</sub> measurement is not executed during the set I<sub>peak</sub> hold time.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.



- Go to the *T Ipeak, hold(msec)* setting using the scroll wheel and press *Enter*. Set the time and press *Enter* again to confirm.




T Ipeak 1 ~ 60,000 ms

Exit

- Press *Exit[F4]* to exit from the MISC Configuration settings.



Example

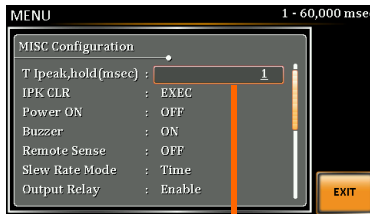


Hold time of current peak value setting

## 5-2. IPK CLR

The peak current measured during output process can be easily cleared out via this function. It is applicable for user to restart measuring the peak current value when necessity emerges.

Steps

- Press the *Menu* key. The Menu setting will appear on the display.
- Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.
- Go to the *IPK CLR* setting using the scroll wheel and press *Enter* on the EXEC button. The measured hold peak current value will be zeroed immediately.



IPK CLR EXEC


---

Exit

4. Press *Exit*[F4] to exit from the MISC Configuration settings.



Example

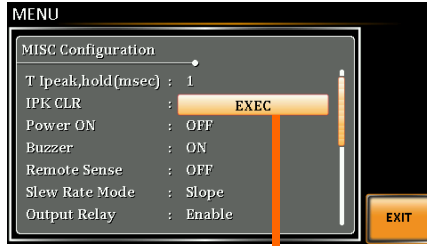

Current peak hold  
value clear



Although the hold peak current will be zeroing at once right after the execution of IPK CLR action, the zeroing value, however, will be soon updated when new measurement greater than 0 occurs during output process.

---

### 5-3. Power ON

The Power ON setting allows you to have the power-on output or other operation functions on automatically after startup. The settings that are loaded are the last settings that were present in the standard mode before the unit was turned off last.

---

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.
3. Go to the *Power ON* setting using the scroll wheel and press *Enter*. Select a setting and press *Enter* to confirm.




ON	Set power-on output ON with the setting that was loaded before the unit was last turned off.
OFF	Disable this function active.
SEQ	Execute the sequence that was loaded before the unit was last turned off.
SIM	Execute the simulation that was loaded before the unit was last turned off.

Exit

4. Press *Exit*[F4] to exit from the MISC Configuration settings.



Example

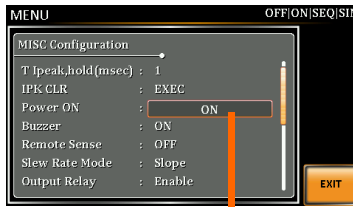


Power ON setting

## 5-4. Buzzer

The Buzzer setting turns the buzzer sound on or off for key presses.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.
3. Go to the *Buzzer* setting using the scroll wheel and press *Enter*. Turn the setting on or off and press *Enter* again to confirm.



Buzzer ON, OFF




Exit

4. Press *Exit[F4]* to exit from the MISC Configuration settings.



Example

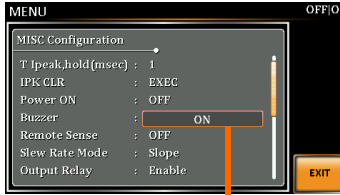

Buzzer setting

## 5-5. Remote Sense

The remote sense function detects the output voltage at the sensing input terminal. This function compensates for voltage drops across the load cables when the load is connected to the ASR over a long distance.



The remote sense function can compensate a maximum of 5% of the output voltage. The maximum output voltage when compensation is used is limited by the rated voltage.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.
3. Go to the *Remote Sense* setting using the scroll wheel and press *Enter*. Turn the setting on or off and press *Enter* again to confirm.



Remote Sense


ON, OFF

Exit

4. Press *Exit[F4]* to exit from the MISC Configuration settings.



## Example

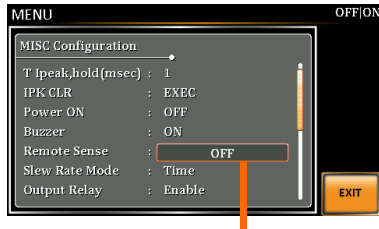

Remote Sense setting




Remote sense function for AC-INT, DC-INT, AC-SYNC mode and 100V, 200V range and SIN wave shape and slew rate mode on Time Only.

## Display

When the remote sense function is on, the displayed voltage value is the voltage measured at the sense terminal and the symbol “SENS” is displayed on the status bar for standard and simple mode display.


SENS displayed

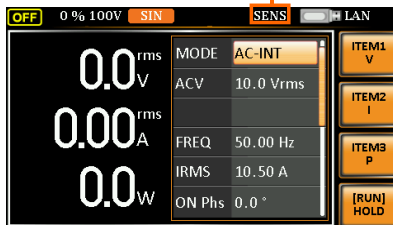



Before connecting the remote sense cables, turn off the output and peripherals. Please see page 82 for more information on the remote sense cabling instructions.

If the remote sense wires are loose or falling (specifically the remote sense terminal + and the load terminal L & N), the display would show a warning message as below.

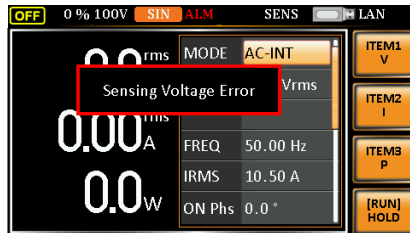

## 5-6. Slew Rate Mode

The slew rate, which is described as the fluctuating change of voltage per unit of time, can be customized by user in the 2 modes containing Time and Slope elaborated below for ASR models.


Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.
3. Go to the *Slew Rate Mode* setting using the scroll wheel and press *Enter*. Choose the slew rate mode and press *Enter* again to confirm.




---

**Time** Regardless of the output voltage scale, the rising time of slew rate is definitely no more than 100us.

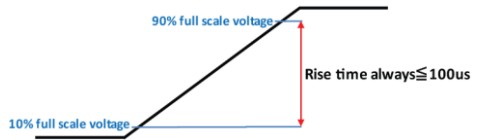

**Slope** The rising slew rate is constantly fixed in 1.5 V/us with varied rising time in accord with differed output voltage scale.

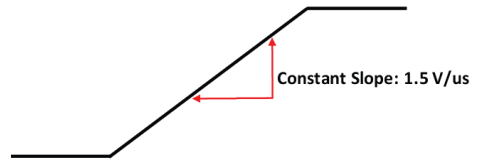

Exit

4. Press *Exit[F4]* to exit from the MISC Configuration settings.




Note

Voltage drop occurs in output voltage due to the set waveform or frequency under the Slope mode. It is suggested to adopt the Time mode when precise sine wave voltage output is required.

---

Example

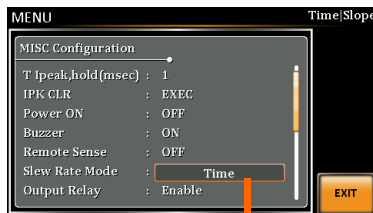

Slew Rate setting

---


## 5-7. Output Relay

The internally built-in output relay function has close relation with the power output function by default. That is to say, when output is on, the output relay will be activated if output relay is enabled; by contrast, the output relay will be deactivated when output is off. On the other hand, output relay function disabled means output terminal is under the condition of high impedance and output relay retains the state of conducting for good, which is suitable for the condition of turning output on/off rapidly.

---

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.
3. Go to the *Output Relay* setting using the scroll wheel and press *Enter*. Enable or disable output relay mode and press *Enter* again to confirm.



---

Output Relay      Enable, Disable


---

Exit

4. Press *Exit[F4]* to exit from the MISC Configuration settings.



Example

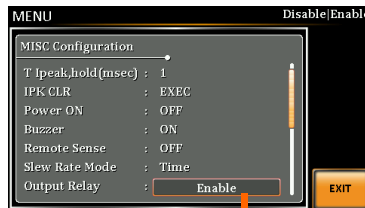

Output Relay setting

---

## 5-8. THD Format

Choose one of the THD (Total Harmonic Distortion) equations. The equations of 2 varied modes (IEC by default) of Harmonic Format below are for, specifically, by the time the upper limit of measured harmonic order is 40.

---

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.



2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.



3. Go to the *THD Format* setting using the scroll wheel and press *Enter*. Choose the harmonic mode and press *Enter* again to confirm.




---

IEC & Equation      The ratio of rms value of the second to the 100th harmonic component is computed to that of the fundamental.

$$\frac{\sqrt{\sum_{O=2}^N (F_o)^2}}{F_1} \times 100$$

---

CSA & Equation      The ratio of rms value of the second to the 100th harmonic component is computed to that of the rms value of the first to 100th component.

$$\left[ \frac{\sqrt{\sum_{O=2}^N (F_o)^2}}{\sqrt{\sum_{O=1}^N (F_o)^2}} \right] \times 100$$


---


- 
- Parameter
- $F_1$ : Fundamental (1st harmonic) component
  - $F_o$ : Fundamental or harmonic component
  - O: Measured harmonic order
  - N: Upper limit of measured harmonic order, which varies in accord with the fundamental frequency.
- 

Exit

4. Press *Exit*[F4] to exit from the MISC Configuration settings.



Example

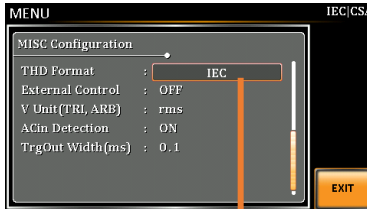

THD Format setting

## 5-9. External Control I/O

User can enable or disable the External Control I/O input. When External Control I/O input is set as disabled, the ASR series status will remain output.

---

### Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.
3. Go to the *External Control* setting using the scroll wheel and press *Enter*. Enable or disable External Control I/O and press *Enter* again to confirm selection.



---

### ON

Signal will be input from the pin 11 to the pin 17 of External Control I/O, and ASR series is able to receive external input signal and execute control action.


---

### OFF

Signal will be input from the pin 11 to the pin 17 of External Control I/O, and ASR series is Not able to receive external input signal.

---

### Example

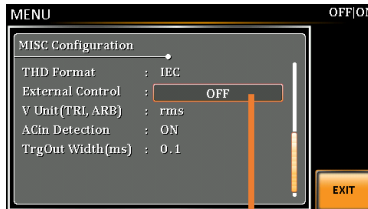

External Control setting



## 5-10. V Unit

User can freely select voltage set value unit as either RMS or PEAK only when output waveform is selected TRI or ARB.

---

### Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.
3. Go to the *V Unit* setting using the scroll wheel and press *Enter*. Choose the setting voltage unit and press Enter again to confirm selection.



---


rms     Set the setting voltage unit to rms for all of output waveform.

---

p-p     Set the setting voltage unit to peak for TRI and ARB output waveform only.

---

### Example

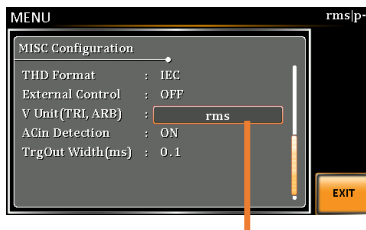




V unit setting


## 5-11. ACin Detection

This function, in essence, allows user to enable or disable the input power detection.


---

- |       |  |   |
|-------|--|---|
| Steps | 1. Press the <i>Menu</i> key. The Menu setting will appear on the display.   |  |
|       | 2. Use the scroll wheel to go to item 2, <i>MISC Configuration</i> and press <i>Enter</i> .  |  |
|       | 3. Go to the <i>ACin Detection</i> setting using the scroll wheel and press <i>Enter</i> . Enable or disable ACin Detection and press <i>Enter</i> again to confirm selection. |  |
- 

ON When Output is On and it detects input power abnormal, the message “Power Input Anomaly” will be displayed. Be noted that buzzer sounds and ALM status shows when Buzzer is On.

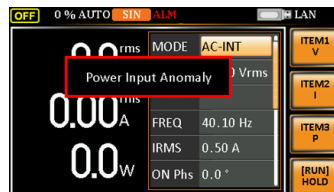


When Output is Off and it detects input power abnormal, the message “System Shutdown” will be displayed. Be noted that buzzer couldn’t sound and ALM status couldn’t show when Buzzer is On.

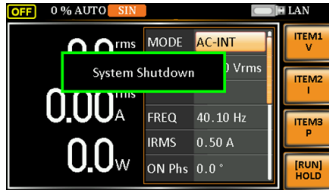

**OFF** Neither buzzer beep nor warning message will be shown when it detects input power abnormal regardless of Buzzer activation or not.

### Example

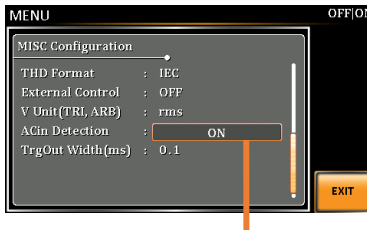

ACin Detection setting



Note

When “Power Input Anomaly” or “System Shutdown” message appears, it is Not available to operate any button or execute any SCPI command. Besides, SCPI Error message will be shown on the condition of System Error.

## 5-12. Trigger Out Width

This function, which is paired with External Control I/O pin, generates a TTL pulse signal output synchronously with output waveform.

---

- When the set time of Pulse Width is greater than a period time of output frequency, output Pulse maintains High Level.
- The Trigger signal generates in 0 degrees only.
- This function can be executed under AC+DC mode, even DC Offset is configured.
- This function is Not available for DC-INT, AC+DCEXT and AC-EXT modes.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.



2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.



3. Go to the *TrgOut Width(ms)* setting using the scroll wheel and press *Enter*. Set the time and press *Enter* again to confirm.




TriOut Width 0.1 ~ 60.0 ms

Exit


4. Press *Exit[F4]* to exit from the MISC Configuration settings.



## Example

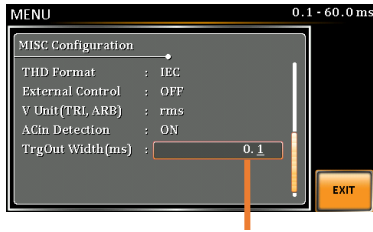

ACin Detection setting

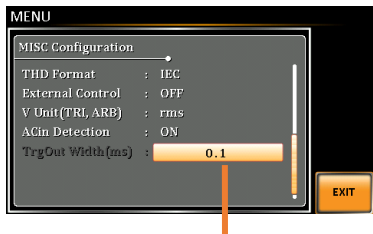


It is grey-out under unavailable modes, but value can be set still.


The actual waveform –  
AC-INT Mode,  
Frequency  
900Hz,  
TrgOut Width  
0.1 ms



The actual waveform –  
AC-INT Mode,  
Frequency  
900 Hz,  
TrgOut Width  
1 ms

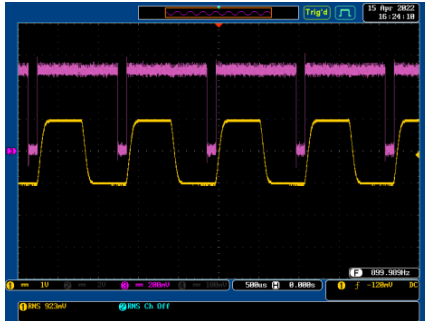

The actual waveform –  
AC-INT Mode,  
Frequency  
900 Hz,  
TrgOut Width  
1.1 ms

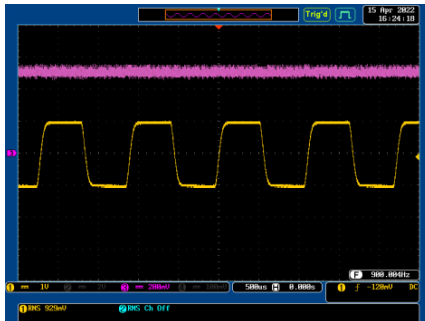

## 5-13. Data Average Count

Sets the number of times the measured values are averaged.  
The averaging method is moving average.

---



Note

The items to which the average setting is applied are  
Vrms/Vmax/Vmin/Irms/Imax/Imin/PF/CF/P/S/Q.


The following items do not apply:

Vavg/lavg/lpkh/Freq/THDv/THDi


In addition, setting by item is not possible.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.

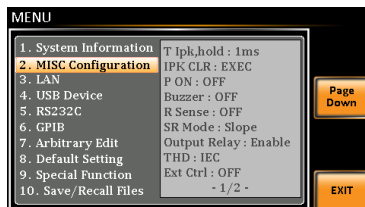

3. Go to the *Data Average Count* setting using the scroll wheel and press *Enter*.

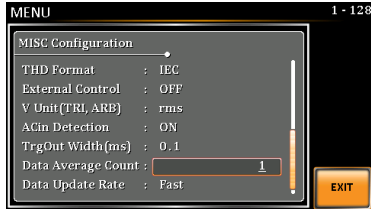

4. Set the count using the scroll wheel.

Data Average Count 1~128  
Default:1



5. Press *Enter* to confirm.

Exit

6. Press Exit[F4] to exit from the MISC Configuration settings.





## 5-14. Data Update Rate

Sets the display update rate for measured values.

---



Note

The items to which the average setting is applied are  
Vrms/Vmax/Vmin/Irms/Imax/Imin/PF/CF/P/S/Q.



The following items do not apply:

Vavg/lavg/lpkh/Freq/THDv/THDi


In addition, setting by item is not possible.

Steps

1. Press the *Menu* key. The Menu setting will appear on the display.
2. Use the scroll wheel to go to item 2, *MISC Configuration* and press *Enter*.

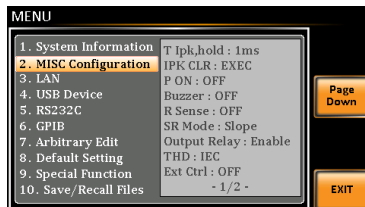

3. Go to the *Data Update Rate* setting using the scroll wheel and press *Enter*.

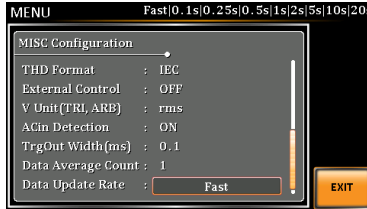

4. Set the update rate using the scroll wheel.

Fast | 0.1s | 0.25s | 0.5s | 1s | 2s |  
5s | 10s | 20s  
Default:Fast



5. Press *Enter* to confirm.

Exit

6. Press Exit[F4] to exit from the MISC Configuration settings.



## 6. TEST MODE FUNCTION

There are two test modes, Sequence Mode and Simulate Mode respectively, available for user to execute. Refer to the following chapters for details in necessity.

---

### 6-1. Sequence Mode

#### 6-1-1. Sequence Mode Overview

---


##### Background

The Sequence function works with DC-INT, AC-INT and AC+DC-INT modes with full AC waveforms containing sine, square, triangle as well as arbitrary. The available parameters, which will be introduced in later sectors, vary depending on selected output modes.

A Sequence function is comprised of up to the maximum 999 steps.

---

##### Setting Screen Overview

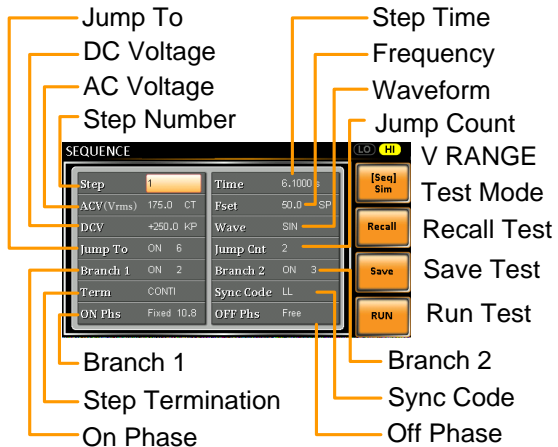

---


Sequence  
Parameter  
Overview

The Sequence function is comprised of a minimum of 2 steps that are executed in user defined sequences.

Each step can have different step time, voltage level, start & stop phase, frequency and wave.


Note: Step 0 is assigned as a “Standby” step. At the end of the test the unit will shift to the standby step.

---

Step	Assigns the step number.
Time	Sets the step duration time. This step time is exclusive of any transition time needed to match start phases and stop phase. See the diagram on page 137 for details.
ACV	<p>Sets the AC voltage level. There are 3 secondary voltage settings that determine how the voltage is output.</p> <p>CT: Sets the voltage level of the step immediately to ACV values.</p> <p>KP: Sets the voltage level to “keep” the voltage of the previous step.</p> <p>SP: Linearly increases or decreases the values from the end of the previous step to the end of the current step.</p> <p> Note: it is available for AC+DC-INT and AC-INT modes only.</p>

---

---

DCV	<p>Sets the DC voltage level. There are 3 secondary voltage settings that determine how the voltage is output.</p> <p>CT: Sets the voltage level of the step immediately to DCV values.</p> <p>KP: Sets the voltage level to “keep” the voltage of the previous step.</p> <p>SP: Linearly increases or decreases the values from the end of the previous step to the end of the current step.</p>
	<p>Note: it is available for AC+DC-INT and DC-INT modes only.</p>


---

AC/DC Voltage Range (ACV/DCV)	<p>There are 2 voltage range settings: HI 200V &amp; LO 100V, which result in varied ranges of ACV and DCV values, respectively.</p>
-------------------------------	--

---

Fset (Frequency)	<p>Sets the frequency of the step. There are 3 secondary frequency settings that determine how the frequency is output.</p> <p>CT: Sets the frequency level of the step immediately to Fset values.</p> <p>KP: Sets the frequency level to “keep” the frequency of the previous step.</p> <p>SP: Linearly increases or decreases the frequency from the end of the previous step to the end of the current step.</p>
------------------	--

---

	<p>Note: it is available for AC+DC-INT and AC-INT modes only.</p>
---	---

---

---

Wave	Sets the outputting waveform of the step. Up to 4 waves including sine, square, triangle and arbitrary (1-16) wave shapes are available.
------	--

---



Note: it is available for AC+DC-INT and AC-INT modes only.

---

Jump To	The Jump To setting determines which step to jump to at the end of the step. If Jump To is turned off, the unit will follow the Term (Step termination) setting for the step.
---------	---

---

Jump Cnt	Determines the number of times to loop the jump step.
----------	---

---

Branch1/ Branch2	The Branch settings allow you to make a selectable branch within the sequence when the sequence is running or on hold. The branch1 or branch2 actions are enabled by pressing the <i>F1</i> or <i>F2</i> function keys, or by using the :TRIG:SEQ:SEL:EXEC remote control command. After the branch step(s) have completed the unit will return back to the step from which the branch was executed and continue to run the step from where it left off.
---------------------	--

---

---

Term (Termination)	Determines the step termination settings at end of the step.  The CONTI setting tells the sequence to go to the next step.  The HOLD setting will pause the output at the end of the step and will only continue to the next step when CONTI [F3] is pressed.  The END setting will end the sequence and go to Step 0(standby step).
-----------------------	--

---

Sync Code	Sets the synchronous code including LL, LH, HL and HH for each step.
-----------	--

---

ON/OFF Phs	Sets the start and stop phase of the AC waveform for each step. The ON Phs setting sets the starting phase <i>of the step</i> .  OFF Phs sets the off phase <i>for the output</i> when the output if turned off.
------------	---

---




Note: it is available for AC+DC-INT and AC-INT modes only.

---




The Remote Sense will be forcibly set OFF and Slew Rate Mode is set to time after entering the SEQ Mode. It will automatically return to the previous setting after exiting from the SEQ Mode.

## Sequence Example

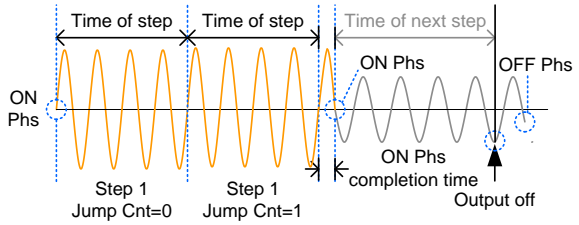

## Process Flow in Sequence Step

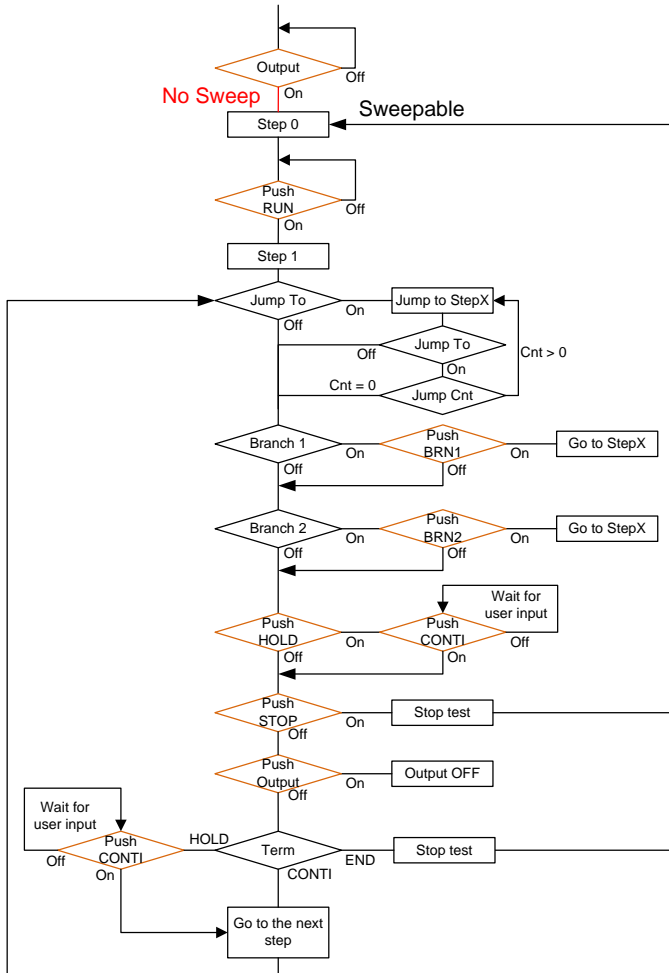



## 6-1-2. Sequence Settings

Entering the Sequence Menu

1. Press *Test* key.



Alternatively, it is available to navigate, with scroll wheel, to the *TEST SEQ...* option followed by pressing the *Enter* key to enter the *SEQUENCE* menu.



It is available for AC+DC-INT, AC-INT and DC-INT modes only.

2. Press *Seq/Sim[F1]* key to toggle to the *SEQUENCE* Mode  
Sequence Mode



F1 soft-key



It is available for AC+DC-INT mode only.

Steps

3. Use the scroll wheel to go to the *Step* setting and press *Enter*.
4. Use the scroll wheel to select the step number. 0 is always the starting step for the sequence.

Step 0 ~ 999

5. Go to the *Time* setting and set the duration of the step.

Time 0.0001 ~ 999.9999s

6. In order to adjust both ACV and DCV voltage range between HI and LO, it is required to set up outside of the SEQUENCE menu. Refer to the page 47 for details. The selected range will be shown on the top bar.

Range



Range LO - 100V, HI - 200V

- Go to the *ACV* setting and set the output voltage for the step. If you input an *ACV* value that is not within the voltage range, the warning message below will be shown.



Next set the secondary voltage settings to determine characteristics of the voltage output.

ACV	0.0 ~ 400.0V (Range 200V)
	0.0 ~ 200.0V (Range 100V)

Secondary settings	CT (Constant), KP (Keep), SP (Sweep)
--------------------	--------------------------------------

Note: Step 0 can only be set to either CT or SP.

- Go to the *DCV* setting and set the output voltage for the step. If you input a *DCV* value that is not within the voltage range, the warning message below will be shown.



Next set the secondary voltage settings to determine characteristics of the voltage output.

DCV	0.0 ~ 570.0V (Range 200V)
	0.0 ~ 285.0V (Range 100V)


Secondary settings	CT (Constant), KP (Keep), SP (Sweep)
--------------------	--------------------------------------

Note: Step 0 can only be set to either CT or SP.




Step 0 can only be set to either CT or SP. *ACV* setting range varies when Wave is TRI or ARB1~16. The setting range is 0~570 Vpp or 0~1140 Vpp when V Unit is set p-p.

- Go to the *Fset* setting and set the frequency of the step. If you input a frequency value that is not within the range, the warning message below will be shown.



Fset	1.0 ~ 999.9Hz
Secondary settings	CT (Constant), KP (Keep), SP (Sweep) Note: Step 0 can only be set to either CT or SP.
10. Go to the <i>Wave</i> setting and choose which waveform to output.	
Wave	SIN, SQU, TRI, ARB1 - 16
11. Go to the <i>Jump To</i> setting and choose which step to jump to, or turn the setting off.	
Step	ON, OFF, 0 ~ 999
12. Go to the <i>Jump Cnt</i> setting and set the number of times the current step will loop.	
Jump Cnt	1 ~ 9999, 0 Note: A setting of 0 will set the number of jump step to be infinite.
13. Go to the <i>Branch 1/2</i> setting and set a step to branch to.	
Branch 1, 2	ON, OFF, 0 ~ 999
14. Go to the <i>Term</i> setting and set the step termination setting. CONTI will automatically go to the next step at the end of the step. END will return to step 0. HOLD will stay at the current step until you allow the sequence to continue to the next step.	
Term	CONTI, END, HOLD
15. Go to the <i>Sync Code</i> setting and set the synchronous code when the step has started.	
Sync Code	LL, LH, HL, HH
16. Go to the <i>ON Phs</i> setting and set the starting phase of the step. The <i>Fixed</i> indicates user-defined degree.	
ON Phase	Free, Fixed
ON Phase	0.0 ~ 359.9°
Resolution	0.1°
17. Go to the <i>OFF Phs</i> setting and set the end phase of the step. The <i>Fixed</i> indicates user-defined degree.	
OFF Phase	Free, Fixed
OFF Phase	0.0 ~ 359.9°
Resolution	0.1°

## Example of Using Sequence Function

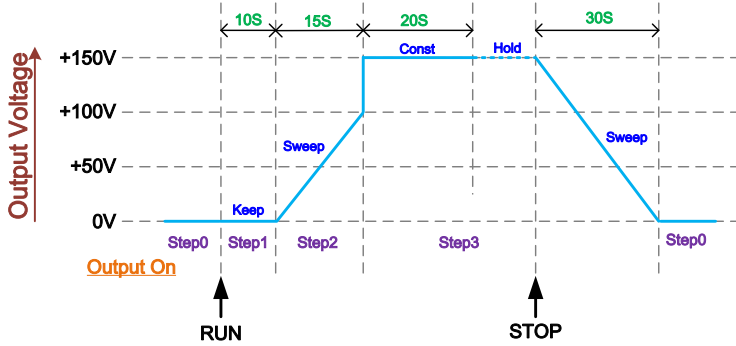

The example above shows how to generate a test procedure in DC-INT mode by each step.

Step no.	0	1	2	3
Step Time	30 s	10 s	15 s	20 s
DCV	0 V	50 V	100 V	150 V
2 <sup>nd</sup> Setting	SP	KP	SP	CT
Term	---	CONTI	CONTI	HOLD

### 6-1-3. Save a Sequence to Local Memory

---

Saving a Sequence

Sequence settings can be saved to one of 10 memory slots (SEQ0 ~ SEQ9).

Steps

1. Press *Save*[F3] key firstly.
2. A list of memory slots prompts where it is available to use scroll wheel followed by pressing *Enter* to execute save action.
3. A prompt message will appear when the save action is successful.



---

Save                      SEQ0 ~ SEQ9

### 6-1-4. Recall a Sequence from Local Memory

---

Recall a Sequence

Sequence settings can be recalled from one of 10 memory slots (SEQ0 ~ SEQ9).

Steps

1. Press *Recall*[F2] key firstly.
2. A list of memory slots prompts where it is available to use scroll wheel followed by pressing *Enter* to execute recall action.
3. A message will appear when the settings are recalled successfully.



---

Recall                      SEQ0 ~ SEQ9




## 6-1-5. Manage Sequence Settings



Sequence settings can be easily saved to or from a USB flash drive using the *Save/Recall Files* utility in the Menu system. Files can also be deleted from local memory using the utility.

File Format	<p>When files are saved to USB they are saved in the following format: SEQX.SEQ, where X is the memory number 0 ~ 9 (SEQ0 ~ SEQ9). The files are saved to USB:/texio.</p> <p>When files are recalled from USB, files must be recalled from the same memory number. For example, the file SEQ0. SEQ can only be recalled to memory number SEQ0. The files can only be recalled from the USB:/texio directory.</p> <p>Usable USB flash drive is format type FAT32, up to 32GB.</p>
-------------	--




Note

Steps	<ol style="list-style-type: none"> <li>1. Press the <i>Menu</i> key. The Menu settings will appear on the display.</li> <li>2. Use the scroll wheel to go to item 10, <i>Save/Recall Files</i> and press <i>Enter</i>.</li> <li>3. Go to the <i>Type</i> setting using the scroll wheel and press <i>Enter</i>. Select <i>SEQUENCE</i> and press <i>Enter</i> to confirm.</li> <li>4. Go to the <i>Action</i> setting and choose the file operation and then press <i>Enter</i>.</li> </ol>	  
	MEM→USB	Saves the selected sequence memory from the local memory to a USB flash drive.
	MEM←USB	Loads the sequence memory from a USB flash drive to the selected local memory.
	Delete	Deletes the selected sequence memory from local memory.
	5.	Go to the <i>Memory No.</i> setting and select the sequence memory number to perform the operation on. Press <i>Enter</i> to confirm.


	Memory No. 0 ~ 9 (SEQ0 ~ SEQ9)	
Execute File Operation	6. Press <i>EXE</i> [F1] key to perform the file operation.	
Exit	7. Press <i>EXIT</i> [F4] key to exit from the <i>Save/Recall Files</i> settings.	

Example

Load file from USB to Local memory

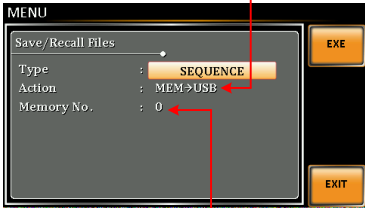

Memory No. 0 selected

All Data Operation	8. Go back to the <i>Type</i> setting using the scroll wheel and press <i>Enter</i> . Select <i>All Data</i> and press <i>Enter</i> to confirm.	
	9. Go to the <i>Action</i> setting and choose the file operation and then press <i>Enter</i> .	


MEM→USB	Saves all the files including Preset, Sequence, Simulate and ARB from the local memory to a USB flash drive.
---------	--

MEM←USB	Loads all the files including Preset, Sequence, Simulate and ARB from a USB flash drive to the local memory.
---------	--

Delete	Deletes all the files including Preset, Sequence, Simulate and ARB from local memory.
--------	---

Example


All Data option selected

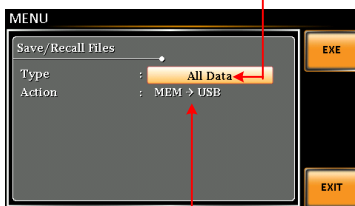


Save all data from  
Local memory to USB

Default Sequence Setting

SEQ6 Momentary drop in supply voltage

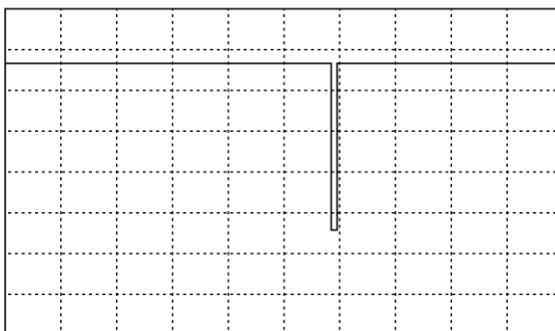


SEQ7 Reset test for Level1 systems with 12V

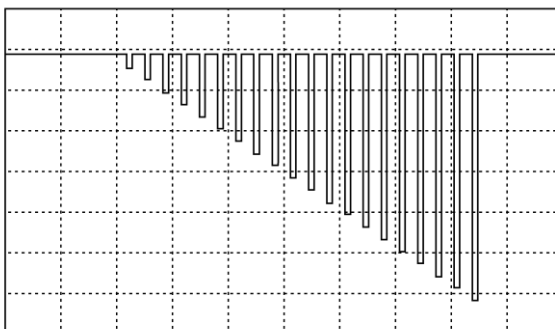




---

SEQ8 Starting Profile

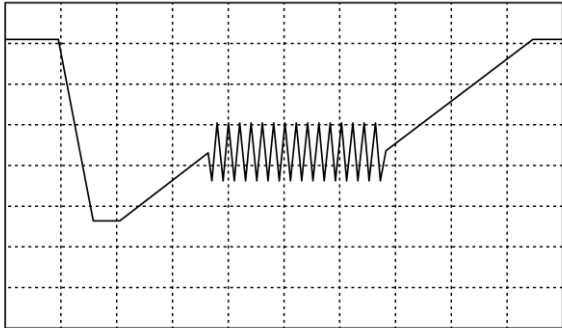

---

SEQ9 Test2 Tr: 10ms, Td: 40ms

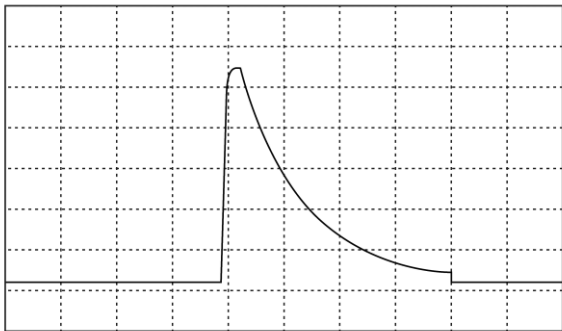

Note

Only FW version V1.07 above can support the above default waveform.

---

## 6-1-6. Running a Sequence

**Background** When running a sequence, the display changes to the sequence run view.

**Run Screen Overview**

Settings

SEQUENCE		1 / 999	
ACV	43.3 Vrms	WAVE	ARB15
DCV	173.2 V	FREQ	50.0 Hz
V	178.7 Vrms	S	4.3 VA
I	0.02 Arms	PF	0.000
P	0.0 W	CF	1.35

Readback measurements

Step X of Y

Branch 1

Branch 2

HOLD/CONTI test

STOP/RUN test

- Steps**
1. Press *Output*. Output
  2. Press *RUN[F4]* key. The test will start to run. The settings of current step will be shown at the top of the screen and the measurement readout will be shown on the bottom of the screen. The top-right of the screen will display the current step number by the total number of steps (current step/total steps).
  3. The test will continue to run until the last step has run, or *Stop[F4]* key is pressed. When the test has finished/stopped, the screen will return to the original settings screen.
  4. If any of the steps have a conditional branch configured, the branch can be manually evoked during run time by pressing the *BRN1[F1]* soft-key (branch 1) or the *BRN2[F2]* soft-key (branch 2). Alternatively, the `:TRIG:SEQ:SEL:EXEC` command can also be used to evoke a conditional branch.

**Hold Test** 5. To pause the test mid-way, press *HOLD[F3]* key.

**Continue Test** 6. To continue a paused test, press *CONTI[F3]* key.

## 6-2. Simulate Mode

### 6-2-1. Simulate Mode Overview

#### Background

The Simulate function, which works in AC+DC-INT mode only, is used to test power supply fluctuation. This function is able to simulate common abnormalities in mains power such as fluctuations in voltage, phase and frequency. These simulations can be run as one-off anomalies or cyclic anomalies.

#### Setting Screen Overview

The screenshot shows the SIMULATE setting screen with a waveform graph at the top. The graph displays a sine wave with a dashed line indicating a transition. Below the graph, the settings are as follows:

Step	Normal 2	Time	0.1000 s	Repeat	
ACV	0.0 Vrms	ON Phs	Free	ON	2
Fset	50.0	OFF Phs	Free		
Wave	SIN	Code	LL		

On the right side of the screen, there are several buttons: Seq [Sim], Recall, Save, and RUN. The V RANGE and Test Mode are also indicated.

Labels pointing to the screen elements:

- Step Wave
- Step Frequency
- Step Voltage
- Step
- Number of Repeat
- Step Time
- ON/OFF Phase
- Sync Code

#### Step Overview

The Simulate function is comprised of 6 steps. Each step is run sequentially in the following order: Initial, Normal1, Trans1, Abnormal, Trans2, Normal2 and Initial.

**Initial** The Initial step is used as the initial and final settings of the waveform simulation. This is the standby step before the test starts and the standby step after the test ends.

**Normal1** This step configures the normal output conditions that precede the abnormal conditions.

---

**Trans1** This step configures the transition from normal to abnormal conditions. This step will linearly interpolate the normal settings to the abnormal settings. This step can be skipped for abrupt state changes.

---

**Abnormal** This step contains the abnormal conditions for the simulation.


---

**Trans2** This step configures the transition from abnormal to normal conditions.

---

**Normal2** This step configures the normal conditions that supersede the abnormal conditions.

---

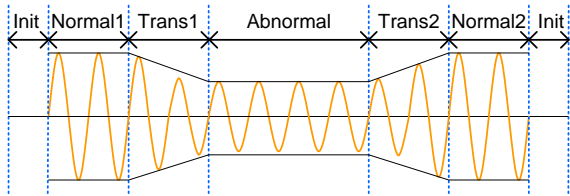


**Parameter Overview**

The following table shows which parameters are available for each step.

Step	Initial	Normal1	Trans1	Abnormal	Trans2	Normal2
Time	X	✓	✓	✓	✓	✓
ACV	✓	✓	X	✓	X	X
ON Phs	✓	✓	X	✓	X	✓
Fset	✓	✓	X	✓	X	X
OFF Phs	✓	✓	X	✓	X	✓
Wave	SIN	SIN	X	SIN	X	X
Code	✓	✓	✓	✓	✓	✓
Repeat	✓	✓	✓	✓	✓	✓

Time	Sets the duration time of the step. When the ON Phs=ON, the total duration of the step is equal to the Time setting + ON Phs=ON duration.
ACV	Sets the voltage of the step. Not applicable for the Trans 1/2 steps and the Normal2 step.
ON Phs	Sets the starting phase of the waveform for the step. Not applicable for the Trans 1/2 steps.
Fset	Sets the frequency of the step. Not applicable for the Trans 1/2 steps and the Normal2 step.
OFF Phs	Sets the off phase of the waveform after the output has been turned off. Not applicable for the Trans 1/2 steps.
Wave	Fixed to SIN. Not applicable for the Trans 1/2 steps and the Normal2 step.
Code	Sets the synchronous code including LL, LH, HL and HH for the duration of the step.
Repeat	Indicates the number of times the simulation will be run, from Normal1 to Normal2.  A value of 0 indicates infinite repeats. The repeat setting is the same for each step.

The following diagram illustrates the relationship between each of the parameters in a step.

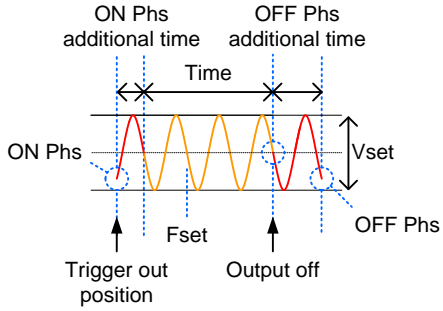

After entering the SIM Mode, it will forcibly set Remote Sense OFF and Time Slew Rate.

## 6-2-2. Simulate Settings

Entering the Simulate Menu

1. Press *Test* key.




Alternatively, it is available to navigate, with scroll wheel, to the *TEST SIM...* option followed by pressing the *Enter* key to enter the *SIMULATE* menu.



It is available for AC+DC-INT mode only.


2. Press *Seq/Sim[F1]* key to toggle to the *SIMULATE* Mode.  
Simulate Mode

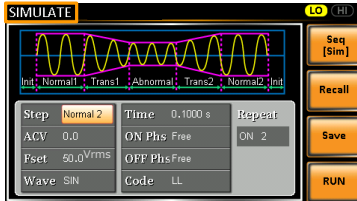

F1 soft-key

Steps

3. Use the scroll wheel to go to the *Step* setting and press *Enter*.
4. Use the scroll wheel to select one of the simulate steps and press *Enter*.




Steps      Initial, Normal1, Trans1, Abnormal, Trans2, Normal2

5. Go to the *Time* setting and set the duration of the step.


Time      0.0001 ~ 999.9999s (Normal1, Normal2 and Abnormal)  
 0.0000 ~ 999.9999s (Trans1 and Trans2)  
 Note: For Trans1 and Trans2, it supports a value of 0, which will skip the step.

6. In order to adjust ACV voltage range between HI and LO, it is required to set up outside of the SIMULATE menu. Refer to the page 47 for details. The selected range will be shown on the top bar.



Range LO - 100V, HI - 200V


7. Go to the ACV setting and set the Vrms level of the step. If you input an ACV value that is not within the voltage range, the warning message below will be shown.  
Not applicable for Trans1, Trans2 and Normal2.

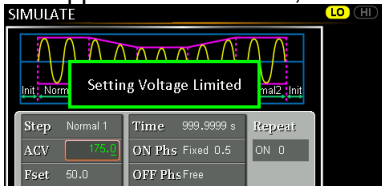

ACV 0.0 ~ 400.0V (Range 200V)  
0.0 ~ 200.0V (Range 100V)

8. Go to the *ON Phs* setting and set the starting phase of the step.  
Not applicable for Trans1 and Trans2.  
ON Phase Free, Fixed  
ON Phase 0.0 ~ 359.9°  
Resolution 0.1°

9. Go to the *Fset* setting set the frequency of step. If you input a frequency value that is not within the range, the warning message below will be shown.  
Not applicable for Trans1, Trans2 and Normal2.

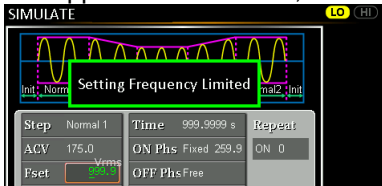

Fset 1.0 ~ 999.9Hz

10. Go to the *OFF Phs* setting and set the end phase of the step.  
Not applicable for Trans1 and Trans2.



---

OFF Phase Free, Fixed

---

OFF Phase 0.0 ~ 359.9°

---

Resolution 0.1°

---

11. The *Wave* setting fixed to SIN.

Not applicable for Trans1, Trans2 and Normal2.

---

*Wave* SIN

---

12. Go to the *Code* setting and set the synchronous code of the step.

---

*Code* LL, LH, HL, HH

---

13. Lastly, go to the *Repeat* parameter select the number of times the simulation will repeat the Normal1-Trans1-Abnormal-Trans2-Normal2 sequence of steps. A value of 0 will set the number of repetitions to infinite.

---

*Repeat* 1 ~ 9999, 0(infinite)

---

### 6-2-3. Save a Simulation to Local Memory


---

Saving a Simulation

Simulation settings can be saved to one of 10 memory slots (SIM0 ~ SIM9).

Steps

1. Press *Save*[F3] key firstly.
2. A list of memory slots prompts where it is available to use scroll wheel followed by pressing *Enter* to execute save action.
3. A prompt message will appear when the save action is successful.



---

Save            SIM0 ~ SIM9

### 6-2-4. Recall a Simulation from Local Memory

---

Recall a Simulation

Simulation settings can be recalled from one of 10 memory slots (SIM0 ~ SIM9).

Steps

1. Press *Recall*[F2] key firstly.
2. A list of memory slots prompts where it is available to use scroll wheel followed by pressing *Enter* to execute recall action.
3. A message will appear when the settings are recalled successfully.



---

Recall            SIM0 ~ SIM9

## 6-2-5. Manage Simulation Settings

Simulation settings can be easily saved to or from a USB flash drive using the Save/Recall Files utility in the Menu system. Files can also be deleted from local memory using the utility.

---

**File Format** When files are saved to USB they are saved in the following format:  
SIMX.SIM, where X is the memory number 0 ~ 9 (SIM0 ~ SIM9). The files are saved to USB:/texio.

When files are recalled from USB, files must be recalled from the same memory number. For example, the file sim0.sim can only be recalled to memory number SIM0. The files can only be recalled from the USB:/texio directory.

---



note

Usable USB flash drive is format type FAT32, up to 32GB.

---

**Steps**

1. Press the *Menu* key. The Menu settings will appear on the display.



2. Use the scroll wheel to go to item 10, *Save/Recall Files* and press *Enter*.



3. Go to the *Type* setting using the scroll wheel and press *Enter*. Select *SIMULATE* and press *Enter* to confirm.



4. Go to the *Action* setting and choose the file operation and then press *Enter*.

---

**MEM→USB** Saves the selected simulation memory from the local memory to a USB flash drive.

---

---

MEM←USB	Loads the simulation memory from a USB flash drive to the selected local memory.
---------	--

---

Delete	Deletes the selected simulation memory from local memory.
--------	---

---

5. Go to the *Memory No.* setting and select the simulation memory number to perform the operation on. Press *Enter* to confirm.
- 

Memory No.	0 ~ 9 (SIM0 ~ SIM9)
------------	---------------------

---

Execute File Operation

---

6. Press *EXE[F1]* key to perform the file operation.



Exit


---

7. Press *EXIT[F4]* key to exit from the *Save/Recall Files* settings.



Example

Load file from USB to Local memory

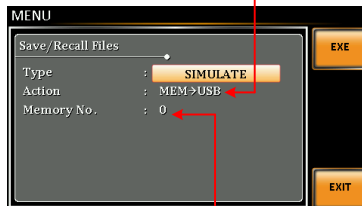

Memory No. 0 selected

---

All Data Operation

8. Go back to the *Type* setting using the scroll wheel and press *Enter*. Select *All Data* and press *Enter* to confirm.

9. Go to the *Action* setting and choose the file operation and then press *Enter*.
- 

MEM→USB	Saves all the files including Preset, Sequence, Simulate and ARB from the local memory to a USB flash drive.
---------	--

---


---

MEM←USB	Loads all the files including Preset, Sequence, Simulate and ARB from a USB flash drive to the local memory.
Delete	Deletes all the files including Preset, Sequence, Simulate and ARB from local memory.

---

### Example

All Data option selected

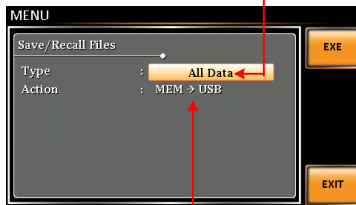


Save all data from  
Local memory to USB

## 6-2-6. Running a Simulation

**Background** When running a simulation, the display changes to the simulate run view.

**Run Screen Overview**

**Settings**



The screenshot shows a control panel with the following data:

ACV	0.3 Vrms	WAVE	SIN
FREQ	50.0 Hz		
V	0.5 Vrms	S	0.0 VA
I	0.01 Arms	PF	0.316
P	0.0 W	CF	1.52

Additional elements: "SIMULATE" at the top left, "3 / 5" at the top right, and "HOLD" and "STOP" buttons on the right. A vertical line separates the settings from the measurements.

**Readback measurements**

Step X of Y

HOLD/CONTI test

STOP/RUN test

**Steps**

1. Press *Output* key.



2. Press *Run[F4]* key. The test will start to run.

The settings of current step will be shown at the top of the screen and the measurement readout will be shown on the bottom of the screen.

The top-right of the screen will display the current step number of the simulation.

1/5 = Normal1

2/5 = Trans1

3/5 = Abnormal

4/5 = Trans2

5/5 = Normal2

3. The test will continue to run until the last repeat step has run, or *Stop[F4]* key is pressed or the output is turned off\*. When the test has finished/stopped, the screen will return to the original settings screen.

\* If the OFF-phase has been set, the output will continue until the OFF-phase setting is satisfied.

**Hold Test**

4. To pause the test mid-way, press *HOLD[F3]* key.

**Continue Test**

5. To continued a paused test, press *CONTI[F3]* key.

## 7. COMMUNICATION INTERFACE

This chapter describes basic configuration of IEEE488.2 based remote control. For a command list, refer to the programming manual, downloadable from Our website, <https://www.texio.co.jp/>



If the instrument is remotely controlled via the USB/LAN/RS-232C/GP-IB interface, the panel lock is automatically enabled.

### 7-1. Interface Configuration

#### 7-1-1. Configure Ethernet Connection

The Ethernet interface can be configured for a number of different applications. Ethernet can be configured for basic remote control or monitoring using a web server or it can be configured as a socket server.

The ASR supports both DHCP connections so the instrument can be automatically connected to an existing network or alternatively, network settings can be manually configured.


---

Ethernet Parameters	MAC Address (display only)	DHCP
	IP Address	Subnet mask
	Gateway	DNS address
	DNS Server	Socket port fixed at 2268

---

Ethernet Configuration

1. Connect a LAN cable from the PC to the Ethernet port on the rear panel.
2. Press the *Menu* key. The Menu setting will appear on the display.



3. Use the scroll wheel to go to item 3, LAN and press *Enter*.



4. If the LAN cable is installed correctly a connection is active, the *Connection Status* will show *Online*.
5. To automatically have the network assign an IP address, set DHCP to ON. Otherwise set DHCP to OFF to manually set the Ethernet settings.

---

DHCP	ON, OFF
------	---------

---

6. If DHCP was set to OFF, configure the remaining LAN parameters.

---

IP Address

---

Subnet Mask

---

Gateway

---

DNS Server

---

Socket Port

---

**Note**

Socket Port is fixed to 2268.

---

LAN configuration - 1



LAN configuration - 2



**Exit**

7. Press *Exit[F4]* to exit from the LAN settings.





## 7-1-2. USB Remote Interface

---

USB Configuration	PC side connector	Type A, host
	ASR side connector	Rear panel Type B, slave
	Speed	1.1/2.0 (full speed)
	USB Class	CDC (communications device class)


---

### Steps

1. Connect the Type A-Type B USB cable from the PC to the rear panel USB B port.



2. Press the *Menu* key. The Menu setting will appear on the display.



3. Use the scroll wheel to go to item 4, *USB Device*.



4. If the connection is successful *Connection Status* will change from Offline to Online.

### Exit

5. Press *Exit[F4]* to exit from the rear panel USB settings.



## 7-1-3. USB Remote Control Function Check

---

**Functionality Check**            Invoke a terminal application such as Realterm.  
ASR will appear as a COM port on the PC.  
To check the COM settings in Windows, see the Device Manager.

---

**Note**                            If you are not familiar with using a terminal application to send/receive remote commands via a USB connection, please see page 167 for more information.

---

Run this query command via the terminal after the instrument has been configured for USB remote control (page 163).

\*IDN?

This should return the Manufacturer, Model number, Serial number, and Software version in the following format.

TEXIO TECHNOLOGY, ASRXXX-XXX,  
XXXXXXXXXX, XX.XX.XXXXXXXXXX

Manufacturer: TEXIO TECHNOLOGY

Model number : ASRXXX-XXX

Serial number : XXXXXXXXXXXX

Software version : XX.XX


---

**Note**                            For further details, please see the programming manual.


---

## 7-1-4. RS-232C Remote Interface

RS-232C Configuration	Connector Parameters	BD-9, male Baud rate, data bits, parity, stop bits.
-----------------------	----------------------	--

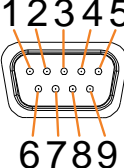
Pin Assignment		2: RxD (Receive data) 3: TxD (Transmit data) 5: GND 4, 6 ~ 9: No connection
----------------	---	--

Pin Connection	Use a Null Modem connection (RS-232C cable) as shown in the diagram below.
----------------	--

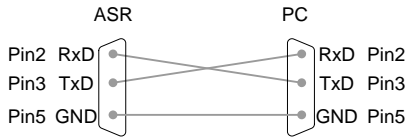

### Steps


1. Connect the RS-232C cable from the PC to the rear panel RS-232C port.
2. Press the *Menu* key. The Menu setting will appear on the display.
3. Use the scroll wheel to go to item 5, *RS232C* and press *Enter*.



4. Set the RS-232C relative settings.

Baud rate	1200, 2400, 4800, 9600(default), 19200, 38400, 57600, 115200,
Data bits	7 bits, 8 bits(default)
Parity	None(default), Odd, Even
Stop bits	1 bit(default), 2 bits

## RS232C Configuration

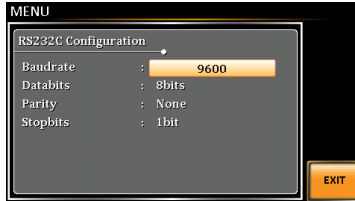

Exit

5. Press *Exit*[F4] to exit from the RS-232C settings.



Note

The optional 1 interface does Not include RS-232C data cable. Please purchase the additional GTL-232 which will meet your need for RS-232C connection.

### 7-1-5. RS-232C Remote Control Function Check

Functionality  
Check

Invoke a terminal application such as Realterm. For RS-232C, set the COM port, baud rate, stop bit, data bit and parity accordingly. To check the COM settings in Windows, see the Device Manager.

Note

If you are not familiar with using a terminal application to send/receive remote commands from the serial port, please see page 167 for more information.

Run this query command via the terminal after the instrument has been configured for RS-232C remote control (page 165).

\*IDN?

This should return the Manufacturer, Model number, Serial number, and Software version in the following format.

TEXIO TECHNOLOGY, ASRXXX-XXX,  
GXXXXXXXX, XX.XX

Manufacturer: TEXIO TECHNOLOGY

Model number : ASRXXX-XXX

Serial number : XXXXXXXXXXX

Software version : XX.XX


Note

For further details, please see the programming manual.

## 7-1-6. Using Realterm to Establish a Remote Connection

---


Background	<p>Realterm is a terminal program that can be used to communicate with a device attached to the serial port of a PC or via an emulated serial port via USB.</p> <p>The following instructions apply to version 2.0.0.70. Even though Realterm is used as an example to establish a remote connection, any terminal program can be used that has similar functionality.</p>
Note	<p>Realterm can be downloaded on Sourceforge.net free of charge. For more information please see <a href="http://realterm.sourceforge.net/">http://realterm.sourceforge.net/</a></p>
Operation	<ol style="list-style-type: none"><li>1. Download Realterm and install according to the instructions on the Realterm website.</li><li>2. Connect the ASR via USB (page 163) or via RS-232C (page 165).</li><li>3. If using RS-232C, make note of the configured baud rate, stop bits and parity.</li><li>4. Go to the Windows device manager and find the COM port number for the connection. For example, go to the Start menu &gt; Control Panel &gt; Device Manager. Double click the <i>Ports</i> icon to reveal the connected serial port devices and the COM port for the each connected device. If using USB, the baud rate, stop bit and parity settings can be viewed by right-clicking the connected device and selecting the <i>Properties</i> option.</li></ol>

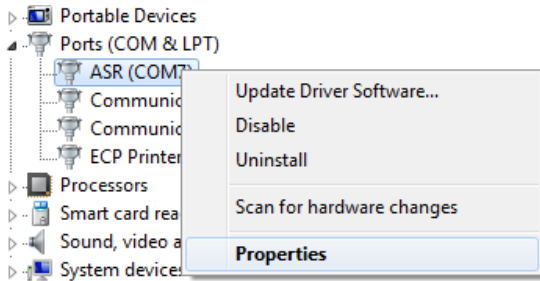

5. Start Realterm on the PC as an administrator.  
Click:

Start menu>All Programs>RealTerm>realterm  
 Tip: to run as an administrator, you can right click the Realterm icon in the Windows Start menu and select the *Run as Administrator* option.


6. After Realterm has started, click on the *Port* tab.  
 Enter the *Baud*, *Parity*, *Data bits*, *Stop bits* and *Port* number configuration for the connection.  
 The *Hardware Flow Control*, *Software Flow Control* options can be left at the default settings.  
 Press *Open* to connect to the ASR.

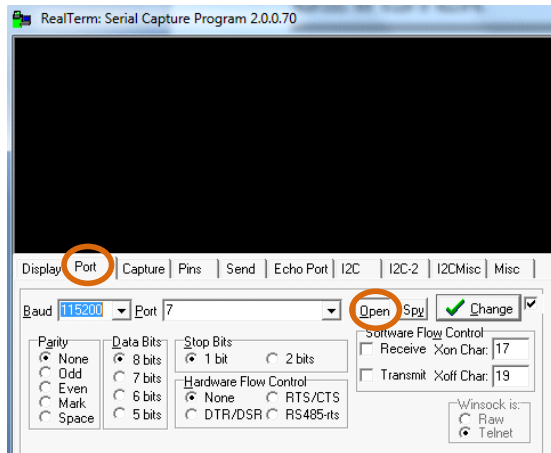

Note

For USB, the baud rate should be fixed to 115,200.

7. Click on the *Send* tab.  
 In the *EOL* configuration, check on the *+LF* check boxes.  
 Enter the query:  
*\*idn?*  
 Click on *Send ASCII*.

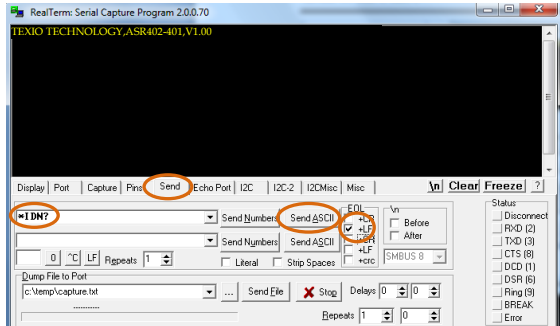

8. The terminal display will return the following:  
 TEXTIO TECHNOLOGY, ASRXXX-XXX,  
 XXXXXXXXXXX, XX.XX  
 (manufacturer, model, serial number, software version)
9. If Realterm fails to connect to the ASR, please check all the cables and settings and try again.

## 7-1-7. GP-IB Remote Interface

---

### GP-IB Configuration

1. Connect a GP-IB cable from the PC to the GPIB port on the rear panel.



2. Press the *Menu* key. The Menu setting will appear on the display.
3. Use the scroll wheel to go to item 6, *GPIB* and press *Enter*.




4. Set the GP-IB address.

---

GPIB Address      0 ~ 30 (10 by default)

---

### GPIB Configuration

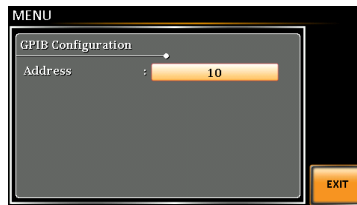

### Note

Only one GP-IB address can be used at a time.

### Exit

5. Press *Exit[F4]* to exit from the GPIB settings.



### GPIB Constraints

- Maximum 15 devices altogether, 20m cable length, 2m between each device
  - Unique address assigned to each device
  - At least 2/3 of the devices turned On
  - No loop or parallel connection
-



---

Note GP-IB data cable not included. Please purchase the additional CB-2420P which will meet your need for GP-IB connection.

## 7-1-8. GP-IB Function Check

---

Functionality Check Please use the National Instruments NI-488.2 (Measurement & Automation Controller software) to confirm GPIB functionality.

See the National Instrument website, <http://www.ni.com> for details.

---

Note

- For further details, please see the programming manual.

---

Operation

1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:




*Start>All Programs>NI MAX*



2. From the Configuration panel access;  
My System>Devices and Interfaces>GPIB0


3. Press the *Scan for Instruments* button.
4. In the *Connected Instruments* panel the ASR should be detected as *Instrument 0* with the address the same as that configured on the ASR.
5. Double click the *Instrument 0* icon.

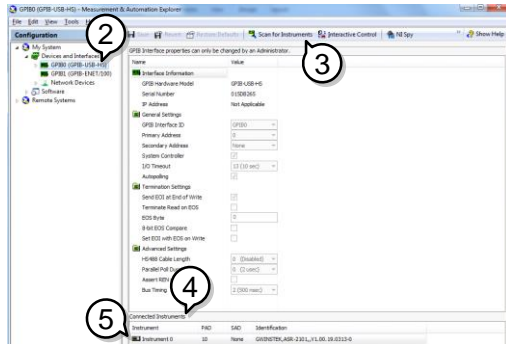

6. Click on *Communicate with Instrument*.
7. Under the Communicator tab, ensure *\*IDN?* is written in the *Send String* text box.
8. Click on the *Query* button to send the *\*IDN?* query to the instrument.
9. The instrument identification string will be returned to the buffer area:

TEXIO TECHNOLOGY, ASRXXX-XXX,  
XXXXXXXXXX, XX.XX

(manufacturer, model, serial number, software version)

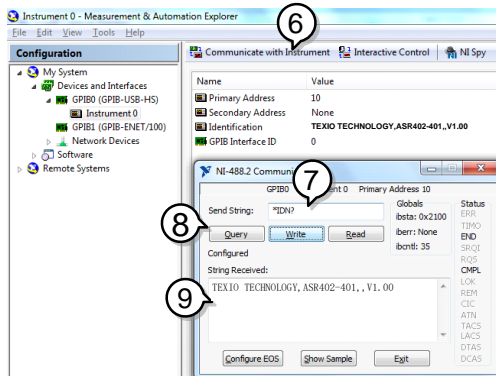

10. The function check is complete.

## 7-1-9. Web Server Remote Control Function Check

### Functionality Check

Enter the IP address of the power supply (for example: http:// XXX.XXX.XXX.XXX) in a web browser after the instrument has been configured for LAN (page 161).

The web interface allows you to:

- View the system and information and the network configuration.
- View the analog control pinout.
- View the dimensions of the unit.
- View the operating area
- Measurement :

Measurement and it is possible to as follow

Basic Controller

Basic settings and output ON/OFF


Sequence

Load and running sequences

Simulate

Load and running Simulate

Welcome Page



Welcome Page

Network

Configuration

Analog Control

Figure of

Dimensions

Operating Area

Measurement

ASR Series

Web Control Pages

Thanks For Your Using.

Use the left menu to select the features you need.

More How-to Please refer to user manual.



System Information

Manufacturer :	TEXIO TECHNOLOGY
Serial Number :	PR1340010
Description :	TEXIO TECHNOLOGY,ASR402-401G
Firmware Version :	1.30
Hostname :	A-1340010
mDNS Hostname :	A-1340010.local.
IP Address :	172.22.44.161
Subnet Mask :	255.255.0.0
Gateway :	172.22.41.254
DNS :	172.22.41.101
MAC Address :	00:22:24:00:00:0D
DHCP State :	ON

Copyright 2020 © TEXIO TECHNOLOGY CORPORATION All Right Reserved.



# Measurement Basic Controller

Measurement function is not available in firmware versions prior to V1.30.

The screenshot shows the 'Basic Controller' interface. The 'Measurement' tab is active. The 'Output Range' is set to 'AUTO'. The 'ACV Unit' is 'mV'. The 'Output Mode' is 'ACDC-INT'. The 'ACV' and 'DCV' values are both '+0.0000'. The 'Freq' is '50.0000 Hz'. The 'Off Phase' is checked. The 'Wave' is 'SIN'. The 'Gain' is '1'. The 'Output Off' button is highlighted in red.

Measurement

Operation

ON/OFF

# Measurement Sequence

The screenshot shows the 'Sequence' interface. The 'Sequence' tab is active. The 'Output Range' is set to 'AUTO'. The 'ACV Unit' is 'mV'. The 'Output Mode' is 'ACDC-INT'. The 'ACV' and 'DCV' values are both '+0.0000'. The 'Freq' is '50.0000 Hz'. The 'Off Phase' is checked. The 'Wave' is 'SIN'. The 'Gain' is '1'. The 'Output Off' button is highlighted in red.

Measurement

Operation

ON/OFF

# Measurement Simulate

The screenshot shows the 'Simulate' interface. The 'Simulate' tab is active. The 'Output Range' is set to 'AUTO'. The 'ACV Unit' is 'mV'. The 'Output Mode' is 'ACDC-INT'. The 'ACV' and 'DCV' values are both '+0.0000'. The 'Freq' is '50.0000 Hz'. The 'Off Phase' is checked. The 'Wave' is 'SIN'. The 'Gain' is '1'. The 'Output Off' button is highlighted in red.

Measurement

Operation

ON/OFF

## 7-1-10. Socket Server Function Check

---

**Background** To test the socket server functionality, National Instruments NI-VISA (Measurement and Automation Explorer) can be used. This program is available on the NI website, [www.ni.com/](http://www.ni.com/), via a search for the VISA Run-time Engine page, or “downloads” at the following URL, <http://www.ni.com>

---

**Requirements** Operating System: Windows

---

**Functionality Check** 1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:


*Start>All Programs>NI MAX*




2. From the Configuration panel access;

*My System>Devices and Interfaces>Network Devices*


3. Press *Add New Network Device>Visa TCP/IP Resource...*

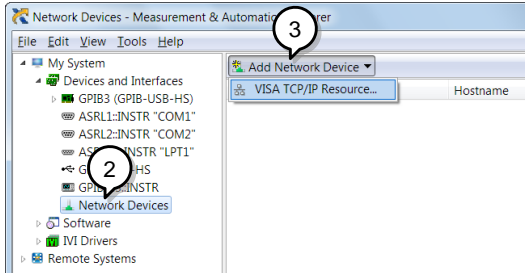


4. Select *Manual Entry of Raw Socket* from the popup window.

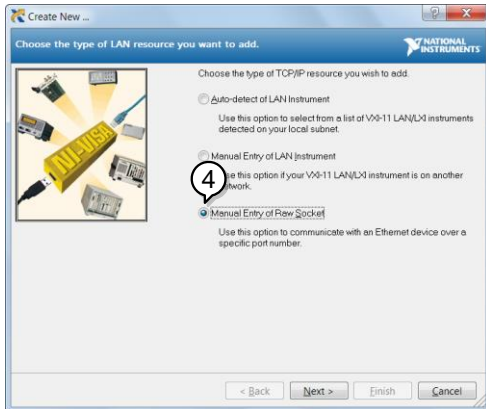

5. Enter the IP address and the port number of the ASR. The port number is fixed at 2268.
6. Double click the Validate button and press *Next*.

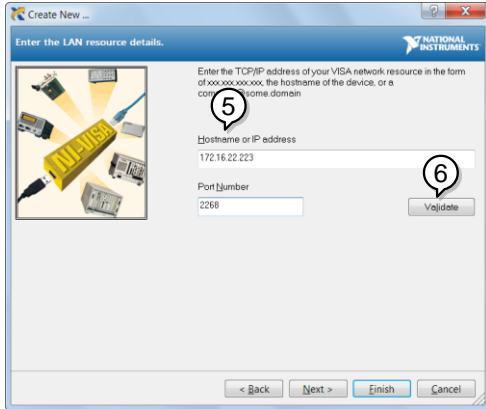


7. Next configure the Alias (name) of the ASR connection. In this example the Alias is: ASR
8. Click finish.

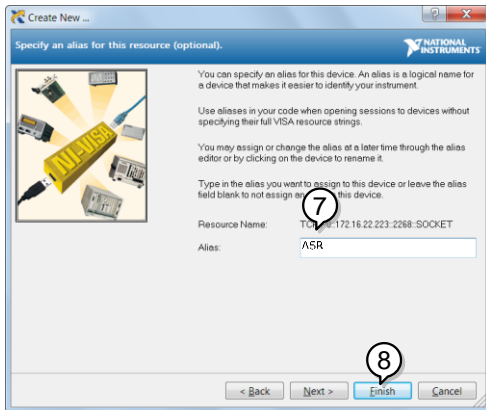

9. The IP address of the power supply will now appear under Network Devices in the configuration panel. Select this icon now.
10. Press *Open VISA Test Panel*.



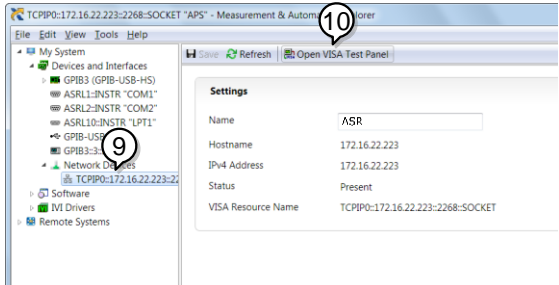

11. Click the *Configuration* Icon. Under the *IO Settings* tab check *Enable Termination Character*. The termination character should be set as *Line Feed -\n*.




12. Click the *Input/Output* icon. Under the *Basic I/O* tab, make sure *\*IDN?\n* is entered in the *Select or Enter Command* drop box.

13. Click *Query*.

The ASR will return the machine identification string into the buffer area:

TEXTIO TECHNOLOGY, ASRXXX-XXX,  
XXXXXXXXXX, XX.XX

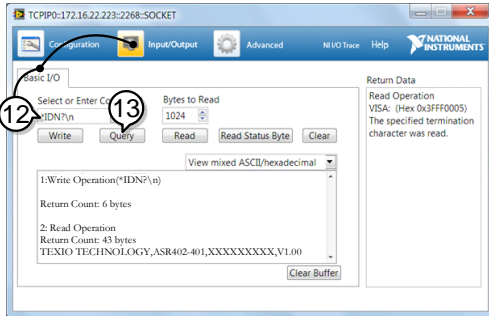

---

Note

For further details, please see the programming manual.

---

## 8. FAQ

---

The accuracy does not match the specification.

---

Make sure the device is powered On for at least 30 minutes, within +18°C~+28°C. This is necessary to stabilize the unit to match the specification.

For AC output, the voltage will be lower than the voltage setting.

---

The slew rate mode setting affects the output of AC voltage. In slope mode, the output voltage drops due to the set waveform and frequency. If you need a more accurate voltage output, set to time mode. See page 117 for details.

Is it proper to combine 2 or 3 units to reach the 1P3W or 3P4W output?

---

Not available. ASR doesn't support 1P3W or 3P4W output function. Only support 1P2W output type.

For more information, contact your local dealer or us.

# 9. APPENDIX

## 9-1. Firmware Update


**Background** The ASR firmware can be upgraded using the USB A port on the front panel. See your local distributor or us for the latest firmware information.



- Ensure the DUT is not connected.
- Ensure the output is off.
- Usable USB flash drive is format type FAT32, up to 32GB.

**Steps**

1. Insert a USB Flash Drive into the USB port on front panel of the ASR.
  - The USB drive should include the texio.sb3 file in a directory name “texio”(USB\texio:).
2. Press the *Menu* key. The Menu setting will appear on the display.
3. Use the scroll wheel to go to item 9, *Special Function* and press *Enter*.

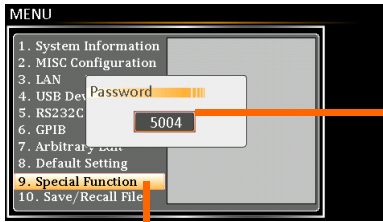

Enter  
Password

Special Function

4. Key in the password when prompted and then press *Enter*.
  - The password is “5004”.
5. Go to Item 1, *Update Firmware* and press *Enter*.

## Update Firmware



Exit

Press *Exit*[F4] to exit from the Update Firmware settings.

6. Wait for the unit to update. Upon completion the unit will automatically reboot.
-

## 9-2. Factory Default Settings

The following default settings are the factory configuration settings for the ASR series. For details on how to return to the factory default settings, see page 33.

AC+DC-INT Mode	ASR202-401	ASR302-401	ASR402-401
Range		100V	
Wave Shape		SIN	
ACV		0.0 Vrms	
DCV		+0.0 Vdc	
FREQ		50.00 Hz	
IRMS	21.00 A	31.50 A	42.00 A
V Limit		+/- 285.0 V	
F Limit Lo		1.00 Hz	
F Limit Hi		999.9 Hz	
IPK Limit	+/- 126.0 A	+/- 189.0 A	+/- 252.0 A
ON Phs		0.0°	
OFF Phs		0.0°	

DC-INT Mode	ASR202-401	ASR302-401	ASR402-401
Range		100V	
DCV		0.0 Vdc	
I	21.00 A	31.50 A	42.00 A
V Limit		+/- 285.0 V	
IPK Limit	+/- 126.0 A	+/- 189.0 A	+/- 252.0 A

AC+DC-EXT Mode	ASR202-401	ASR302-401	ASR402-401
Range		100V	
GAIN		100.0	
IRMS	21.00 A	31.50 A	42.00 A
IPK Limit	+/- 126.0 A	+/- 189.0 A	+/- 252.0 A

AC-EXT Mode	ASR202-401	ASR302-401	ASR402-401
Range		100V	
GAIN		100.0	
IRMS	21.00 A	31.50 A	42.00 A
IPK Limit	+/- 126.0 A	+/- 189.0 A	+/- 252.0 A

AC+DC-ADD Mode	ASR202-401	ASR302-401	ASR402-401
----------------	------------	------------	------------

Range		100V	
Wave Shape		SIN	
ACV		0.0 Vrms	
DCV		+0.0 Vdc	
GAIN		100.0	
FREQ		50.00 Hz	
IRMS	21.00 A	31.50 A	42.00 A
V Limit		+/- 285.0 V	
F Limit Lo		1.00 Hz	
F Limit Hi		999.9 Hz	
IPK Limit	+/- 126.0 A	+/- 189.0 A	+/- 252.0 A
ON Phs		0.0°	
OFF Phs		0.0°	

AC-ADD Mode	ASR202-401	ASR302-401	ASR402-401
-------------	------------	------------	------------

Range		100V	
Wave Shape		SIN	
ACV		0.0 Vrms	
GAIN		100.0	
FREQ		50.00 Hz	
IRMS	21.00 A	31.50 A	42.00 A
V Limit		200.0 Vrms	
F Limit Lo		40.00 Hz	
F Limit Hi		999.9 Hz	
IPK Limit	+/- 126.0 A	+/- 189.0 A	+/- 252.0 A
ON Phs		0.0°	
OFF Phs		0.0°	

AC+DC-SYNC Mode	ASR202-401	ASR302-401	ASR402-401
-----------------	------------	------------	------------

Range		100V	
Wave Shape		SIN	
ACV		0.0 Vrms	
DCV		+0.0 Vdc	
SIG		LINE	
IRMS	21.00 A	31.50 A	42.00 A
V Limit		+/- 285.0 V	
F Limit		999.9 Hz	
IPK Limit	+/- 126.0 A	+/- 189.0 A	+/- 252.0 A
ON Phs		0.0°	
OFF Phs		0.0°	

AC-SYNC Mode	ASR202-401	ASR302-401	ASR402-401
Range		100V	
Wave Shape		SIN	
ACV		0.0 Vrms	
SIG		LINE	
IRMS	21.00 A	31.50 A	42.00 A
V Limit		200.0 Vrms	
F Limit		999.9 Hz	
IPK Limit	+/- 126.0 A	+/- 189.0 A	+/- 252.0 A
ON Phs		0.0°	
OFF Phs		0.0°	

AC-VCA Mode	ASR202-401	ASR302-401	ASR402-401
Range		100V	
Wave Shape		SIN	
GAIN		100.0	
IRMS	21.00 A	31.50 A	42.00 A
F Limit		999.9 Hz	
IPK Limit	+/- 126.0 A	+/- 189.0 A	+/- 252.0 A
ON Phs		0.0°	
OFF Phs		0.0°	

Menu	ASR
T ipeak, hold(msec)	1 ms
IPK CLR	EXEC
Power ON	OFF
Buzzer	ON
Remote Sense	OFF
Slew Rate Mode	Slope
Output Relay	Enable
THD Format	IEC
External Control	OFF
V Unit (TRI, ARB)	rms

LAN	ASR
DHCP	ON

USB Device	ASR
Speed	Full



<b>RS-232C</b>	<b>ASR</b>
Baudrate	9600
Databits	8bits
Parity	None
Stopbits	1bit

<b>GP-IB</b>	<b>ASR</b>
Address	10

<b>Sequence Mode</b>	<b>ASR</b>
Step	0
Time	0.1000 s
ACV	0.0, CT
DCV	0.0, CT
Fset	50.0, CT
Wave	SIN
Jump To	OFF
Jump Cnt	1
Branch 1	OFF
Branch 2	OFF
Term	CONTI
Sync Code	LL
ON Phs	Free
OFF Phs	Free

<b>Simulation Mode</b>	<b>ASR</b>
Step	Initial
Repeat	OFF
Time	0.1000 s
ACV	0.0
Fset	50.00
ON Phs	Free
OFF Phs	Free
Wave	SIN
Code	LL

<b>ARB 1~16</b>	<b>ASR</b>
-----------------	------------

See page 97

### 9-3. Error Messages & Messages

The following error messages or messages may appear on the ASR screen display during varied operations.

Error Messages	Description	Protection type
Over Ipeak+ Current	Positive output current peak value is excessive. Press "Shift + Cancel" to clear this alarm.	Output Off
Over Ipeak- Current	Negative output current peak value is excessive. Press "Shift + Cancel" to clear this alarm.	Output Off
DCAC Power Unit Error	Internal DCAC power unit function error. Press "Shift + Cancel" to clear this alarm. If else continue alarm, contact local distributor.	Output Off
Over Irms Current	Output current RMS value is excessive. Press "Irms" to check allowance set range	Output Off
Power Input Anomaly	The power input voltage is insufficient or turning off main power switch. Check input power before rebooting the unit.	System Lock
Fan Failure	Fan failure. Contact service center.	System Lock
Output Over-Power	Over internal power stage maximum power (110% of rating power), press "Shift + Cancel" to clear this alarm.	Output Off
Output Short	Call attention to output terminal short status	Output Off
Output Overvoltage	Over internal maximum voltage (110% of rating voltage). Press "Shift + Cancel" to clear this alarm.	Output Off
Calibration Data Error	The calibration data is abnormal or out of allowance range. Contact service center.	Output Off

DCDC Power Unit Error	Internal DCDC power unit function error. Press "Shift + Cancel" to clear this alarm. If else continue alarm, contact local distributor.	Output Off
PFC Power Unit Error	Internal PFC power unit function error. Press "Shift + Cancel" to clear this alarm. If else continue alarm, contact local distributor.	Output Off
Sensing Voltage Error	Remote sense connection wire is abnormal or over maximum compensation voltage. Press "Shift + Cancel" to clear this alarm.	Output Off
Startup Anomaly	Abnormal startup procedure. Contact service center.	System Lock
External Sync Frequency Error	The external synchronization signal input frequency is out of the allowance range. (40Hz ~ 999.9Hz)	Output Off
SCPI Error	Communication with the SCPI command error	Display Message Only
Power ON Fail	Power ON Function Fail In Error Mode or Range	
IRMS Limit	The RMS current limiter is activated. Press "Irms" to check allowance set range	
IPK Limit	The peak current limiter is activated. Press " Shift + Irms" to check allowance set range	
Remote Sensing Voltage Out of Range	The Sensing voltage limiter is activated.	Display Message Only
System Error (#)	System Error (1~15). Contact service center.	Display Message Only
Power Limit	The Power limiter is activated	
Web Data Error	This message will only be shown when texio update file is used and firmware is selected gw.	

Preset Data Error	Preset data error (data beyond range or data lost)	Display Message Only
ARB Data Error	ARB data error (data lost)	Display Message Only



The system would be locked or output off automatically before the error state is cleared.

Normal Messages	Description	Protection type
Setting Voltage Limited	Setting voltage be limited, press "Shift + V" to check allowance set range	Display Message Only
Setting Frequency Limited	Setting frequency be limited, press "Shift + F" to check allowance set range	Display Message Only
Keys Locked	All of keys are locked, except output key. Long push "Lock" to disable Keys Locked.	Display Message Only
Keys Unlocked	All of keys are unlocked	Display Message Only
Screen Saved to USB:/GWDIMC###.bmp	Screenshot be saved to USB memory successful	Display Message Only
Hardcopy Fail! (Too Many Files in USB)	Hardcopy Fail !, Over 1000 files in USB	Display Message Only
USB Memory Unconnected	Could not detect USB memory	Display Message Only
Preset Mode	Operation at preset mode	Display Message Only
Exit Preset Mode	Exit preset mode	Display Message Only

Invalid with Remote Control	All of keys are locked, except Output and Shift and Local Key. Press "Shift + Preset" to disable Remote Control.	Display Message Only
Invalid with Remote Lock Control	All of keys including Output and Local Keys are locked.	Display Message Only
Invalid in This Meter Frozen	Invalid Operation In This Meter Frozen. Press "F4" to disable Meter Frozen	Display Message Only
Invalid in This Page	Invalid Operation In This Page. Valid main and simple page for preset mode.	Display Message Only
Recalled From M#	Recalled Preset From M0 ~ M9	Display Message Only
Saved To M#	Saved Preset To M0 ~ M9	Display Message Only
Resetting...	Ready For Recall Factory Default	Display Message Only
Failed Factory Default	Recall Factory Default Failed	Display Message Only
Error Password	Input Error Password	Display Message Only
No File ([Filename]) in [directory]	Not find specific file in USB specific directory	Display Message Only
Saved to DEF1	Saved Setting to DEF1	Display Message Only
Saved to DEF2	Saved Setting to DEF2	Display Message Only
Meter Frozen	Operation at Meter Frozen mode, all measure value will stop update.	Display Message Only
Only AC Mode And 50/60Hz Active	Harmonic Page Limit Message	Display Message Only
[Filename] Saved Success	Save file to USB success message. [Filename] ex Preset0.Set or SEQ0.SEQ or SIM0.SIM or ARB1.ARB	Display Message Only
[Filename] Save Fail	Save file to USB fail message	Display Message Only

[Filename] Recalled Success	Recalled file success message	Display Message Only
[Filename] Recall Fail (No File in [directory])	Recall file fail message (not find specific file in USB specific directory)	Display Message Only
[Filename] Recall Fail (Model ([Model]) Error)	Recall file fail message. (Preset, Seq and Sim files could Not be recalled among varied models, e.g., file of ASR-3200 can Not be recalled in ASR-3300 or ASR-3400.)	Display Message Only
[Filename] Recall Fail (File Format Error)	Recall file fail message (file format error)	Display Message Only
Preset M# Deleted	Preset M0~M9 Deleted	Display Message Only
ARB# Deleted	ARB1~ARB16 Deleted	Display Message Only
USB Memory Connected	Detect USB Memory connected	Display Message Only
USB Memory Access Error	USB flash disk is Not FAT32 format or read abnormal	
Valid Only AC-INT, DC-INT and AC-Sync Mode	Remote Sense Setting Limit Message	Display Message Only
Valid Only 100V and 200V Range	Remote Sense Setting Limit Message	Display Message Only
Valid Only SIN Wave Shape	Remote Sense Setting Limit Message	Display Message Only
Valid Only Time Slew Rate Mode	Remote Sense Setting Limit Message	Display Message Only
USB File Write Error!	Can Not Save File to USB	Display Message Only
Invalid in This Output Mode	This mode not support SEQ or SIM Valid Only AC+DC-INT, AC-INT and DC-INT Mode for SEQ Valid Only AC+DC-INT Mode for SIM	Display Message Only

Invalid For Auto Range	Auto range does Not allow SEQ/SIM, change the output range	Display Message Only
Invalid with Output OFF, Turn ON the Output First	The output off state does Not allow the execution. Turn on the output first	Display Message Only
Invalid with Output ON, Turn OFF the Output First	The output on state does Not allow the execution. Turn off the output first	Display Message Only
Invalid in This Sequence	Invalid Operation In This Sequence	Display Message Only
SEQ# Deleted	SEQ0~SEQ9 Deleted	Display Message Only
SIM# Deleted	SIM0~SIM9 Deleted	Display Message Only
Cleared SEQ#	Cleared SEQ0~SEQ9	Display Message Only
Cleared SIM#	Cleared SIM0~SIM9	Display Message Only
Recalled from SEQ#	%s is File Name , ex SEQ0~SEQ9 or SIM0~SIM9	Display Message Only
Recalled from SIM#	Recalled from SIM0 ~ SIM9	Display Message Only
Recall Fail!	SEQ0 ~ SEQ9 or SIM0 ~ SIM9 Recall Fail!	Display Message Only
Saved to SEQ#	Saved to SEQ0 ~ SEQ9	Display Message Only
Saved to SIM#	Saved to SIM0 ~ SIM9	Display Message Only
Save Fail!	SEQ0 ~ SEQ9 or SIM0 ~ SIM9 save Fail!	Display Message Only
Sequence preparation...	Sequence preparation, please wait some time	Display Message Only
Sequence is ready.	Sequence is ready.	Display Message Only
Simulation preparation...	Simulation preparation, please wait some time	Display Message Only
Simulation is ready.	Simulation is ready.	Display Message Only

Save All Data	Ready to save all data (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~16)	Display Message Only
All Data Saved Success	All data are saved successfully (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~16)	Display Message Only
Recall All Data	Ready to recall all data (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~16)	Display Message Only
All Data Recall Success	All data are recalled successfully (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~16)	Display Message Only
Delete All Data	Ready to delete all data (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~16)	Display Message Only
All Data Deleted	All data are deleted successfully (Preset0~9 + SEQ0~9 + SIM0~9 + ARB1~16)	Display Message Only

Communication Interface Messages	Description	Protection type
Rear USB Port Connected To PC	Rear USB port connected to PC	Display Message Only
Rear USB Port Disconnected From PC	Rear USB port disconnected from PC	Display Message Only



## 9-4. Specifications

The specifications apply when the ASR is powered on for at least 30 minutes.

### 9-4-1. Electrical specifications

Model	ASR202-401	ASR302-401	ASR402-401	
<b>Input ratings (AC rms)</b>				
Nominal input voltage	200 Vac to 240 Vac $\pm 10\%$			
Input voltage range	180 Vac to 264 Vac			
Phase	Single phase, Two-wire			
Nominal input Frequency	50 Hz to 60 Hz			
Input frequency range	47 Hz to 63 Hz			
Max. power consumption	2500 VA or less	3750 VA or less	5000 VA or less	
Power factor <sup>*1</sup>	200Vac	0.95 (typ.)		
Max. input current	200Vac	15 A	22.5	30 A

\*1 For an output voltage of 100 V/200 V (100V / 200V range), maximum current, and a load power factor of 1.

Model		ASR202-401	ASR302-401	ASR402-401
<b>AC mode output ratings (AC rms)</b>				
Voltage	Setting Range <sup>*1</sup>	0.0 V to 200.0 V / 0.0 V to 400.0 V		
	Setting Resolution	0.1 V		
	Accuracy <sup>*2</sup>	$\pm(1\% \text{ of set} + 1 \text{ V} / 2 \text{ V})$		
Output phase	Single phase, Two-wire			
Maximum current <sup>*3</sup>	100 V	20 A	30 A	40 A
	200 V	10 A	15 A	20 A
Maximum peak current <sup>*4</sup>	100 V	120 A	180 A	240 A
	200 V	60 A	90 A	120 A
Load power factor	0 to 1 (leading phase or lagging phase)			
Power capacity	2000 VA		3000 VA	4000 VA
Frequency	Setting range	AC Mode: 40.00 Hz to 999.9 Hz, AC+DC Mode: 1.00 Hz to 999.9 Hz		
	Setting resolution	0.01 Hz (1.00 to 99.99 Hz), 0.1 Hz (100.0 to 999.9 Hz)		
	Accuracy	0.02% of set (23 °C $\pm$ 5 °C)		
	Stability <sup>*5</sup>	$\pm 0.005\%$		
Output on/off phase	0° to 359° variable (setting resolution 1°)			
DC offset <sup>*6</sup>	Within $\pm 20$ mV (TYP)			

\*1 100 V / 200 V range

\*2 For an output voltage of 20 V to 200 V / 40 V to 400 V, an output frequency of 45 Hz to 65 Hz, no load, and 23°C  $\pm$  5°C

\*3 For an output voltage of 1 V to 100 V / 2 V to 200 V. Limited by the power capacity when the output voltage is 100 V to 200 V / 200 V to 400 V. If there is the DC superimposition, the current of AC+DC mode satisfies the maximum current. In the case of lower than 40 Hz, and the power rating temperature, the maximum current will be decrease.

\*4 With respect to the capacitor-input rectifying load. Limited by the maximum current.

\*5 For 45 Hz to 65 Hz, the rated output voltage, no load and the resistance load for the maximum current, and the operating temperature.

\*6 In the case of the AC mode and 23°C  $\pm$  5°C.

Model	ASR-3200	ASR-3300	ASR-3400
-------	----------	----------	----------

#### Output rating for DC mode

Voltage	Setting Range <sup>*1</sup>	-285 V to +285 V / -570 V to +570 V		
	Setting	0.1 V		
	Resolution			
	Accuracy <sup>*2</sup>	±(1 % of set + 1 V / 2 V)		
Maximum current <sup>*3</sup>	100 V	20 A	30 A	40 A
	200 V	10 A	15 A	20 A
Maximum peak current <sup>*4</sup>	100 V	120 A	180 A	240 A
	200 V	60 A	90 A	120 A
Power capacity		2000 W	3000 W	4000 W

<sup>\*1</sup> 100 V / 200 V range

<sup>\*2</sup> For an output voltage of -285 V to -28.5 V, +28.5 V to +285 V / -570 V to -57 V, +57 V to +570 V, no load, and 23°C ± 5°C

<sup>\*3</sup> For an output voltage of 1.4 V to 100 V / 2.8 V to 200 V. Limited by the power capacity when the output voltage is 100 V to 285 V / 200 V to 570 V.

<sup>\*4</sup> Limited by the maximum current.

Model	ASR
-------	-----

#### Output voltage stability

Line regulation <sup>*1</sup>	±0.2% or less
Load regulation <sup>*2</sup>	0.5% or less (0 to 100%, via output terminal)
Ripple noise <sup>*3</sup>	1 Vrms / 2 Vrms (TYP)

<sup>\*1</sup> Power source input voltage is 200 V, 220 V, or 240 V, no load, rated output.

<sup>\*2</sup> For an output voltage of 100 V to 200 V / 200 V to 400 V, a load power factor of 1, stepwise change from an output current of 0 A to maximum current (or its reverse), using the output terminal on the rear panel.

<sup>\*3</sup> For 5 Hz to 1 MHz components in DC mode using the output terminal on the rear panel.

Model	ASR
-------	-----

#### Output voltage waveform distortion ratio, Output voltage response time, Efficiency

Total harmonic distortion (THD) <sup>*1</sup>	<0.2 % @50/60 Hz
	<0.3 % @<500 Hz
	<0.5 % @500.1 Hz to 999.9 Hz
Output voltage response time <sup>*2</sup>	100 us (TYP)
Efficiency <sup>*3</sup>	80 % or more

- <sup>\*1</sup> At an output voltage of 50 V to 200 V / 100 V to 400 V, a load power factor of 1, and in AC mode.
- <sup>\*2</sup> For an output voltage of 100 V / 200 V, a load power factor of 1, with respect to stepwise change from an output current of 0 A to the maximum current (or its reverse).
- <sup>\*3</sup> For AC mode, at an output voltage of 100 V / 200 V, maximum current, and load power factor of 1.

Model ASR202-401 ASR302-401 ASR402-401

Measured value display

Note: All accuracy of the measurement function is indicated for 23 °C±5 °C.

Voltage	RMS, AVG value <sup>*1</sup>	Resolution	0.1 V		
		Accuracy <sup>*2</sup>	For 45 Hz to 65 Hz and DC: ±(0.5 % of reading + 0.5 V / 1 V) For all other frequencies: ±(0.7 % of reading + 1 V / 2 V)		
	PEAK value	Resolution	0.1 V		
		Accuracy	For 45 Hz to 65 Hz and DC: ±( 2 % of reading  + 1 V / 2 V)		
Current	RMS, AVG value	Resolution	0.01 A		
		Accuracy <sup>*3</sup>	For 45 Hz to 65 Hz and DC: ±(0.5 % of reading+0.1 A/0.05 A) For all other frequencies: ±(0.7 % of reading+0.2 A/0.1 A)	For 45 Hz to 65 Hz and DC: ±(0.5 % of reading+0.15 A/0.08 A) For all other frequencies: ±(0.7 % of reading+0.3 A/0.15 A)	For 45 Hz to 65 Hz and DC: ±(0.5 % of reading+0.2 A/0.1 A) For all other frequencies: ±(0.7 % of reading+0.4 A/0.2 A)
	PEAK value	Resolution	0.1 A		
		Accuracy <sup>*4</sup>	For 45 Hz to 65 Hz and DC: ±( 2 % of reading  + 0.5 A/0.25 A)	For 45 Hz to 65 Hz and DC: ±( 2 % of reading  + 0.8 A/0.4 A)	For 45 Hz to 65 Hz and DC: ±( 2 % of reading  + 1 A/0.5 A)
Power	Active (W)	Resolution	1 W		
		Accuracy <sup>*5</sup>	±(2 % of reading +2 W)	±(2 % of reading +3 W)	±(2 % of reading +4 W)
	Apparent	Resolution	1 VA		

(VA)	Accuracy* <sup>5*</sup> 6	$\pm(2\%$ of reading +2 VA)	$\pm(2\%$ of reading +3 VA)	$\pm(2\%$ of reading +4 VA)
Reactive (VAR)	Resolution	1 VAR		
	Accuracy* <sup>5*</sup> 7	$\pm(2\%$ of reading +2 VAR)	$\pm(2\%$ of reading +3 VAR)	$\pm(2\%$ of reading +4 VAR)
Load power factor	Range	0.000 to 1.000		
	Resolution	0.001		
Load crest factor	Range	0.00 to 50.00		
	Resolution	0.01		
Harmonic voltage Effective value (rms)	Range	Up to 100th order of the fundamental wave		
	Full Scale	200 V / 400 V, 100%		
Percent (%) (AC-INT and 50/60 Hz only)	Resolution	0.1 V, 0.01%		
	Accuracy* <sup>8</sup>	Up to 20th $\pm(0.2\%$ of reading + 0.5 V / 1 V) 20th to 100th $\pm(0.3\%$ of reading + 0.5 V / 1 V)		
Harmonic current Effective value (rms)	Range	Up to 100th order of the fundamental wave		
	Full Scale	20 A / 10 A,	30 A / 15 A,	40 A / 20 A,
Percent (%) (AC-INT and 50/60 Hz only)	Resolution	100%	100%	100%
	Resolution	0.01 A, 0.1%		
	Accuracy* <sup>3</sup>	Up to 20th $\pm(1\%$ of reading+0.4 A/0.2 A)	Up to 20th $\pm(1\%$ of reading+0.6 A/0.3 A)	Up to 20th $\pm(1\%$ of reading+0.8 A/0.4 A)
		20th to 100th $\pm(1.5\%$ of reading+0.4 A/0.2 A)	20th to 100th $\pm(1.5\%$ of reading+0.6 A/0.3 A)	20th to 100th $\pm(1.5\%$ of reading+0.8 A/0.4 A)

\*1 The voltage display is set to RMS in AC/AC+DC mode and AVG in DC mode.

\*2 AC mode: For an output voltage of 20 V to 200 V / 40 V to 400 V and 23 °C  $\pm$  5 °C. DC mode: For an output voltage of 28.5 V to 285 V / 57 V to 570 V and 23 °C  $\pm$  5 °C.

\*3 An output current in the range of 5 % to 100 % of the maximum current, and 23 °C  $\pm$  5 °C.

\*4 An output current in the range of 5 % to 100 % of the maximum peak current in AC mode, an output current in the range of 5 % to 100 % of the maximum instantaneous current in DC mode, and 23 °C  $\pm$  5 °C. The accuracy of the peak value is for a waveform of DC or sine wave

- \*5 For an output voltage of 50 V or greater, an output current in the range of 10 % to 100 % of the maximum current, DC or an output frequency of 45 Hz to 65 Hz, and 23 °C ± 5 °C.
- \*6 The apparent and reactive powers are not displayed in the DC mode.
- \*7 The reactive power is for the load with the power factor 0.5 or lower.
- \*8 An output voltage in the range of 20 V to 200 V / 40 V to 400 V and 23 °C ± 5 °C.

## 9-4-2. General Specifications

Interface	Standard USB	Type A: Host, Type B: Slave, Speed: 1.1/2.0, USB-CDC, USB-TMC
	LAN	MAC Address, DNS IP Address, User Password, Gateway IP Address, Instrument IP Address, Subnet Mask
	RS-232C	Complies with the EIA-RS-232 specifications
	EXT Control	External Signal Input External Control I/O
	GPIOB	SCPI-1993, IEEE 488.2 compliant interface
Insulation resistance	Between input and chassis, output and chassis, input and output	500 Vdc, 30 MΩ or more
Withstand voltage	Between input and chassis, output and chassis, input and output	1500 Vac, 1 minute
EMC	2014/30/EU	EN 61326-1 EN 61326-2-1 EN 61000-3-2 EN 61000-3-3 EN 61000-3-11 EN 61000-3-12 EN 61000-4-2/-4-3/-4-4/-4-5/-4-6/-4-8/-4-11/-4-34 EN 55011 (Class A) EN 55032
Safety	2014/35/EU	EN 61010-1
Environment	Operating environment	Indoor use, Overvoltage Category II
	Operating temperature range	0 °C to 40 °C

Storage temperature range	-10 °C to 70 °C	
Operating humidity range	20 % RH to 80 % RH (no condensation)	
Storage humidity range	90 % RH or less (no condensation)	
Altitude	Up to 2000 m	
Transportation Integrity	ISTA 2A Test Procedure	
Dimensions (mm)	430(W)×176(H)×550(D) (not including protrusions)	
Weight	Approx. 25 kg	
Accessories	Safety information	1 copy
	CO-ROM	1 disc
	Input/Ouput Cover	1 set
	AC input cable	1 set
	EIA Rack Mount	1 set
	USB Cable	1 piece

### 9-4-3. Others

Protections	UVP,OCP, OTP, OPP, FAN Fail
Display	TFT-LCD, 4.3 inch
Memory Function	Store and recall settings, Basic settings: 10Set
Arbitrary Wave	16 Set(nonvolatile) 4096 words

- Product specifications are subject to change without notice.
- The spec aforementioned applies to when slew rate mode is the Time mode.

#### 9-4-4. External Signal Input (AC+DC-EXT, AC-EXT Mode)

	Specification	Factory Default
Gain setting range	100 V range: 0.0 to 285.0 times	100
	200 V range: 0.0 to 570.0 times	200
Input terminal	BNC connector	
Input impedance	1 M $\Omega$	
Input voltage range	$\pm 2.5$ V (A/D resolution 12 bit)	
Nondestructive maximum input voltage	$\pm 10$ V	
Gain resolution	0.1 times	
Accuracy	$\pm 5$ % (DC, or 45Hz ~ 65 Hz, gain is at initial value, with rate voltage output, no load)	

EXT: Output voltage (V) = External signal input (V) x Gain (V/V)

#### 9-4-5. External Signal Input (AC+DC-ADD, AC-ADD Mode)

	Specification	Factory Default
Gain setting range	100 V range: 0.0 to 285.0 times	100
	200 V range: 0.0 to 570.0 times	200
Input terminal	BNC connector	
Input impedance	1 M $\Omega$	
Input voltage range	$\pm 2.5$ V (A/D resolution 12 bit)	
Nondestructive maximum input voltage	$\pm 10$ V	
Input frequency range	DC to 999.9 Hz (sine wave) DC to 100 Hz (other than sine wave)	
Gain resolution	0.1 times	
Accuracy	$\pm 5$ % (DC, or 45Hz ~ 65 Hz, gain is at initial value, with rate voltage output, no load)	

ADD: Output voltage (V) = External signal input (V) x Gain (V/V) + Internal signal source setting (V)




## 9-4-6. External Synchronous Signal or Line (AC+DC-SYNC, AC-SYNC)

	Specification	Factory Default
Synchronization signal source	External synchronization signal (EXT) or Power input (LINE)	LINE
Synchronization frequency range	40.00 Hz to 999.9 Hz	
Input terminal	BNC connector	
Input impedance	1 M $\Omega$	
Threshold of input voltage	TTL level	
Minimum pulse width	500 $\mu$ s	
Nondestructive maximum input voltage	$\pm 10$ V	
Resolution	0.1 Hz	
Accuracy	$\pm 0.2$ Hz	

## 9-5. ASR Dimensions

---

Scale = mm

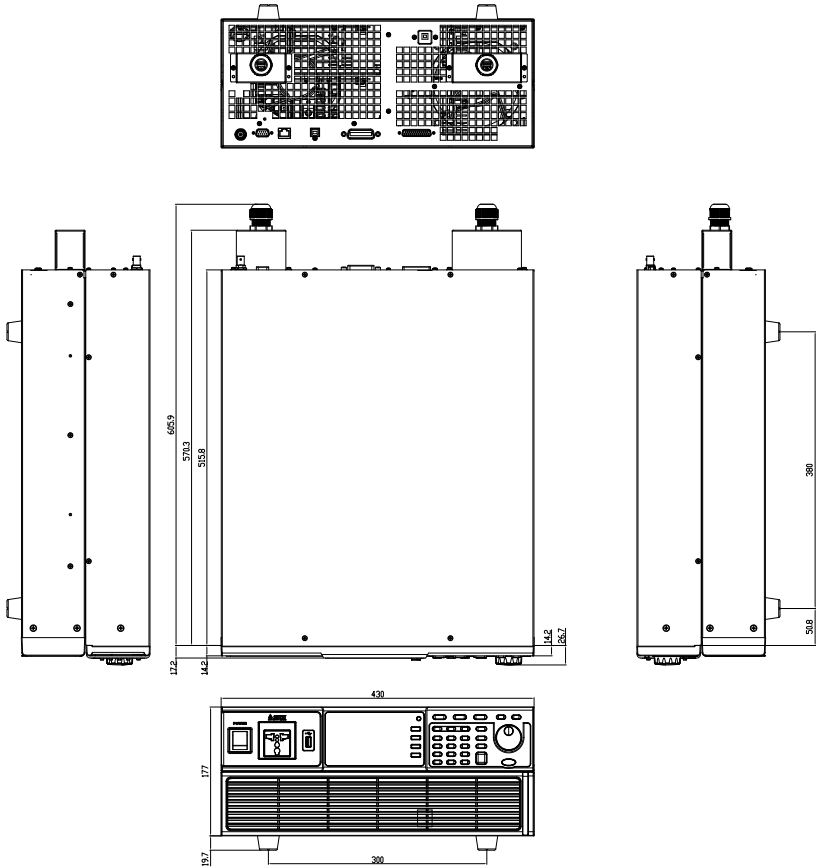



**TEXIO TECHNOLOGY CORPORATION**

7F Towa Fudosan Shin Yokohama Bldg.

2-18-13, Shin Yokohama, Kohoku-ku, Yokohama, Kanagawa, 222-0033 Japan

<https://www.texio.co.jp/>

---